

Fantastic Products 4U

Multi-Region DVD Codes

*Thank You for buying this E-Book from Fantastic Products 4u
Please, don't forget to leave a feedback ;o)*

*If you can't find your dvd player on this list, visit the bonus link
where you can have updated information..*

Bonus: <http://www.videohelp.com/dvdhacks>

*Don't forget that many dvd players from the same brand have the same firmware,
so try codes from others models in the same brand can possibly works!*

A

Aboss AB-6863

*Power on the player
Press Setup on remote
Scroll down to 'Preferences' but do not select
Press the left key five (5) times
'Version' will appear in the menu
Select Version
Set region code to 0 (multi region)
Exit setup
Power off player from unit (not from remote) for 20 seconds*

*To enable VCD playback (must enable multi region
above also):*

*Power on player.
Press setup on remote.
Select 'Passwords'.
Press the left key five (5) times.
Should say 'VCD enabled' at bottom of screen
Power off player from unit (not from remote) for 20 seconds.*

Acoustic Solutions DVD321

Multi Region & Macrovision:

Open the tray

Press set up

Press the next key

Press the prev key

Press the next key

Press the prev key

Ver 255 = region free

Ver 1 = region 1

Ver 2 = region 2

Press left and right to change

Press down key once

Ver 3001 = parental control enable

Ver 3000 = parental control disable

Press left or right key to change

Press down twice:

Ver 4001 = macrovision enable

Ver 4000 = macrovision disable

Press left or right key to change

Press down key three times

Ver 5001 = vcd and svcd disable

Ver 5000 = vcd and svcd enable

Change to ver 5000 to play vcds or svcds

Acoustic Solutions DVD-421

Open disc tray

Press 'Set-up' on the remote

Then press 'Next, Prev, Next, Prev.'

Enter region code set-up: Ver 255 = Region free Ver 1 = Region 1 Ver 2 = Region 2

Press left (<) or right (>) key

Press Down key twice Ver 4001 = macrovision enable Ver 4000 = macrovision disable

Press left (<) or right (>) key.

Acoustic Solutions DVD150AS,

Acoustic Solutions DVD451,

Acoustic Solutions DVD651

(Same as above – 421)

Acoustic Solutions DVD-521

Press the Setup button on the Remote Control

Press Next

Press Pause \ Setup

Press Prev

Press Next

You should now be in a secret menu where you can change Region 1-6, or All for Region free.

Acoustic Solutions DVD-551

Press the Setup button on the Remote Control

Press Next

Press Pause \ Setup

Press Prev

Press Next

You should now be in a secret menu where you can change Region 1-6, or All for Region free

AEG M-2002

Power player on

Next steps on remote control

Open the tray - OPEN/CLOSE

Press 33080

Press PLAY

AFK DVD-100

Press the setup button

Input 1369

Press left button in the middle 3x

Press the right button in the middle 1x

Display will appear a new collum "version" at the bottom

Move the cursor to choose the version and change the code number by pressing up and down

Code number is "0" for region free.

AFK DVD-101

(Same as above – 100)

AFK DVD-102.1

Press the "SET UP" button

Press "SCROLL RIGHT" button until "Preference Page" "

Press 1 3 7 9

"Region Code Column" is displayed

Press "SCROLL UP" or "SCROLL DOWN" button to choose desired region

"0" is all code free. Press the "SET UP" button.

Afreedy ADV-2360

The procedure must be done without a disc in the player, and you must use the Remote Control!

Turn on the DVD Player and open the Tray

Press Setup on the Remote Control and enter the setup menu

Inside the setup menu, press in sequence, the following buttons: ZOOM, PREV, NEXT. Then on the top of the screen you will see "XXIXX"

With the arrows on the Remote control, press left or right to change until the desired region number appears. After the desired region is selected, press Setup to go back to the main screen

Afreedy LD-2020

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

On the next page you will see a hidden setup page, here you should be able to change your DVD Player to any Region.

Afreedy LD-2060

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still / Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

Afreedy PDV-2000

The procedure must be done without a disc in the player, and you must use the remote control:

Turn on the DVD Player

Press SETUP on the Remote Control

In the Setup menu, press in sequence the following buttons: SUB-T, ZOOM, PREV, NEXT. Then on the top of the screen you will see "XXIXX"

With the arrows on the Remote Control, press left or right to change until the desired region number appears. After you have selected the Region, press SETUP to go back to the

Airis L103C

Hit <Setup>

Press 1 3 7 9

A menu comes up showing the firmware version

From this menu you can select the region with the numeric keypad

0=region free, 1-6 selects that region.

Aiwa HT-DV90

Press the DVD/CD button on the remote control

Press the Open button on the remote control to open the drive tray

Using the remote control, press the buttons C, 2, 5, 8, 0 and C

The word TESTMODE should appear on the DVD display, and the onscreen display should indicate the current region setting

Press the Up Arrow on your remote control until 14 02 is shown on the onscreen display.

Note: The 02 indicates the current region and may be different depending on what your player is currently set to

Using the remote control, press the buttons 1 and then 4, then enter 0 and 0 for multi-region, or 0 and 1 for region 1, or 0 and 2 for region 2, and so on

Press the Enter button on the remote control

Press the Return button on the remote control

The word TESTMODE should appear on the DVD display

Press the C button on your remote control

A message should be displayed stating EEP CLR followed by EEP ERR

Place your DVD in the drive tray

Press the Return button on the remote control.

Aiwa XD-DV170

Plug the power into the unit but keep it turned off.

Press and hold "MENU" button on unit (not on the remote), do the same with "TOP MENU" (now you have two buttons pressed) and finally do so with "POWER" (you have to follow the sequence keeping pressed all previous keys) Once you have "MENU" "TOP MENU" and "POWER" buttons, hold them for at least 3 seconds and "FACTORY" should appear on the display

Turn on the unit and it should now Multi Region

Aiwa XD-DV480

Code 1

Power on player with no disc inserted and wait for "No Disc" message on screen. Using the remote

Press PAUSE and then Press the numbers 314159 in order. Press the number of the region you desire.

Press PAUSE. Power off the player for a few seconds and power back up and insert your DVD disc!

Code 2

Same as above, but put 3412292 as the code.

Code 3

Same as above, but put 8926 as the code.

Code 4

Same as above, but put 342292 as the code.

Aiwa XR-DV525

Unplug the XR-DV525 from the electrical outlet

Press the DVD/CD button while plugging the unit

*** Do not let go of the DVD/CD button ***

While holding the DVD/CD button

Hold the FastForward (>>)Button

The Screen will go blank and the display will show FACTORY.

Aiwa XD-DW1

Turn on player

Insert any disc

Open the lid, and take out the disc and close the lid

Immediately press "Stop", wait a few seconds

Then press 8, 7, 2, 0 and then >> on Remote Control

The player should be region free now

Aiwa XD-DW5

Turn on player

Insert any disc

Open the lid, and take out the disc and close the lid

Immediately press "Stop", wait a few seconds

Then press 8, 7, 2, 0 and then >> on Remote Control

The player should be region free now

Aiwa XD-DW7

Turn on player

Insert any disc

Open the lid, and take out the disc and close the lid

Immediately press "Stop", wait a few seconds

Then press 8, 7, 2, 0 and then >> on Remote Control

The player should be region free now

Aiwa XD-DV370

*Power on player with no disc inserted and wait for "No Disc" message on screen
Using the remote, press PAUSE
Press the numbers 314159 in order.
Player should now show "COdE - -"
Press the number of the region you desire (0 = any region, 1 = US & Canada, etc.)
Press PAUSE
Power off the player for a few seconds
Power back on and insert your DVD disc.*

Aiwa XR-DV370KN

*Press the Pause button on your Remote Control
Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9
Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control
Power off your player and wait a few seconds
Power on your player*

Akai ADV-1120, ADV-1250, ADV-8175

*Turn on the player
Open the tray
Type in 3, 3, 0, 8
There is 4 X's
Type in the region number (0 is region free)
Close the draw
Turn of the Player*

Akai DV-P4410

*Power On Player
Open DVD Tray
Type 7739 on the Remote
Type 0 on the Remote.*

Akai DV-P4420S

*Power on player
Open DVD tray
Type 7739 on the remote, you'll see x's on your screen
Do this fast as it will disappear quickly
Type 0 on the remote.*

Akai DV-PX7000

*Open the tray
Press 1 0 3 0 0 in the remote
You shall see a 0 for a brief moment on the TV
This means it is now region 0, i.e. region free
Shutdown the DVD player.*

Akai ADV-8000

*Turn the player on and ensure there is no disk in the player
On the Remote Control key in 8, 9, 2, 6 plus the Region number
For Region free 8, 9, 2, 6 followed by 0*

Akai ADV-9000

*Hold down play
Power on and press and hold play
Press 3,4,7 and then use fast forward to select region.*

Akai DHT-300

*Eject DVD disc from the unit.close w/no disc
In status of No Disc, press stop button on the remote
And press 1, 9, 9, 9 numeric buttons on the remote
Then menu shows up including region code
Move the cursor to Region code and press enter
Then set the region code to "free" by using arrow up/down key on the remote and press enter again.
Press setup button on the remote and the menu screen goes away.*

Akai DV-P1000

*Press the On/Off button on the player to turn it off.
Press and hold the buttons Eject and A-B together, and then press the On/Off button on the player to turn it back on.
When the text A:00 D:12 appears on the units display, release the Eject and A-B buttons.
By pressing the Play button to increase, and the Stop button to decrease, change the value of A until it reads A:05.
By pressing the Skip-Forward button to increase, and the Skip-Backward button to decrease, change the value of D until it reads D:00 for region free, D:01 for Region 1 or D:02 for Region 2.
Press the On/Off button on the player to turn it off and on*

Akai DV-P2000

*Press the On/Off button on the player to turn it off.
Press and hold the buttons Fast Forward and Stop together with the black button located on the right hand underside of the machine, and then press the On/Off button on the player to turn it back on.*

When the Akai logo appears, release the Fast Forward and Stop buttons but keep holding the black button on the underside of the player.

A list of numbers will appear in columns. Press the Enter button once on your remote control, the second column of numbers should now be selected.

Press the Cursor Right button on your remote control to select the second number. Change this to 00 for region free, 01 for Region 1 and 02 for Region 2.

Press the Enter button once on your remote control to confirm the region change.

Press the On/Off button on the player to turn it off, then release the black button on the underside of the player.

Akai DV-P2500

Open DVD tray

Press 8926 then 0 for multi-region

Press play.

Akai DV-P2540

Turn the player on

When the Akai logo appears, use the remote control and press Open/Close

Keep the tray open and key in the following on the remote control: 3, 3, 0, 8

The TV should display XXXX in the top left hand corner

Type in the value of 00 for region free or 01 for region 1 etc

Press Open/Close on the remote control

Turn the player off and back on again

Akai DV-P3410

Open DVD-tray

Press 7 7 7 7 on the remote-control

Menu option "Reg.code" is shown

Accept by pressing "SELECT"

Select the wanted reg.code (1-6, or 9 for all) on the remote-control

Push "PLAY" to store.

Akai DV-P3470

Power on the player

Press the setup button on your remote

Enter "49540" with your remote (get close to the IR-sensor on your player, to be sure it registers your input)

You will get an extra menu option

Scroll down and enter the version menu

Use < & > to scroll through the regions

If you want it region-free, set it to "0"

You can also make this player play VCD's - scroll down and enable.

Akai DV-P3570

Press "ON/OFF" Button

Press "OPEN/CLOSE" Button

Press "SETUP" on Remote

Key in Password "49540" on Remote

Go into "VERSION" at Setup Menu

Change the Region Numbers

0 = All Regions

Akai DVD-200BL

Press the Open/Close button on your remote control

Press the Setup button on your remote control

Press the buttons 1, 3, 6 and 9, in order, one at a time, on your remote control

Press the Left button on your remote control three times, in succession

Press the Right button on your remote control

You should now be in a setup menu

Select the Version option from the menu, then select the Region option.

You can now change the region to 1 for region 1, 2 for region 2, and so on, or 0 for multi-region playback

Akai DVD-3850S

Push the "open" button on the remote

Push the number button " 8561"

Use the direction button to choose the region code you want.

Akai DVPS-760

Open disc tray

Push "Setup" on remote control

Push "91010"

("9" is the region code for all regions)

Push "Step," "Shuffle," and then "Next"

Close the disc tray.

Akai DVR-2100SS

*Power on the player and open the tray
Press 3,8,3 and 8 on the remote control
A menu will then appear at the top of the screen
Press enter until 9 is displayed
Press 1 to clear the menu and it is region free*

Akai DVR-3100SS & DVR-3300SS

*Open disk slot
Type 81328
Press Enter until desired region (9 for all)
Press Stop to store*

*(Above code also works on **Dantax DVS-2500**)*

Akai DV-P4000

*Switch the power OFF, press the DIMMER SWITCH and BACK SKIP buttons at the same time.
STILL holding the keys down, power the machine ON. Four lines will appear in the front display.
Using the remote press (1999) using the numeric keys. The display will change to (A-0000 D-04)
which is region 3. Set the region by using the following region input. On remote display to change to-
Region 1 code 00 (A-0000 D-00)
Region 2 code 01 (A-0000 D-01)
Region 3 code 04 (A-0000 D-04)
Region 4 code 08 (A-0000 D-08)
Region free code 00 (A-0000 D-00)
Push the ENTER key on the remote once the region is displayed
Turn OFF the unit using the ON OFF switch, not the standby.*

Akai DV-R4000SS & DV-R4150SS

*Power on with no disc in the tray
Press "setup" from remote control
Press "stop" from remote control
Press "5" "7" "0" "0"
Press "stop" from remote control
Press 0-9 for region No. - "0" for multizone
Press "setup" from remote control.*

Akai DVD-200BL

*Press the Open/Close button on your remote control
Press the Setup button on your remote control*

Press the buttons 1, 3, 6 and 9, in order, one at a time, on your remote control
Press the Left button on your remote control three times, in succession
Press the Right button on your remote control
You should now be in a setup menu.
Select the Version option from the menu, then select the Region option.
You can now change the region to 1 for region 1, 2 for region 2, and so on, or 0 for multi-region.

Akai DVD-3850S

Push the "open" button on the remote
Push the number button "8561"
Use the direction button to choose the region code you want.

Akai DVPS-760

Open Disc Tray
Push "Setup" on remote control
Push "91010" ("9" is the region code for all regions. You can substitute your region for 9 if you prefer.) Push "Step," "Shuffle," and then "Next"
Close the Disc Tray
Note: To verify that the hack has worked:
Open Disc Tray
Push "Setup" on remote control.
Push "Shuffle," "Step," and then "Next"
This takes you to the secret setup menu
Scroll down to the "debug" setting and verify that the region you selected is selected here. Note that making changes directly to the menu here WILL NOT WORK!
Close the disc tray
Note: There are some interesting settings in the secret setup menu that can be useful. When playing certain PAL discs on an NTSC TV, you will notice certain distortions caused by the drawing method. You can alleviate this problem by changing the "picture mode" in the secret menu until you find a setting that works.

Akai DVR-2100SS

Power on the player and open the tray
Press 3,8,3 and 8 on the remote control
A menu will then appear at the top of the screen
Press enter until 9 is displayed
Press 1 to clear the menu and it is region free.

Akura ACHTS02

Press OPEN

Press SETUP

Press RIGHT 3x which will take you to the PREFERENCE page

Press PLAY 2x and enter 49540

Select region by Up and Down key (0 is region free)

Press PLAY to commit

Press SETUP to exit

Akura ADV143S

Press Setup

Press 1369

Press Left Left Left

Press Right

A new menu item called VERSION should appear

Change the region code (0 = region free)

Akura ADV14S

In the no disc mode (i.e when the player is powered on without a disc)

Press the setup key on the remote

Press the following key in order: Vol + , vol - , vol + , vol - (these are the buttons marked + & - that are under the audio key on the remote)

Your display should read region 2 in the top left on the screen

Use the right key (the blue right button in the middle of the remote) until the 2 in the top left of the screen reads 255 (the numbers 1 to 6 are the different regions and 255 is multi region)

When 255 is highlighted then press the return key on your remote and then press the menu button

Which should take you to the no disc mode

Alba DVD45

Turn on your DVD player

Open disc tray either using the EJECT button on the Player or the OPEN button on the remote

Press 2812

A menu should pop up, press ENTER until 9 appears

Alba DVD106

Power on player

Using the remote control, key in the following: Pause, 3, 1, 4, 1, 5, 9

The player display should read "COdE - -"

*Enter desired region, or 0 for region free
Press Pause on the remote control and then power off player
Wait 10 seconds and then power on again.*

Some players may not respond to this method

Alba DVD-108

*Press 'pal/ntsc'
Press menu
Then press 0.*

Alba DVD109

*Open tray
Press 0 0 0 0 then select reg 0-
Verify by opening tray and pressing display.*

Alba DVD-103 - 113

*Power on the DVD Player
Press Pause on the Remote Control
Enter the code 314159. The player display should read "COdE - -"
Enter the desired Region (0 = all, 1 = Region 1, 2 = Region 2 etc.)
Press Pause
Power off the DVD Player
Wait 10 seconds and then power on again*

Alba DVD-114

*Press the Open/Close button on your remote control
Using your remote control, press the buttons 3, 3, 0, 8 and 8, in order one at a time
Press the 1 button on your remote control for region 1, 2 for region 2, and so on, or 0 for multi-region.
Press the Open/Close button on your remote control.*

Alba DVD-119

*Empty tray, and have the tray open
Press Setup on remote*

Press Next
Press Prev
Press Next
Press Prev
Ver should appear in the top right
Change to 255 using left and right buttons
Turn off and on

All-tel DVD 101

Open the tray
Using the remote control, key in the following: 1, 4, 5, 6, followed by the region number desired, or 0 for region free. But doesn't seem to work with firmware version ISZ9.48

Amitech AD702 & AD710

On the remote:
INDSTIL
PAUSE (try STOP if doesn't work)
>>| (Next, eg. next track)
|<< (Prev, eg. previous track)

Amoisonic DVD8166

Power on the player with no disc inside
Open the tray
On the remote press 01069
"OK" message appears on the On Screen Display.
Amoisonic DVD-8506

Code 1
Power on the player, make sure the tray is open
On the remote press 0108x
Where x = region - 01080 is region free.

Code 2
Same as above, but use 0106x instead.

Amoisonic DVD-8506F

Power on the DVD Player
Open the Player tray and leave it open
Make sure no disc is inserted
Key in on the Remote Control 0108x.
Where x = the Region.
So 01081 is Region 1, 01082 is Region 2. and 01080 is Region free!

Amstrad DVD 2320

Turn power on

Press "eject"

Press "display"

Press "1", "1", "1", "1"

Press "select"

Press "0" (for region free), or "1", "2", "3", "4", "5", "6" (for the different regional codes)

AMW M270 & M280

Make sure there is not a DVD in the drive

Power on the device

Press Setup on the remote control

Hit the right arrow key three times to scroll to the "preferences" tab

Hit "1379" on the remote control

Use the up/down arrow keys to select the region code

Press play

AMW S99

Turn on the dvd

Open the tray, tray must be empty

Enter 9735

Change the region code to 0

Exit to main menu

AMW V120

With tray empty

On the remote press these buttons:

SETUP

MUTE

STOP

ZOOM

The upper left of the screen display should read "SET AS ALL REGIONS"

AMW V250

Setup

Enter "13698888"

VERSION Selection will appear

Select "VERSION" then Select "REGION"

Enter Region Number 0-6

(Above also works on - Yamakawa 215)

AMW V99

Turn on the dvd

Open the tray

Enter 8561

Change the region code to 0

Exit to main menu

Aspire DIGITAL AD-N820B

Here's how to do it:

- 1. press the open/close button to open the tray;*
- 2. press the setup button to go to the setup screen;*
- 3. press the right-arrow button until you reach the preferences section of the setup screen;*
- 4. press the 1 3 8 9 keys in that order; a region picker will appear;*
- 5. press the up/down arrow keys to pick a region;*
- 6. press the play button to dismiss the region picker.*

I've used this hack about five times to switch between regions 0, 1, and 2. So far it works great!

Note that this player is probably the same as the Sumvision N820, so this hack will probably work on the Sumvision as well.

Also note that the TV type setting on the device is set to "Auto/Multisync" by default instead of NTSC. I've noticed some reports of video problems with new players right out of the box, and that might be why, since most Americans don't have TVs that can do Multisync.

If you have such problems, try switching the setting from "Auto" to "NTSC". The setting doesn't affect what kind of DVDs you can play, just how they get output to the TV.

Apex AD-600A

Press the Setup button on your Remote Control.

Using the onscreen menu, select the Preferences option.

Press the Still / Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden setup page, where you can change the region code.

Apex AD-1000

Open the tray

Then press 349734

Then select 0

A blue box will appear in the top left hand corner that says "REGION FULL"

Apex AD-1200

Open tray and press 8 4 2 1 (you will see -'s appear top left of screen)

Menu appears for region and Macrovision. Use up/down keys to select Region/Macrovision.

Use Enter to change region to 9/Macrovision on/off.

Apex AD-3201

Open the DVD tray

Enter 8421 on the remote

Screen should show the Region and Macrovision Menu

Enter region (9 is region free)

Select Macrovision On/Off and close tray to save.

Apex AD-1010W

** Load your DVD in the tray*

** close the tray*

** As the DVD start to load the software press the number 1 in the remote several times.*

** Whooooa enjoy your DVD's from other regions.*

Arcam DV-88

Press the Open / Close button on your Remote Control

Press the buttons 1, 1, 1 and then 1 from the Remote Control

Then press 01 on the Remote to select Region 1, or 02 for Region 2, and so on, or enter 13 to select Region Free

Arirang DH-9000

Open the DVD Player tray

Press on the Remote Control 8, 9, 2, 6, x, where x = the desired region code

Ariston DVD-2000

Press the Open button on your remote control to open the tray.

Press the 7 button on your remote control.

Press the Enter button on your remote control.

Press the 7 button again on your remote control.

You will now enter the hidden setup page, where you can change the Region Code

Arrgo ADP-700

Press setup on the remote

*Go to the general tab and press 1 3 6 9 on the remote after each other
A menu appears to select the region code
Select with the arrow keys region 0
Press enter twice
Press setup to go back*

Ascomtec DVD 3003

*Open tray
Setup
8888 in remote control
Version menu appears
Change the region.*

Aspire Digital AD-1000

*Press "Eject"
Keep tray open
Press "Setup"
Go to "preference page"
Go to "Country region"
Press 1379
Region code menu appears
Press Up and Down on the remote to select region (0 = region free)*

Aspire Digital AD-8000

*Open tray
Press the Pause button on the remote
Press 20110 on the remote for region free.*

A-Trend AD-L528

*With the draw closed, and with no disc in it.
Press 7,6 and select on the remote, and this will take you into the firmware settings
Use the arrows on the remote to scroll down to the region setting and change to whatever region you require then press enter.
Then scroll to the bottom where it says 'next page' and press enter.
On the next page scroll to the macro vision settings and press enter twice or until '0' is shown and the macro vision is disabled.
Then press set-up to exit. If you turn the machine off, the macrovision will have to be set to disabled again. Or take any disc out of player, press pause on remote control press 3, 1, 4, 1, 5, 9 on remote control and the word CODE will appear in the DVD player's window
Press the key for the region e.g., 0 for region free.*

Press pause again. Turn player off then on again

Or switch on DVD player, press 'stop' on the remote, press '1','9','9','9' then 'enter' and the zone menu appears select 'all' to de-regionize the player.

A-Trend Helios

Open the drive tray

Press Setup on the Remote Control

Press 1, 9 and 9 on the Remote Control

Select the Region option from the menu and change to a specific region or all regions

A-Trend LE-511

Switch on the DVD player

Press: STOP, 1, 9, 9, 9

The hidden menu appears

Set the "Zone" field to ALL

Audiologic DVD-101

Eject the CD Tray

Push 1, 4, 5, 6, x

Replace 'x' with the desired Region or '0' for Region free

Audiologic DVD-850

Open the DVD Player CD Tray

Press 8, 9, 2, 6, X

(X = the Region code, 1 for Region 1, 2 for Region 2 etc. 0 = Multi-Region and no Macrovision)

Audiosonic DVD-2004

Open the DVD Player CD Tray

Press 7, 7 and Enter on the Remote Control

A secret menu appears where you can change the Region Code

Audiosonic DVD-2005

Open the tray with the remote control

Type 8421 (you should see 4 '-' on top left screen

Then press 'Select' on remote control to choose the region code (9 for region free)

Audiosonic DVD-2009

Open the DVD Player CD Tray

Press 7, 7 and Enter on the Remote Control

A secret menu appears where you can change the Region Code

Audiovox D-1730

D1730 (Rev 3 Software)

Following procedure is just for the unit which version number is "03"

Please do following to change the zone of D1730 via remote control:

- 1. power on*
- 2. Press "SETUP" button*
- 3. Select and come into the the Preferences MENU*
- 4. Input the password " 2 5 2 1 4 4 "*
- 5. Press "Left" and "Down" button (now the screen will show "REGION CODE 1")*
- 6. Press number button (2 to 6) to change zone.*
- 7. Press "SETUP" button to exit*

Audiovox DV1100

Turn on the player

Select the function DVD, which is shown in the display

Open the disc tray and wait til the display shows " OPEN "

With the disc tray open, press 3838, it will show " _ _ _ "

A config menu will appear

Press enter til region is 9 (region free)

Press down and then enter to turn macrovision OFF

Turn off the dvd player

Audiovox DV-1680

Press Setup

Press +10

Press PREV

Press NEXT

Use the left and right arrows to select the region you want to play

When you have selected the region press the Setup button to exit

Power off the DVD player, when you power on the DVD player it will select the new Region

Audiovox DV1700

Press these buttons on remotes:

Shift

Mark (then you can see region No.)

Stop

000

87154

Shift

2 (for region 2)

or Fast Forward (for multi region)

Note: Before you apply the code, you must turn the ON SCREEN MENU on, so press the SETUP button to turn it on first.)

Audiovox DV1710

disc open.

use remote press set up.

previous.

next.

previous.

next.

ff.

set up.

set up.

previous.

ff.

in top right hand corner there will be # comes up every time u press ff the # will change the zones when u see # 255 this means all zones it must work on a time limit because it took me 7 attempts i did not see anything in the top corner but when i tried a disc it now plays any disc from any region hope this helps good luck

Audiovox STS25

Open the tray

Press 8, 1, 3, 2 and 8

The region menu will appear

Press enter until region 9 is selected and press Play

The unit will now be multi region.

VCD playback:

Open the tray, press 0, 0, 0, 1, and press play.

Austek DS-8319

*Open the tray
Press "INTRO" button on the remote control
Type "20110" on the remote control
The words "SET OK" will appear on the screen
Close the tray.*

Awa V520

*Ensure the DVD Player tray is empty and closed
On the Remote control:
Press Setup
On the players Front Panel:
Press Next
Press Stop
Press Pause / Step
Press Prev
Press Next
You should now see a new Menu. Go to Select Region and make your choice:*

Axion DVD-2000

*Ensure the DVD Player tray is empty and closed
On the Remote control:
Press Setup
On the players Front Panel:
Press Next
Press Stop
Press Pause / Step
Press Prev
Press Next
You should now see a new Menu. Go to Select Region and make your choice*

B

Baier 903

*Open tray
Press these numbers on the remote: 62818+region code 0=multi region
Close tray*

For newer firmware use:

*Open tray
Press these numbers on the remote: 72818+region code 0=multi region*

Close tray

Baze DVD5500

Open the tray

Push SETUP

Push 3 times at RIGHT Arrow button to enter the PREFERENCE SETUP MENU

Enter 1, 3, 7, 9 and then the code 0-6 as you wish - 0 is region free

Push SETUP or CLOSE to save the setting.

BestBuy Easy Home DVD DV!

[SETUP] - [STEP] - RETROCEDER [||<<] - AVANZAR [>>|]

A secret menu appears

Select 1 to 8 or Bypass (region free).

BestBuy Easy Home DVD VX!

[UP] [UP] [DOWN] [DOWN] [RIGHT] [LEFT]

A secret menu appears

Change the region code and the macrovision protection.

Bluesky DS-8315

Open the drawer of the reader via the remote control.

Press successively keys 8, 4, 2, and 1.

Choose the zone desired in the menu.

If you wished to decontaminate Macrovision, press successively keys 4, 5, 6, and 1.

Boman DM-2010

Open the disc tray

Press on SETUP on your remote control

Go to the sub-menu "Custom Setup" by pressing the right arrow on your remote 3 times

Press number 3 on your remote four times (3 – four times)

You should be taken into a new menu "Secret1 Menu"

Choose any region code or 0 for region free

Press Setup to leave the menu.

Bose 3:2:1 Home Entertainment System

For multi region:

Power on your player

Press successively on buttons 9 and 4 on the remote control

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Press successively on the buttons Shuffle, Stop and Mute on the remote control

To put on zone active :

Power on your player

Press successively on the buttons Stop and Shuffle

Press on button 1 to pass in zone 1, on button 2 to pass in zone 2, etc

Press on the Enter button of the remote control to validate your modifications

Or

To put it in multizone :

1. put on your Bose 3.2.1.

2. Press successively on buttons 9 and 4 of the remote control.

3. Press successively on the buttons Shuffle, Stop and Mute on the remote control.

Here! the Bose is now multizone!

There is also a manipulation to put on zone active :

1. Turn on Bose

2. Press successively on the buttons Stop and Shuffle.

3. Press on button 1 to pass in zone 1, on button 2 to pass in zone 2, etc.

4. Press on the Enter button of the remote control to validate your modifications

Bose Lifestyle 28

Insert a region1 dvd into drive

Using the bose remote control, press and hold the plat key for 30seconds or more

Then let go of the play button and then type in 999 on the control

It will set to your multiregion –

To change back:

Do the same again but use the code 000.

Brainwave 502

Switch the player on without a disc,

Use the remote control and press:

Setup

Stop

Previous track

Next track

Now you're in the secret menu

Put the region in Bypass-mode.

Brainwave 602

Open Disc tray

Press SETUP

Move cursor to 'Preferences' and press PLAY

Enter numbers 49540

A new window called 'Region-Code' should pop up

Use the up and down arrows to select 0 for region free

Press PLAY.

(Above also works on - Elta 8892)

Bush DVD-102

Press the Open / Close button on the Remote Control to open the drive tray.

Press the buttons 2, 0, 0 and 1 on the Remote Control.

Press the Enter button on the Remote Control

You will now enter a hidden Setup page, and can change the player to any Region.

To set it to Region Free Enter 13 as the country code.

Bush DVD-2000

Open the DVD Player CD tray.

Place a Region 1 disc in the tray, but don't close it.

Press the buttons 0, 1, 2 and then 3 on your remote control in order, one at a time.

Press the play button on your remote control. To change the player back to Region 2

Open the DVD player CD tray. Place a Region 2 disc in the tray, but don't close it.

Press the buttons Return and then Play on your remote control in order, one at a time.

Bush DVD-2002

Press the Open button on your remote control to open the tray.

Press the 7 button on your remote control.

Press the Enter button on your remote control.

Press the 7 button on your remote control.

You will now enter the hidden setup page, and can change the player to any

Region or set it to Region Free by entering 13 as the country code.

Bush 2004A

Open tray type in 33088

Then press 0 for region free

Close tray to complete.

Bush DVD-2005

Power on your player, then from the remote control key in the combination below:

www.fantasticproducts4u.co.uk

*Press Open / Close
Press Zoom
Press A / B
Press Up, Left, Down, Right
The DVD player may show a Region Free message.*

Bush DVD-2009

*Power on your player, then from the remote control key in the combination below:
Press Open / Close
Press Zoom
Press A / B
Press Up, Left, Down, Right
The DVD player may show a Region Free message.*

Bush 1000

*Open the player's tray
Put in a Region 1 disc but do not close tray
Press the 0,1,2 and 3 buttons on the remote control followed by the play button.*

Bush 2002

*On the player press Open,
On the remote press 7, 7, enter
You are now in the set-up page
Change region to 13 (region free) and while you are there turn Macrovision off.*

Bush DVD 2028, 202, 2024

*Press open on the remote
Press 2 then 8 then 1 then 2
Press close.
(TO PLAY VCDS & SVCDS - Insert VCD/SVCD and close tray. Press Goto on remote repeatedly until the menu says VCD at top of screen.)*

Bush DVD 2008/A

Press Open. Press 3 then 3 then 0 then 8 then 8 then 0. Press Play.

Bush DVDAV7

For region free:

*Open tray
Press 33088 on remote followed by 0 for multi region
Bottom left of screen will display region chosen.*

For vcd/svcd playback:

*Open tray
Press 83119 on remote
You will see HAVE VCD displayed in bottom left of screen
Press enter on remote to load CD
All vcd/svcds will now play
Code remains active until power removed from unit.*

C

CAT DV-921

*Turn Power on
Open Tray
Hold "0" on your remote
Close Tray
Release the "0"
Turn Power off.*

CAT DV-922, 931, 933

*Turn the player on
Open the tray
Press 0815 + region code 0
Close the tray.*

CAT DV-977

*Turn the player on
open tray
Press "Setup" on your remote control*

Go to Menu Preferences

Press 0815 -> a grey window appears showing Macrovision 1

Select "0" and press enter -> Macrovision is gone.

OR

Same as above, but replace 0815 with 8806

Choose region from 0 to 6.

CAT DVA-2002 & HTC-2002

Press "open/close"

Press "8"

Press "4"

Press "2"

Press "1"

Hidden menu appears

9 for region free

Enter.

Cavs DVD-101G

Turn on player

Open the tray (no disc)

Press the Setup button

Cursor down to Karaoke Setup

Press 9999 followed by 0 for region free

Press the Setup button and close the tray.

CCE DVD-2100

On the Remote Control key in the following:

Open/Close

Zoom

A-B

Up

Left

Down

Right

The words "Region Free" should briefly appear on the TV screen.

CGV AX-201

Switch on player

Open slide with EJECT button on remote

Enter one of the following codes (depends on version)

77 or

2918 or

74 or

6787

Then press ENTER to validate code

A hidden menu appears

Select NEXT PAGE (bottom of the screen)

Enter code 1 to disable Macrovision.

Clairtone CLDVD101T

For region free:

Press:

Open ->

8421 ->

Enter -> [To toggle between 1,2,3,4,5,6,7,8 or ALL]

Close

For macrovision:

Press:

Open ->

4561 ->

Enter -> [To toggle between Enable/Disable. Close

Clairtone CLDVD105T

Turn on your player

Open the tray

On the remote, press INTRO

Press 2,0,1,1

Press 0 for region free

You will see on screen "SET OK"

Note: You have to repeat the procedure each time you want to watch a different region.

Classic DVD-102

Press Setup on the Remote Control

Press Next

Press Stop

Press Pause / Step

Press Prev

Press Next

You should now be in a secret menu where you can change the Region from 1 to 6, or Bypass for region free

Classic DVD103

Press the Open button on your remote control to open tray

Press the Setup button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

A code should appear on the top left hand corner of the onscreen display

Using the Left and Right direction buttons on your remote control, change the code to VER 1 for region 1 playback, VER 2 for region 2, and so on, or VER 255 for multi-region playback

NB: You may need to use the up and down buttons to select the region option before you change it

You can also change the code to VER 3001 to enable parental controls, or VER 3000 to disable these controls

NB: You may need to use the up and down buttons to select the parental controls option before you change it

You can also change the code to VER 4001 to enable Macrovision, or VER 4000 to disable this feature

NB: You may need to use the up and down buttons to select the Macrovision option before you change it

You can also change the code to VER 5001 to disable VCD/SVCD playback, or VER 5000 to enable this feature

NB: You may need to use the up and down buttons to select the VCD/SVCD playback option before you change it

Press the Setup button on your remote control.

Classic DVHE150R

Turn on the DVD player

Press the Eject button, if there is a disc in the player, stop it from playing

Press the Setup button

Press the NEXT button

Press the PREV button

Press the NEXT button

Press the PREV button

*In the Top Right of the SScreen, it will say VER * Use the left and right buttons on the remote (by the select / play key) to select a region. VER 1 = Region 1, VER 2 = region 2....etc or also, you can select Version 255 which is region autoselect (region free).*

Press setup twice, and insert the disc. It should work like that.

Clatronic DVD-491

Power On the DVD player

Open DVD CD Player tray

Press Setup on the Remote Control

On the Remote key in 3, 3, 0, 8, x. Where x represents 0 for Region Free or 1-6 for a specific Region

Press Setup

Clatronic DVD 556

Note: Code only works for the software version M-XQ-M:

Open the tray

Press setup

Press 2,1,8,8

New menu called "Version" will appear

Select it and press enter

Press right

Select a new region (0 = region free). If you cannot read the number, select "main page", than you can read it

Select "main page" and press enter

Power off the player to save the new region value.

Compacts AB 6820

Press Setup

Press Left button 5 times

Version will appear

Enter and change code to 0.

Compacts DVD 4000 & 5000

Press SETUP

Key in 8888

Press the >>I button

An additional menu item appears called VERSION

Scroll down to region code in this menu then use the cursor keys to switch it from 2 to 0

Press SETUP

Compacts DVD 800

Without disc in player

Press menu

1, 9. Scroll to the region setting

Press enter, press 0, press enter.

Conia DVD-2002

Open the disc tray

Push SETUP on the remote control

Push 1, 3, 6, and 9, one at a time, on the remote control

Push the left menu arrow button (on the up/down/left/right control) 3 times -- NOT the |<< or << button

Push the right menu arrow button 1 time -- NOT the >>| or >> button

If you see a new menu item named "VERSION", enter that menu.

You should now see a screen with a Region Code option at the bottom

Use the remote to change the region

Push SETUP to exit the menu.

Conia M-131

To change to Multiregion press "Open" in the remote, the DVD will open the tray and the screen must show the word "Open" in the upper left corner. Immediately when the "Open" word disappears, press 0106x in the remote (x is the region code or 0 for all). If the above was done correctly the screen must show the word "Ok", then push close.

Conia M-310T

Use Remote Control:

Press "Setup"

Press "8806"

You'll see "Version" appears on the bottom of the screen

You can set to 0 for all region, or region 1 - 6 of your choice.

Cougar CVD-515

Ensure the player has no DVD in it's tray, and that the tray is closed

Power on the player

Press Open / Close on the Remote Control

Press 2168 (Password)

Press 9 for Region free - or 1 - 6 for various regions

Press Open / Close

Crown

Press the Menu button on the Remote

Press the 1 button, press the 6 button

Press the 7 button, press the Mute button

Converting this player for VCD playback:

Press the Open button on the Remote to open the drive tray

Place an audio CD in the drive tray

*Press the Open button on the Remote to close the drive tray
Press the Menu button, press the 1 button. press the Index (1-All) button
Press the Open button, press the 1 button.*

Crown CDV661

*Press Set-up
Go to general set-up then press play.
Go to TV display then press stop, |<< , >>| .*

CyberCOM CC 4931

*Open the tray
Press "Clear" then press 1,3,6,9
Select the Region code by pressing the corresponding 1-6 region code, or 0 for all
Close tray and switch ON/OFF.*

CyberHome AD-L528

*Turn on the player
Open the tray
Press Stop
Enter 1, 9, 9, 9*

CyberHome AD-N212

*Press the Open button on the Remote Control to open the drive tray
Press the 7 button on the Remote control
Press the 6 button again on the Remote control
Press the SEL button on your Remote control*

CyberHome AD-M 212

*Power DVD on with no disc in
Press 7 6 on remote
Then press Select
Takes you to the service menu
Then select region 13 for multi region
Next page has macrovision
Set to 0 to disable it.*

CyberHome AD-N512 & N212

*Press the Open button on the Remote Control to open the drive tray
Press the 7 button on the Remote control
Press the 6 button again on the Remote control*

Press the SEL button on your Remote control

CyberHome CH-DVD 300

Hack details:

Power up, no disk in. Status says READ then INSERT DISC.

Press MENU (status reads invalid key icon)

Press 1 (status reads invalid key icon)

Press 9 Menu is displayed.

Press ENTER on the region, digit turns to "--"

Press 0

Press ENTER again

Press EJECT to clear the special menu.

<http://www.videohelp.com/dvdhacks.php?dvdplayer=CyberHome+CH-DVD300&hits=50&Search=Search>

or

- Turn **On** the player and make sure there is no disc in
- **Close** the tray
- Press **Menu, 1 and 9**
- A menu will appear and press **Enter**, this will highlight the Region setting
- Press the number of the region required i.e. **0, 1, 2** etc.
- Press **Enter** again
- Press **Open/Close** tray

CyberHome CH-DVD 320

power on

empty tray

press " menu"

press 1

then 9

new menu will pop up

region code will show 1

press " enter"

it will show "--"

type 0 for all regions

hit "enter"

press "open/close"

enjoy

I only tested with region 2 disk

works fine

<http://www.videohelp.com/dvdhacks.php?dvdplayer=CH-DVD+320&hits=50&Search=Search>

CyberHome CH-DVD 302

Switch the player on and open the tray
Press "Stop"
Enter "1999" with the remote control
Select "Region-Code" using the remote control
Press the "Enter" button on your remote control
Change the setting to "All"
Confirm this with the "Enter" button
Close tray with the remote control.

CyberHome CH-DVD 402

Player "on"
Open tray
Press "setup" button
Press 1,3,6,9 on your remote control
Press left cursor 3 times
Press right cursor once
New tab appears "Version"
Select "Version"
Go to "region code"
Cursor left
Change region code to 0.

If code doesn't work, see "PARENTAL".
(setup / general / parental)
If "8:OFF" is selected, change to another one
(e.g "2 : G") (Password is "1369").

CyberHome CH-LDV 1010B

This one works with the LDV 1010B Portable player

1. Press the 'Setup' button on your remote control
2. Using the arrow keys on your remote control, highlight the 'General' setup page.
3. Press the buttons 1,3,6 and 9 on your remote control, in order, one at a time.
4. You will now be in a new setup page where you can change the region by using the up and down arrows on the remote control. Region 0 is for multi region playback.
5. Press the 'Enter' button on your remote control.
6. Press the 'Setup' button on your remote control.

Or

1. Open disk tray while player is Off, make sure there is no disk in.
2. Turn On the player.
3. Close the tray.
4. On the remote, press "Menu", "1" and "9". A menu "ALI System Setup" will appear.
5. Press Enter, this will highlight the Region setting.

6. Press the number of the region required i.e. 0, 1, 2 etc.
7. Press Enter again
8. Close tray. The menu will disappear.

CyberHome CH-LDV 700B

- 1) Remove disk, Power on, disk lid closed
- 2) Press MENU, 1, 9 on remote (region menu should appear).
- 3) Scroll down to highlight "Region", press ENTER
- 4) Select required region code (0 for all regions), press ENTER again
- 5) Open lid to exit menu

- 1) Power on, no disc, door closed
- 2) Press MENU, 1, 9 on remote
- 3) Scroll down to highlight "Region" on menu which appears
- 4) Press ENTER, type in 0 for all regions, then ENTER again
- 5) Press c to exit and clear

Cyberhome MP016-A

No disc in player
Using the remote:
Turn ON the player
Press STOP
Enter 4408
Enter 0 for region free
Press ENTER

D

Daewoo DHC-XD500

Open
Setup menu
Press 5425
Secret menu
Use All for region free
Exit.

Daewoo DVD-P480

Press Setup
Then press 9, 7, 3, 5, left, left, left, right
A new button called version will appear as the 4th topic on your set up menu
Use down arrow
Select by pressing play

*Now you can set the region code "0" for multi-region
Now exit to the main page and your selection will be set.*

Daewoo DQD-2100D, 2112D, 6112D

*Turn on player
Empty tray
Then press 7 - 7 - Play (to enter the menu for the regional code entry)
9 for all regions
Press setup to leave the menu.*

Daewoo DQD-2101D

*No disc in tray
Press the Open button on your remote control to open the disc tray
Using your remote control press:
0,5,2 and 0, in order, one at a time
Press the Up button on your remote control
Press the Down button on your remote control
Press the Left button on your remote control
Press the Right button on your remote control
You should now be able to change the region to region free.*

Daewoo DHC-2200K

*Press the Open button on your remote control
Press the Set-up
Press 9 on your remote control for Region Free, or 1 for Region 1, 2 for Region 2, and so on.
Press the buttons 2, 0, 1 and then 0 on your remote control in order, one at a time*

*NB: If this doesn't work, you should try pressing the buttons 3, 0, 1 and then 0
NB: If this still doesn't work, you should try pressing the buttons 4, 0, 1 and then 0 instead*

*Press the Step button on your remote control
Press Shuffle
Press Next.*

Daewoo DHC-2300

*Press the Open button on your Remote Control
Press the Setup button
Press the 9 button for Region Free, or 1 for Region 1, 2 for Region 2, and so on*

Press the buttons 2, 0, 1 and then 0 on your Remote, or if this doesn't work, try pressing the buttons 3, 0, 1 and then 0

Press the Step button

Press the Shuffle button

Press the Next button

Daewoo DS-2500N

Turn DVD on and open the tray (do not put a disc in)

Press SETUP on the remote control

From the menu, choose PARENTAL CONTROL with the arrows on the remote

Once its highlighted press OK

On the PARENTAL CONTROL menu, choose DEFAULTS, and then highlight RESET (do not press OK at this point)

While RESET is highlighted, enter the following codes: 5270 for Region free

After entering the code you want, you will see the words: REGION: FREE

Then Press OK on the remote

You will then see a PASSWORD VERIFY screen, then enter 0000, end then press OK

Finally, press SETUP to exit.

Daewoo DV-115

Remove any discs

Press Open/Close on the front of your DVD (Open lid)

Press 8926

Wait for five seconds

Press 0

Wait for 15 seconds

Press Open/Close button on the front of your DVD (Close lid).

Daewoo DVD-5700 & DVD-4000

Using the remote sequence

Open/Close on your DVD (tray open)

Set-up, Shuffle, Step, Next

You should be able to see the secret menu and scroll down to DEBUG and the list shows from 1-9 (Regions 1-9)

Option 9 is Region Free/Bypass.

Daewoo DVG-3000N & DVG-5000N

Turn DVD Player on

Press Open\Close (tray open)
Press Setup
Press Play from the remote control
Choose TV Type in the menu
Press Stop on the players front panel (NOT from the remote control)
Press |< (Prev) on the players front panel
Press >| (Next) on the players front panel
The region ID menu should come up
Select the desired Region (with remote control) setting to Bypass for Region Free
When you have selected the desired Region press Play
Now press Setup on the remote control.

Daewoo DVG-4000S

With the remote, turn the POWER on then press SETUP then press STOP then press ONE CHAPTER PREVIOUS (thats the button with the two arrows pointing backward with a line in front of them, for those of you that don't read manuals) then press ONE CHAPTER NEXT (You guessed it! the one with two arrows pointing forward with a line in front of them). The factory control page should appear on your TV screen. Move down to REGION ID and then move down to the region ID that you want or move down to BYPASS to make it play all regions (Region Free). Press the PLAY button then turn the POWER off.

Daewoo DVG-5000D

Turn on
Press Open
Press Setup with remote control (don't close the DVD plate in the whole process)
Press Play on the remote
Choose TV Type in the menu with remote
Press Stop on the DVD player (not from the remote control)
Press |< (Prev) in the player
Press >| (Next) in the player
Region ID Menu shows
Select the Region (with remote)
When in the region desired, press Play
Press Setup with remote.

Daewoo DVD-5800

Open disc tray
Push "Setup" on remote control
Push "93010"
("9" is the region code for all regions)
Push "Step," "Shuffle," and then "Next"
Close the tray.

To change the region code:

1. Open Disc Tray

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

2. Push "Setup" on remote control.
3. Push "93010"
("9" is the region code for all regions. You can substitute your region for 9 if you prefer.)
4. Push "Step," "Shuffle," and then "Next"
5. Close the Disc Tray.

to verify that the hack has worked:

1. Open Disc Tray
2. Push "Setup" on remote control.
3. Push "Shuffle," "Step," and then "Next"
This takes you to the secret setup menu.
4. Scroll down to the "debug" setting and verify that the region you selected is selected here. Note that making changes directly to the menu here **WILL NOT WORK!**
5. Close the disc tray

Note: There are some interesting settings in the secret setup menu that can be useful. When playing certain PAL discs on an NTSC TV (SouthPark vol. 12-15 for example), you will notice certain distortions caused by the drawing method. You can alleviate this problem by changing the "picture mode" in the secret menu until you find a setting that works.

Daewoo DVD-5900

Turn player on
Eject disc tray
Enter 8-5-6-1
Now select "Region 0".

Daewoo DVD-8000K

Press the Stop button on your remote control
Press the 4 button on your remote control
Press the 4 button on your remote control
Press the 0 button on your remote control
Press the 8 button on your remote control
For region free , press the 0 button on your remote control
The onscreen display should indicate the changed region
If nothing happens repeat the above steps but press the indicated buttons in a faster sequence.

Daewoo DVD-9000S & DVD-S150

Power On DVD player
Introduce a disc and wait until either it is loaded, or the mention "wrong region" appears on the screen
Press Setup

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Press 1,3,6,9,8,8,8 and 8

A new button called Version will now appear in the Setup window

Press Down until you come to Version

Press Play

Press Up or Down to select the required region

Choices are from 0 to 6

Press Setup.

Daewoo DVD-S250

Press "Open"

Press "8561" sequentially

Choose the region you need.

Daewoo DVD P480

Try this to remove the region code. First make sure there's no disk in the machine, press 9735 on the remote and region menu screen should appear. Select "0" to turn off the region. Enjoy!

Customer: "I finally got the 9735 code to work. My problem was that I was hitting the trying to enter this code into the "Setup" screen.

I finally got to the hidden screen by leaving the DVD drawer open, and typed 9735 while on the blue "Daewoo" screen. A region menu screen should appear. Select "0" to turn off the region. Enjoy!

Don't try to enter the code from the "Setup" screen or it won't work.

I got my DVD player from Costco."

Or

Here's the region hack code for this player:

1.Press OPEN button

2.Press SETUP button

3.Press VOLUME+

4.Press VOLUME-

5.Press VOLUME+

6.Press VOLUME-

You will see a menu,than you can change the region No using LEFT and RIGHT button.

'1' means Region 1

'2' means Region 2

'3' means Region 3

'4' means Region 4

'5' means Region 5
'6' means Region 6
'255' means All Region

Enjoy!

Daewoo DVG-6000D

Put a region 1, 2, 3, or 4, etc disc into the player
When it comes up with "wrong region"
Press the "title PBC" button on the remote control and away you go.

Daewoo DHC-5800K

To convert this player to Multi-Region on later firmware versions:

Press the Open button on your remote control
Press the Setup button on your remote control
Press the 9 button on your remote control for Region Free, or 1 for Region 1, 2 for Region 2, and so on. Press the buttons 2, 0, 1 and then 0 on your remote control in order, one at a time
NB: If this doesn't work, you should try pressing the buttons 3, 0, 1 and then 0 instead
NB: If this still doesn't work, you should try pressing the buttons 4, 0, 1 and then 0 instead
Press the Step button on your remote control
Press the Shuffle button on your remote control
Press the Next button on your remote control
To check the current region setting of this player on later firmware versions
Press the Open button on your remote control
Press the Setup button on your remote control
Press the Shuffle button on your remote control
Press the Step button on your remote control
Press the Next button on your remote control
A secret menu will appear, inside which you can scroll down until the words Debug Item appears, where the current region status is displayed

Daewoo DHC-XD350

When the dvd player is on with no disc
Press setup menu
Scroll to preferences
Enter password "0000"
Then enter 5425
Press 5425 again
Choose region "All"
Press setup menu

Daewoo S2122

Power On

Press Open

Press Setup

Press the numbers 33088 followed by the region number (0 = region free)

In the main menu screen, a line will disappear and a little box with "R=number" will confirm the region change.

Daewoo DQD-6100D

Open tray

Press (on the remote):

0520 Up Down Left Right

Should now show Region free.

Daewoo DV-135

Power on

Open tray

On the remote press 89260 = region 0,

89261 = region 1,

89262 = region 2 etc.

Daewoo DV6T811N & DV6T81N

Power on the player

Open the tray

On remote - press 0520

On remote - press up(^) down(v) left(<) right(>)

(the keys around the setup button)

Region free message appears in the top left corner

To lock region again, repeat sequence.

Daewoo DV6T821N, DV6T834N, DV6T844B

Make sure disc tray is empty

Turn on unit and put unit in DVD mode so that DVD or NO DISC shows on screen

Press the following keys in order:

7, >, 7, >, PLAY (the > key is next to the enter key, and is NOT the FAST FORWARD or NEXT key)

A menu will appear on the screen. Scroll down to the 3rd line (COUNTRY CODE) and press ENTER

Press the number of the region you want to change to, or press 0 for region free

Press ENTER

Press SET UP (this key is to the bottom left of the enter key).

Daewoo DV6T955B

turn on player
open tray
on remote - press 0520
on remote - press up(^) down(v) left(<) right(>)
(the keys around the setup button)
Region free message appears in the top left corner
To lock region again, repeat sequence.

This is the same hack that works for others. Don't panic if it doesn't work the first time. Try again.

Make sure you have not pressed the VCR/TV button on your remote--it won't work to program the DVD.

Dansai DVD-852

Press Setup on the Remote
Press Stop on the front panel of the player
Press Previous on the front panel of the player
Press Next on the front panel of the player. You should now be in a secret menu where you can change the Region from 1 to 6, or Bypass for Region free

Dantax DVD-1000

Open the players tray
On the Remote Control, key in 9, 9, 2, 6
Then press 0
Close the DVD Player tray
Turn the power off, and turn power on again after approx. 1 minute
The DVD player will now recognise DVD from any region
If you have problems with the above, or problems with RCE discs try:
Replace 9, 9, 2, 6, with 8, 9, 2, 6

Dantax DVD-1500

Open the DVD tray
Press 9999x, where x is the region you desire
Close the DVD tray.

Denon DVD-3910

<http://www.avforums.com/forums/showthread.php?t=154394&highlight=3910+region>

here the 'readme' instructions:

Burn to a disc as a data disc with iso9660 and make sure joilet is turned off and remember to finalize disc.

1. Connect to display device.
2. Insert disc

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

3. Display will show "disc loading" then "updating flash memory"; FL display will show "writing"
4. After 1 minute loader will open.
5. Remove disc and power off. DO NOT CLOSE TRAY
6. Power on and close loader
7. Now press and hold Play (>), Forward skip (>>I) and Open/Close for more than 3 seconds until "INITIALIZED" appears on front display.

Denver DVD-122

Press 'Open' on the remote control
Press 33080 on the remote
Press PLAY on the remote
The DVD door will close.

Denver DVD-311

Power on the unit and open the DVD CD Tray
Press the following on the Remote Control 3, 3, 0, 8, 8
You will see in the top left of the screen "*****" appear
Key in a number corresponding to the Region you desire your player to be set to,
i.e. 1 for Region 1, 2 for Region 2 and so on, use 0 for Region free

Denver DVD-121

Press Open
Press 3 then 3 then 0 then 8 then 8 then 0
Press Play

Diamond 101

Open tray
Press 9999 on remote
Press OK
Press 9 = all regions, 4 = R4, 3 = R3, and so on, whichever Region you desire.

Diamond DVD-201D

Open tray
Press 2918
Press ENTER (a manual will appear on the screen)
Use up and down buttons to choose the region code
Press ENTER (13 and ENTER for multi region)
Press Set-up.

Digitor DVD 2117

Ensure no disc is in the tray

press 1 on remote

press 6

press 7, then

press 0, for All Zones, or press the number according to the disc region you wish to select.

The DVD player should now play DVD's from all regions.

Digitor DVD 3119 & 3122

Press 16719

Press OK when config menu pops up

Choose 0 for all regions

Press Exit

Digitor G1602 & G1605

Press 16719 on remote control.

Press OK when config menu pops up .

Choose 0 , for All Regions, or the region number required.

Press Exit.

Digitor G1605

Turn Power on

Open Door (onscreen display reads insert a disc)

Using the remote press 16719 while pointing remote at dvd player

Config menu is now displayed onscreen, press ok

Press 0 to change to all regions

Press Exit on the remote

Dvd player will now play any dvd.

Digitrex GK-1100

Turn unit on.

Open the Disc Tray.

On the remote control type 349734.

Press the number of the Region you require, 0 to 6. (0 = All Regions)

The unit will now play multi-region DVDs.

If the unit is reset or the power left off for a prolonged period of time it might default back to Region 2. Simply repeat above to regain Multi Region capability.

DURABRAND DP305
DURABRAND PVS1960
DURABRAND VS1966
DURABRAND STS75E
DURABRAND STS98

Open the tray

Press 8, 1, 3, 2 and 8

The region menu will appear, then press enter until region 9 is selected and press Play

The unit will now be multi region.

VCD playback:

To play VCDs, open the tray, press 0, 0, 0, 1, and press play.

E

eBench KH 6777

Power On DVD

Open Tray

Enter on the remote key pad 2812

A Menu now appears on the screen, select the appropriate region 1, 2 etc (9 is all regions)

Menu option macrovision is shown, move block to highlight, press ok and macro switched off.

Eclipse DVD-595

When in Standby, with no disc in the DVD player

Press 770 enter on the remote control

This gives you access to a menu to disable macrovision as well as making the machine Multi Region.

Eclipse DVD-695

Switch on

Open tray and press 7,4 enter

A set-up screen will be displayed

Go to the bottom then press enter

Macrovision should then appear

Press enter until zero appears

Press set-up to exit

Unfortunately you need to do this every time you switch the power off.

Electrohome EH-8181

Ensure there is no disc in the DVD Player

Press SETUP

Press STOP

*Press TRACK BACK |<<
Press TRACK FORWARD >>|*

Elta 8882

*Power Off, Power "ON"
Press 2 x Arrow key "UP"
Press 2x Arrow key "DOWN"
Press 1x Arrow key "RIGHT"
Press 1x Arrow key "LEFT"
Press Number 0 to select Country Code to 0
Press "Enter" Button*

Elta DVD-8890

*Press Setup
Press Step
Press Skip Right
Press Skip Left
You can now change the Region Code*

Eltax DVD-650S

*Open the drive tray
Key in using the Remote 8926#
(Where # = Region number i.e. 1, 2, 4 etc. 0 = multi region and no Macro vision)*

Encore DV-450

*Press Menu on your remote control
Type 3, 8, 8, 8 and 3
Choose any Region (1-6) or choose the Bypass Region setting
If you're player rejects a disc when Bypass Region is selected, try to manually select the region*

Entiveo DP3220

- 1. power on your dvd player
-red standby led light should turn off
-title screen that says 'ENTVEO' on blue bg
-in large white all capital block letters*
- 2. eject the dvd disc tray
-as if to load a disc into the player
-leave it open during the next steps
-the tray may block player's ir window*
- 3. press the 'REPEAT' key on the remote handset
-a small white hand should appear briefly*

*-in the upper left corner
-then this same white hand icon should disappear*

*4. press the '1' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same white hand icon should disappear*

*5. press the '2' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same white hand icon should disappear*

*6. press the '3' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same white hand icon should disappear*

*7. press the 'REPEAT' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same hand should disappear*

*8. press the '0' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same white hand icon should disappear
-a small '0' should appear on the screen,
-off the center, a bit to the left and down
Then automatically disappears*

*(DONT DO!!!! or else doesn't play mp3s anymore
9. press the 'REPEAT' key on the remote handset
-a small white hand should appear briefly
-in the upper left corner
-then this same hand should disappear
-also the small '0' should now disappear)*

Enzer E-5008B

*Open the DVD Player CD Tray.
Keeping the tray open put the player into Standby mode.
Press 0,1,2,3.
Press Play.
Your player is now Region free.*

Enzer E-5015

*Turn the machine On.
Press Setup.*

*Press Slow.
Press Previous Track.
Press Next Track.
A service menu will now appear enabling you to change the Region.*

Esonic DV-3306

*Press the Open / Close button
Enter the following numbers 0, 0, 7 followed by the Select / Enter key on the Remote
Use the cursor arrows on the Remote to highlight the MCF CODE menu
Press the Select / Enter key
Enter the numbers 1, 9, 6, 9 followed by the Select / Enter key on the remote
To finalise the modification press the Setup button*

Euroline 6620

*Open the DVD tray
Enter 3, 3, 0, 8 on the remote control (you will see XXXX on the top left of the screen)
Enter the region code of your choice, 1 for region 1, 2 for region 2 etc. and 0 for region-free
You should see your selected region in the top left of the screen for a short while.*

F

Ferguson DVD-400FE

*Press the Menu button on the Remote
Press 1,6,7 on the Remote Control
Press the Mute button
Converting this player for VCD playback:
Press the Open button on the Remote to open the drive tray
Place an audio CD in the drive tray
Press the Open button on the Remote to close the drive tray
Press Menu, 1, Index (1-All) button
Press the Open button
Press the 1 button*

Finlux DVD-410

*Don't insert disc
Press set-up, stop, previous track and then next track
Now you are in the factory menu and you can set the region and macrovision.*

Finlux DVD-510

*Press set-up
Go to general set-up*

*Press play
Go to TV display
Press stop, |<<, >>|.*

Finlux DVD-511

*Open DVD tray
Press 2812 (on the remote)
Press Enter
A system menu appears
The Region Code can be changed.*

Fisher S1000

*Press the Program button on the Remote Control
Press the Right Cursor button
Press the Right Cursor button
Press the Enter button
Press the Play button*

Using your remote control press:

- 1. Program, Right, Right, Enter, Play*
- 2. The player should now be in multiregion mode.*
- 3. You can use Up and Down instead of that second Right keypress to choose other tracks on the DVD.*
- 4. The hack is not permanent and has to be entered every time.*

Fisher S1500

*Press the Program button on the Remote Control
Press the Right Cursor button
Press the Right Cursor button
Press the Enter button
Press the Play button*

G

GE Digital GE1105P, GE Digital GE1106P

*Power on your player
Press stop and then press play on the player
Immediately you should see a language screen (if bought in usa you will have 3 options)
Select language
Then press the repeat button on your remote control.*

Genica GN-800

*Eject the tray
Key in on the Remote Control 2180
Enter the Region code 1-6
If you want all regions, press 9
To disable Macrovision:
Open the players tray
Key in from the Remote Control 4, 5, 6, 1
Turn Macrovision off by keying in 1, to turn it on again key in 0*

Genica GPX-DV2000

*Eject the tray
Key in on the Remote Control 2180
Enter the Region code 1-6
If you want all regions, press 9
To disable Macrovision:
Open the players tray
Key in from the Remote Control 4, 5, 6, 1
Turn Macrovision off by keying in 1, to turn it on again key in 0*

Goodmans DVD-3000

*Press Menu
Press 1, 6, 7 on your remote control
The key region box will pop up
Press the region you want
Press Mute*

Goodmans GDVD 135

*Turn on the player and eject the disc tray
On the remote press 2, 8, 1, 2 followed by enter
This gets you to the engineers menu
Press down until you reach COUNTRY CODE and press enter
The current region code will change to four dashes (----)
Input one number (0=Region Free, 1=USA, 2=Europe, etc) and press enter again
The new region code will now be displayed
You can exit by just pressing the eject button once more*

Goodmans GDVD 139

*Open the drive tray
Press the Setup button on your remote control
From the Setup Menu highlight the Custom Setup option
Press 3, 3, 3, 3, on your remote control
You should now be in a hidden menu where you may change the region
Region 0 is Multi Region. This also works on the GDVD 139.*

Goodmans GDVD 143FM

Press the Open button on your remote control to open the drive tray

Press the Setup button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

A code should appear on the top left hand corner of the onscreen display

Using the Left and Right direction buttons on your remote control, change the code to VER 1 for region 1 playback, VER 2 for region 2, and so on, or VER 255 for multi-region playback

NB: You may need to use the up and down buttons to select the region option before you change it

You can also change the code to VER 3001 to enable parental controls, or VER 3000 to disable these controls

NB: You may need to use the up and down buttons to select the parental controls option before you change it

You can also change the code to VER 4001 to enable Macrovision, or VER 4000 to disable this feature

NB: You may need to use the up and down buttons to select the Macrovision option before you change it

You can also change the code to VER 5001 to disable VCD/SVCD playback, or VER 5000 to enable this feature

NB: You may need to use the up and down buttons to select the VCD/SVCD playback option before you change it. Press the Setup button on your remote control

Goodmans GDVD 147

Power on the DVD player, you don't need to open the drawer

Press 1, 6, 7, 1 and 9 one by one on the remote

A hidden configuration menu comes up

Press OK on the remote, then 0 to change the configuration number to 0

You should now see that the region is set to ALL

Press EXIT on the remote

Goodmans GDVD-143FM

Press the Open button on your remote control to open the drive tray

Press the Setup button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

Press the Next button on your remote control

Press the Previous button on your remote control

A code should appear on the top left hand corner of the onscreen display

Using the Left and Right direction buttons on your remote control, change the code to VER 1 for region 1 playback, VER 2 for region 2, and so on, or VER 255 for multi-region playback

You may need to use the up and down buttons to select the region option before you change it

You can also change the code to VER 3001 to enable parental controls, or VER 3000 to disable these controls. You may need to use the up and down buttons to select the parental controls option before you change it. You can also change the code to VER 4001 to enable Macrovision, or VER 4000 to

disable this feature. You may need to use the up and down buttons to select the Macrovision option

before you change it. You can also change the code to VER 5001 to disable VCD/SVCD playback, or VER 5000 to enable this feature. You may need to use the up and down buttons to select the VCD/SVCD playback option before you change it. Press the Setup button on your remote control.

Goodmans DVD-3500PK

Open the player drawer

Press 9, 8, 1 and 7 on the remote

You will now be in the hidden menu where you can change the Region from 1 to 6 by pressing Enter on the Remote. Selecting 9 sets it to Region free

Goodmans GDVD 100

With no disc in the tray

Press set-up->menu->step->prev->next

It gives access to a secret menu

Region Bypass can be accessed.

Goodmans GDVD 124

Region Code Hack: Turn the power on / press 7,4 then select (if this doesn't work, try 77). Secret menu is now enabled. Scroll down with the directional button to set the country code to = 13 or 0 then press [select] Press set-up to exit & save Macrovision On-Off: Turn the power on / press 7,4 then select. Secret menu is now enabled). Scroll down to next page with the directional button and press select. Highlight Macrovision and press select, then type in either 1+0 (10) or 0 (0). Press set-up to exit.

Goodmans GDVD 125

Turn on DVD and open tray

Press SETUP

Select CUSTOM

Press 33333

This opens secret settings

Menu offering regions 0-6.

Goodmans GDVD 131

With no disc in tray

Press Setup on your remote control

Press the VOL+,VOL- , VOL+ ,VOL-

The onscreen display should show "VER #" indicating the currently set region

Using the left and right cursor keys, change the region code to 1 for R1, 2 for R2, and so on

Or set it to 255 for multi-region playback

Press the Setup button on your remote control.

Goodmans GDVD 134

Press Open/Close on your remote control

Press 2 on your remote control

Press 8 on your remote control

Press 1 on your remote control

Press 2 on your remote control

Press Enter on your remote control

Using the Down button on your remote control, select the Country Code option

Press Enter on your remote control

You will now be presented with four dashes

Press 1 on your remote control for region 1

Press 2 for region 2, and so on. Or press 0 for multi-region playback

Press Enter on your remote control. Press Open/Close on your remote control.

Goodmans DVD 1000

Press Menu

Press 1, 6, 7 on your remote control

The key region box will pop up

Press the region you want

Press Mute.

Go-Video DV 2140

These are the full instructions on how to copy the files mentioned above onto a CD - it seems to be for the LG5000 series but I tested on DV1240 and it worked fine. The MacroVision hack above did not work - anyone have one for that?

"This hack is supplied by LGRegionFree@yahoo.co.uk

This is the multiregion menu for the DVD-5000 and some DVD-6000 Series LG DVD players.

Follow the directions exactly.

Firstly you will need to download this zip file (5KB size)<http://www.area450.co.uk/images/LG5000.zip>

Once downloaded, unzip the file and follow these instructions, supplied by Andy :

Step 1

Download the file lg5000.zip by clicking on the link above.

Step 2

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

You will need Winzip or Easyzip as the file you have downloaded is in a compressed state or 'Zipped up'. Open the file lg5000.zip then extract or uncompress the file kpjc19_1.dvd to you hard drive in say your 'Mydocuments' folder. (Here is the confusing bit) it will create a directory in your Mydocuments folder called RMTM0000, this you accept and go with the flow.

Step 3

You need a CD writer to burn or write (another familiar term is formatting the disc) a new disk which will copy the files you've just extracted or uncompressed ie RMTM0000.

Step 4

You need CD burning software like Easy CD Creator, Nero Burning Rom or CD Clone

Step 5

Buy that CD-R disc to burn to. Now I've read the text in the file about not using a 700mb capacity CD-R but mine worked. For information, I used a Memorex CD-R 700MB 24x from Staples (24x means the speed to which data can be transferred or read). This speed I think is the key to success not the capacity or size of the CDR.

Step 6

*Using the CD burning software you need to create a Data CD not audio etc, and add the directory RMTM0000 from your Mydocuments Folder in Step 2. That's all you need ! As the real file is automatically copied over as well. (If you've not used Nero or Easy before, there are instructions on the main Area 450 site relating to Sampo DVD players, but the same principles apply: check the second and third pages of the article here <http://www.area450.com/firmware/burnfirmware.htm>). *** When burning the disc do not use DirectCD ****

Step 7

Switch on your player and TV and insert the newly burned disc. When prompted select 0 for multiregion and then ENTER, power off and you're ready to go !

Thanks again to Allan C for all your efforts

Govideo DVP855

Power on. Press "open"

Press "set-up"

Highlight "custom"

Press 3333

A new menu appears called "Secret1". Select region or choose "0" for region-free

Go-Video DVR4200

Code 1

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

*Press pause
Enter Pi until FF appears (314159)
Enter region desired (0 for region-free)
Press pause.*

*Code 2
Go to DVD mode
Press Setup/Menu on the remote
Go to TV Aspect and pick 16:9 Wide
Hit the corners: type 1397139
Hit Enter.*

Go-Video DVP1165

*Turn on the DVD player.
Do NOT put a DVD in the drive.
Press the PLAY button on the remote control 8 times.
Press 01060 (last number 0 for region free).
Number 9 will appear on the screen - press number 9 on the remote control until it disappears from the screen.*

GPX DV2000 & GPX DV3000

*Code 1
Open tray
Press 8, 9, 2 and 6 on your remote control
Press 9 on your remote control for Region Free, 1 for Region 1, 2 for Region 2, etc*

*Code 2
Eject tray
Key in 2180 on the Remote Control
Enter the Region code 1-6
If you want all regions, press 9 To disable Macrovision:
Open the tray
Key in 4, 5, 6, 1 from the Remote
Turn Macrovision off by keying in 1
To turn it on again key in 0.*

Gradiente D-10

*Code 1
Without disc
Press 31415900 "EXIT"*

Code 2

*Without disc
Press "0" "0" and then "exit"
This will set it to all regions.*

*Code 3
In stand-by mode
From remote control, press 0 0 1 for R1, 0 0 2 for R2, 0 0 3 for R3, and so on, which you desire.*

Gradiente D-12

*Code 1
Turn the player on and ensure there is no disk in the tray
Key in the following code from the Remote Control 31415900
Then press "EXIT"
You should receive a message in English stating the machine is now Region Free.
Machine is now in Region Free mode*

*Code 2
Turn the player on and ensure there is no disc in the tray
From the Remote Control key in 0, 0 and Clear, for Region Free operation
0, 0, 1 for Region 1
0, 0, 2 for Region 2 and so on*

Gradiente D-22

*Turn the player on and ensure there is no disc in the tray
From the Remote Control key in 0, 0 and Clear, for Region Free operation
0, 0, 1 for Region 1
0, 0, 2 for Region 2 and so on*

Gradiente DVD-5000

*Changing to Region 1
Turn on the power
Verify the region code by pressing '00' and '+10'
Turn player on standby
Press '00' and the region code you want (you can't select Region 0)
Verify the region code again by pressing '00' and '+10'
Changing to Region 2*

Repeat steps one to 5, changing the code at step 4.

Gradiente DVD-6500

Turn on the DVD player

Press 0, 0, CLEAR

An "AUTO" message will appear on TV

The player is now region free

Gradiente DVD-6500 HT

Turn on the DVD player

Press 0, 0, CLEAR

An "AUTO" message will appear on TV

The player is now region free

Gradiente K-30

Ensure there is no disc in the players tray

Key in on the Remote Control 0, 0 and then Clear

You should see a message "AUTO" appear indicating that the machine is Region free

Grundig Xenaro GDP-5100

Press 5,5,3,2, Enter 8500

Choose menu "1", System messages to "ON"

Go back to service menu

Choose code "1" system information , enter code 70307196

Then you come to a menu called "system configurations"

choose "1" system messages with "ok"

You are now in "change data", Now you can choose from 1-8 or none. (regions)

none = region free, close with "i" on remote

Go to the service menu and set System configurations to "ON"

Grundig GDV-100D

NOTE: Please note that this conversion may only work a maximum of 25 times!

Press the buttons Play, 2, 7 and 4 on your remote control. The onscreen display should look like this:

' ____ '

Using the number keys on your remote control, enter the code 002000128156.

Press the Play button on your remote control.

The onscreen display should turn red, indicating that your region settings have been changed.

Grundig GDV-130

*Press the Open button on the Remote Control
Then press Setup
Press the 9 button on the Remote Region Free, or 1 for Region 1, 2 for Region 2, and so on
Press the buttons 2, 0, 0 and then 0 on the Remote
Then press Step, Shuffle, and the Next button*

Grundig GDV-200

*Open the DVD Player CD Tray
Place a Region 1 disc in the tray, but don't close it
Press the buttons 0, 1, 2 and then 3 on the Remote Control in order, one at a time
Press the Play button on either the Remote or the player
To change the player back to Region 2 only functionality:
Open the DVD player CD tray
Place a Region 2 disc in the tray, but don't close it
Press the buttons Return and then Play on the Remote Control in order, one at a time*

Grundig GDV-210

*Open the DVD Player CD Tray
Place a Region 1 disc in the tray, but don't close it
Press the buttons 0, 1, 2 and then 3 on the Remote Control in order, one at a time
Press the Play button on either the Remote or the player
To change the player back to Region 2 only functionality:
Open the DVD player CD tray
Place a Region 2 disc in the tray, but don't close it
Press the buttons Return and then Play on the Remote Control in order, one at a time*

Grundig GDV-211A

*Power on your machine
Press the Stop, Open/Close and Skip buttons on your player simultaneously and hold down for 3 seconds. A hidden menu should appear. Release the Stop, Open/Close and Skip buttons on your player. Select Region Number from the hidden menu and choose the Free option
Exit the menu*

Grundig GDV-212

*Open the DVD Player CD Tray
Place a Region 1 disc in the tray, but don't close it
Press the buttons 0, 1, 2 and then 3 on the Remote Control in order, one at a time
Press the Play button on either the Remote or the player
To change the player back to Region 2 only functionality:
Open the DVD players tray*

*Place a Region 2 disc in the tray, but don't close it
Press the buttons Return and then Play on the Remote Control in order, one at a time*

Grundig GDV-220

*Converting this player to multi-region:
Switch the player on
Press and hold the following buttons for 3 seconds, STOP, OPEN and SKIP
When the hidden menu appears select region free or a specific region
Exit the menu*

Grundig GDV-520

*Press Menu
Now key in 1, 6, 7
Press 1 for Region 1, 2 for Region 2 and so on
For Multi-Region mode press Mute*

Grundig GDV-620HT

*Open the player drawer
Press 9, 8, 1 and 7 on the Remote
You will now be in the hidden menu where you can change the Region from
1 to 6 by pressing. Enter on the Remote. Selecting 9 sets it to Region free
You can also disable Macrovision from this screen*

Grundig Xenaro GDP 6150

*Get into the Service Menu. This is not intended for home users, only for service technicians
Therefore you're asked for an access code, it is 8500 for all Xenaro DVD Players
Activate "System Messages" using the Service Menu. Leave the Service Menu and get into the "System
Informations" Menu. When you see the System Infos, enter the following code on the remote control
Note that the player will not print the code on the screen, you have to enter it blindly
The code is: 70307192 (This is the one that differs from the 5100 model.)
A system message should appear. It will not appear if you got the code wrong or if you did not
activate system messages in the service menu. Confirm the message with OK on your remote.
Now a window appears in which you can change your region code. Values 1 to 8 and "none" are
possible. "none" will disable the internal check of region codes (i.e. makes the player CodeFree), but
RCE titles might not work. This doesn't really matter, as you can change the code as often as you wish
to match a specific disc. If you want to, you can disable System Messages again using the Service
Menu after you changed the code.*

Grunkel DVG-20NT

With the disc out and on press, SETUP, STOP, |<<, >>|

H

Harmon DVD-1

Put the player into Standby mode, with no disc in the tray.

On the Remote Control press: 3 1 4 1 5 9 2.

Then press the zone you want: 1-4.

Power the player ON.

You should now be able to play any region

Harmon DVD-10

Turn the player on

Wait until 'No disc' is displayed

Press the buttons 3, 1, 4, 1, 5, 9 and 2 on the Remote Control

The press 1 for Region 1, 2 for Region 2, 3 for Region 3, or 4 for Region 4 etc.

The display should now show 'Power On'

Harmon DVD-20

Turn the player on

Wait until 'No disc' is displayed

Press the buttons 3, 1, 4, 1, 5, 9 and 2 on the Remote Control

The press 1 for Region 1, 2 for Region 2, 3 for Region 3, or 4 for Region 4 etc.

The display should now show 'Power On'

Harman Kardon DVD31

Ensure there is no disc in the tray.

Put player into standby.

On the remote control press clear while switching player on.

Press OSD to bring up the screen menu.

Enter the code 314159+region no. ie 3141590 for region free

If at any time after a code change the player is in standby and the clear button is pressed when the player is turned on, the player will revert back to the original code of sale

Harmon DVD-5

Put the player into Standby mode with and ensure there is no disc in the tray

Key in the following on the Remote Control: 3, 1, 4, 1, 5, 9 2

Now key in the number of the Region you require: 1 for Region 1, 2 for Region 2 etc.

Turn the player on. Open the tray and play the disc of your choice

Note: The Region code is stored when the player is turned off, so therefore you will need to change the region for each region DVD you wish to play

Haus H-2001-S

(Press "STOP" twice. Press "SETUP". Press "VOL+ & VOL-" repeat the sequence twice in quick succession (+, -, +, -). the TV screen will display "VER #" Press left/right cursor keys to change the # - (1,2,3,4,5,6 for desired Zone Code) For All Code -Press 255. Press "SETUP" . The system Zone setting is then completed.

Haus H-615L-S 5.1

At Logo screen, press [STOP] key. Input the digit number in the sequence [2,3,1,7]. Then input the region code, 0 for all, Power off the DVD player . New region code settings will be activated when the DVD is powered on again Or (Press, "STOP" twice. Press "1999" The TV screen will show a hidden set-up screen. Select "REGION CODE". And Press, "ENTER" to select desired region code "1 to 6" or "All" of All Code. 1.Press "STOP" button twice 2.Press number button sequence "7","9","2","8" and "1" to turn OFF Macrovision protection disabled (video friendly) or 3.Press number button sequence "7","9","2","8" and "0" to turn ON Macrovision protection enabled (not video friendly)

Himage DVD-2290

Press the Open button on the Remote Control to open the drive tray

Press the buttons 8, 8, 0 and 0, on the Remote Control

Now press 1 for Region 1, 2 for Region 2, etc, or 9 for Region Free

Press the Open button on the Remote to close the drive tray

Himage DVD-8800

Press the Open button on the Remote Control to open the drive tray

Press the buttons 8, 8, 0 and 0, on the Remote Control

Now press 1 for Region 1, 2 for Region 2, etc, or 9 for Region Free

Press the Open button on the Remote to close the drive tray

Hitachi DV-P250E

Power on your player whilst pressing both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player . You will now need to select a language option between 1 and 6

To convert this player to Multi-Region playback:

Press the Repeat button on the Remote Control

Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate

For Region 1 use 2, 9, 3, 3 and 4, For Region 2 use 3, 8, 7, 6 and 7

For Region 3 use 5, 6, 7, 3 and 2, For Region 4 use 7, 6, 8, 8 and 4

For Region 5 use 5, 3, 8, 1 and 4, For Region 6 use 2, 4, 4, 6 and 2

Press the 9 button on the Remote Control for Region free, or 1 for Region 1, 2 for Region 2 etc. Press the Open button on your player; Press the Standby button on the Remote Control

Hitachi DV-P305E

Power on your player whilst pressing both the Play and Stop buttons on the front player After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

To convert this player to Multi-Region playback:

Press the Repeat button on the Remote Control

Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate

For Region 1 use 2, 9, 3, 3 and 4, For Region 2 use 3, 8, 7, 6 and 7

For Region 3 use 5, 6, 7, 3 and 2, For Region 4 use 7, 6, 8, 8 and 4

For Region 5 use 5, 3, 8, 1 and 4, For Region 6 use 2, 4, 4, 6 and 2

Press the 9 button on the Remote Control for Region free, or 1 for Region 1, 2 for Region 2 etc. Press the Open button on your player; Press the Standby button on the Remote Control

Hitachi DVP305U

Power on your player whilst pressing hold both the Play and Stop buttons on the front player After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player You will now need to select a language option between 1 and 6 To convert this player to Multi-Region playback: Press the Repeat button on the Remote Control Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate for Region 1 use 2, 9, 3, 3 and 4 for Region 2 use 3, 8, 7, 6 and 7 for Region 3 use 5, 6, 7, 3 and 2 for Region 4 use 7, 6, 8, 8 and 4 for Region 5 use 5, 3, 8, 1 and 4 for Region 6 use 2, 4, 4, 6 and 2 A code should be displayed on the screen indicating the current Region setting of your unit Press the 9 button on the Remote Control for Region free, or 1 for Region 1, 2 for Region 2 and so on Press the Open button on your player Press the Standby button on the Remote Control If the player sticks on FBI Warning screens: Press Forward Search x2 or faster, the disc should skip straight to the main feature

Hitachi DVP315E

Switch On

Eject any DVD/VCD media and make sure the tray is closed

Press REPEAT on your remote control

On your original Hitachi Remote control SLOWLY enter: 38767

"02" should appear in the top left corner, this is the current region code

Press 9 on your remote and you are now region free.

Hitachi DV-P505

Press the Setup button on the Remote

Press the Last button

Press the Skip Previous button

Press the Skip Next button

You will now enter a menu where you can alter the player region

Hitachi DV-P415U and Hitachi DV-P415

Open the DVD drive

While Open

Press and hold Enter.

Enter 1 for region 1 and so on insert your region (1-6) DVD.

Open the players drawer

*Press and hold the **Enter** button on the Remote control*

*Whilst holding **Enter** down, press 1 for Region 1, 2 for Region 2 and so on (0 for all regions)*

Release and play a DVD

Hitachi DV-P515E

Power on your player whilst pressing both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

To convert this player to Multi-Region playback:

Press the Repeat button on the Remote Control

Using the Remote enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate

For Region 1 use 2, 9, 3, 3 and 4, For Region 2 use 3, 8, 7, 6 and 7

For Region 3 use 5, 6, 7, 3 and 2, For Region 4 use 7, 6, 8, 8 and 4

For Region 5 use 5, 3, 8, 1 and 4, For Region 6 use 2, 4, 4, 6 and 2

Press the 9 button on the Remote Control for Region free, or 1 for Region 1, 2 for Region 2 etc. Press the Open button on your player; Press the Standby button on the Remote Control

Hitachi HTD-K150

Open the DVD player CD Tray

Press Volume Up on your Remote

Press Fast Forward on your Remote

The on screen display will show 321 followed by the current Region code

Press Volume Up on your Remote

Press Fast Forward on your Remote

Repeat steps 5 and 6 until the desired Region code is shown on the display

Press and hold the Angle button on the Remote for approximately five seconds to select the Region
Hiteker AD-600A

Press the Set-up button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden set-up page, and can change the player to any Region or set it to Region Free.

Hiteker BI-600

Turn unit on (on the remote) do the following. Press set-up. Press stop. Press skip left. Press skip right. The hidden menu will appear select regions and choose bypass. Its now region free, you can also shut off macrovision.

Hiteker HE-1120

Turn on player; make sure there's no disk inside! Press set-up, press stop, press skip left |<< , press skip right |>> now you are in factory settings screen you see: Version: (my player):V25J01131 region ID (standard on region 2) CSS (for new protection disks?)Standard auto (on) Macrovision (standard auto)(on) Automute Dither now go with remote on region (blue buttons on remote), press right and choose "bypass" confirm with enter! Macrovision same deal set to "off" confirm with enter (play).

Hoyo DVD-8050D

Press Eject leave tray open.

Press 1, 1, 1 and 1 followed by the region number you want.

*You may see *** appear in the top left of the screen, this is the point at which you change Region Close tray and play the movie.*

Hoyo 713

Switch the DVD Player on

Press Setup

Press Slow

Press Skip left

Press Skip right

Then you can select the region code with the cursor

Hoyo 715

Switch the DVD Player on

Press Setup

Press Slow

Press Skip left

*Press Skip right
Then you can select the region code with the cursor*

Hyundai HU-2010

Open the discs tray. Click on SETUP in your remote control. Got the sub-menu "Custom Setup" by pressing the right arrow on your remote 3 times. Click four times on the number 3 on your remote control. You should be taken into a new menu "Secret1 Menu" where you can choose any region code you like, or 0 for Multizone. Click on SETUP in your remote control to leave the menu.

Hyundai DVD-320A

*Press the Open/Close button on your remote control to open the disc tray (keep open)
Press the 3 button on your remote control
Press the 8 button on your remote control
Press the 0 button on your remote control
Press the 0 button on your remote control
Press the Menu button on your remote control
Using the arrow buttons on your remote control, change the region to 1 for region 1, 2 for region 2, etc. Press the Enter button on your remote control
Press the Menu button on your remote control*

For the new models

*Using your remote control, press the buttons 7 and 7, in order, one at a time
Press the Play button on your remote control
You should now be in a hidden menu
Using the Up and Down buttons on your remote control, highlight the Country Code option
Press the Enter button on your remote control
Using your remote control, press the 1 button for region 1, 2 for region 2, and so on, or 0 for multi-region playback. Press the Enter button on your remote control
Press the Play button on your remote control*

Hyundai HDV-2000

*Open the tray
Place a disc in the tray but don't close it
Press the Enter button on the players Remote Control
Press the Play button on the players Remote Control
Press buttons 2, 5 and 8 on the players Remote Control
Press 1 for Region 1, 2 for Region 2, 4 for Region 4 etc. on your Remote Control
An error message will appear, after this your machine should be set the region specified
Play your disc*

I

Initial IDM 1731

Hi all you guys who need region unlock codes for a Initial portable DVD players.. Here they come.

Turn on the player. (No DVD in the player)

Push SET UP. (On remote)

Scroll down to "Preferences menu"

Push the play key (Centre arrow) no unlock menu, just do the following.

Enter one of the key codes from the list (your unit) with the remote.

Press left arrow, then down arrow.

"no sign of the key code entry is displayed until the end of the sequence"

*If the code is correct, a grey bar will be displayed in the centre. The words
REGION CODE 1 will be displayed.*

*Now enter the region code you want to use from 1 to 6, 0 and 9 have no
effect !*

*After you have made your selection, press the play key (centre arrow)
and the code will be locked.*

CODE KEYS by unit:

IDM 830

212425

251131

IDM 7058

255451

IDM new 1731 04' model

251535

IDM 1731 03' model

251131

245515

251535

233212

255251

225435

IDM 9520

245512

233212

IDM 10 Car Change

211554

IDM 1810A
212425
251131

IDM 9530
245512
222443

IDM DVD 5820
245545
233112

Note; 04' model of Initial 1731 has the bottom attaching battery.

Insignia I-PD720

** power on (left side of unit) and press "open" to flip open the disk door before it starts playing*

Now, using the remote (RC-1700A)

** Press SETUP
* navigate to "preferences"
* Press 2+5+2+3+1+5+LEFT+DOWN*

A window appears displaying the current region code (probably 1)

** Press the "10/0" key
* exit the hidden menu by pressing SETUP*

Irradio DVD-2

*Ensure the tray is empty
Press Menu
Press 9
Press Open / Close
Press 5
Region 1 - 6 should be displayed on screen
Enter Region code
Press Mute*

Irradio DVD-3

*Ensure the tray is empty
Press Menu
Press 9
Press Open / Close
Press 5
Region 1 - 6 should be displayed on screen
Enter Region code*

Press Mute

J

JNL 7001

Open the tray

Input the numerical sequence 2180 followed by the Region number of the software you wish to play (use 9 for Region Free)

Close the tray

JNL 7003

Open the Tray

Key in on the Remote Control 8, 4, 2, 1

The Region Menu should be displayed

Use the scroll buttons to select the required Region

Close the tray to select and complete

JNL Digivision 7002

Open the tray

Input the numerical sequence 2180 followed by the Region number of the software you wish to play (use 9 for Region Free)

Close the tray

Jocel MP-3000

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free. You can also disable Macrovision from this menu.

JVC XV-N5

Press the Power button on the player to turn it off

Wait 5 seconds

Press and hold the buttons DVD Menu and On Screen on the player together, and then press the Power button on the player to turn it back on

Release the DVD Menu and On Screen buttons

Press the Standby button on your player, the display should now show either "TEST 2", "TEST 4" or "TEST 6" depending on the player region

Press the DVD Menu button on your player twice in a row, the display should now show "000 5858"

By pressing the Up and Down cursors buttons, change the first three digits until they read "02E"

By pressing the Right and Left cursors buttons, change the last four digits until they read "0000" for Region Free, "0101" for Region 1, "0202" for Region 2, "0404" for Region 4, "0808" for Region 8, and finally "2020" for Region 20.

If you experience difficulties with Region 4 discs, change the above setting to "0458" and make sure that PAL or NTSC is correctly set on your player

Press the Enter button on your player to confirm the region change

Press the Standby button on the player to turn it off

Wait 5 seconds

Press the Standby button on the player to turn it on.

JVC XV-511BK

Make sure there is no Disc in the tray. Shut off the unit and unplug it from the AC outlet. Press and Hold the "Play" and "Open/Close" keys, simultaneously on the player and not the remote control.

While holding these keys, plug the AC cord back into the outlet. (TEST and CPU ver# will appear on the display). Press DVD Menu twice on the remote.

When the display reads 000 5858 use the up and down buttons to change the 000 to 02E. Using the Left and Right arrow buttons, change the last four digits until they read 0000 for Region Free, 0101 for Region 1, 0202 for Region 2 or 0404 for Region 4. Press Enter on the player. Press Standby and wait 5 seconds. Press Standby again. Your player is now set to the region you requested. If you find some titles do not play on the region 0 setting, you may have to hard select the appropriate region.

JVC XV-515

Locate wire jumper B532 on the printed circuit, near the front panel. It can be found underneath the connector linking this board to the above one. Cut the jumper and turn the power on. Enter password 5963. Turn off the machine and on again.

JVC XV-522

Make sure there is no disk in the tray. Unplug mains AC. on the unit press and hold "play" and "open/close". While holding these keys plug in mains power. Release these keys and test appears on the display. Press "3D-ponic". Press menu twice on the remote. Display reads 000 5858 use down buttons to 000 to 02e 9 change last 4 digits to the following 0000 for region free 0101 for region 1 0202 for region 2 press enter on the remote. Press standby and wait 5 seconds. Press standby again and the player is now set to the region that u desire If this doesn't work try again with pushing the 3d-ponic button

JVC XV-D2000

Press Power to turn machine off. Wait 5 seconds. Press and hold DVD Menu and On Screen on the machine together, and then press Power on the machine to switch it back on. Let go of the DVD Menu and On Screen buttons. Press Standby on the machine, the display should now show either "TEST 2", "TEST4", or "TEST 6" depending on the machines existing region setting. Press DVD Menu on the machine twice in a row, and the display should now show "000 5858". Press the Up and Down cursor buttons, and change the first three digits to "02E". Press the Right and Left cursor buttons, and change the last four digits to "0000" for Region Free, "0101" for Region 1, "0202" for Region 2,

*"0404" for Region 4, "0808" for Region 8, and finally "2020" for Region 20 ***See Note at bottom. If you are having problems with Region 4 disks change the above setting to "0458" and make sure PAL or NTSC is correctly set on your machine. Press Enter to confirm the Region change. Press Standby on the machine to turn it off. Wait 5 seconds. Press Standby on the machine to turn it on.*

JVC XV-501BK

*Ensure there is no disc in the players draw
Turn the player off and unplug the power lead
Press and hold the On Screen and Title keys simultaneously and plug the AC cord back in while holding the keys pressed down
Release the keys when you see Test JC3 or Test JC2.
Press Enter
The resume light will turn on
Press the Power button to turn the player off
Press the Power button again to turn on your player
Note: If steps 7 and 8 don't work, unplug and re-plug your player instead of using the power switch to turn the player on and off.*

JVC XV-SD302

*Make sure there is no disc in the player
Unplug dvd player
Plug system back in while holding the "Open/Close" and the "play" buttons (ON THE PLAYER, NOT the remote)
The word "Test" should come up on the player Display
Press "9" on the remote until the display on the player says "00A0 0000"
Press "Standby/on" (remote or player)
Wait 15 seconds
Turn player back on*

*YOUR PLAYER IS NOW REGION FREE!!!!
(This Hack also works for the 300 *Black* version)*

K

Kendo DVD-530102

*Power on the player
Press "Open\Close"
Then key in 3, 3, 0, 8, 8 on the Remote Control
Now press a number for the region code:
1 = Region 1, 2 = Region 2
3 = Region 3, 4 = Region 4
5 = Region 5, 6 = Region 6
0 = Multi Region*

Kenwood DVF-5010

Before loading a disc, press and hold the play button on the unit itself (NOT remote control) for about five seconds. The display panel will then show what region you are (e.g. in Australia it will say Oceania). By using the remote up and down keys, you can then scroll through the regions until you find the region you require. Select it by hitting the enter button. The display will then say "Initial OK!". You are ready to put a disc in.

Kenwood DVF 3530

*When the region violation screen appears press the menu button twice.
This will cause the LED on the player to change to 01 for a brief period. after the readout disappears press menu twice more.*

Keymat V560

Ensure the players tray is empty and closed

On the Remote control:

Press SETUP

On the players Front Panel:

Press NEXT

Press STOP

Press PAUSE/STEP

Press PREV

Press NEXT

You should now see a new MENU. Go to Select Region and make your choice:

Kiss 1302

Switch it on

Press Setup

Press Slow

Press Skip left

Press Skip right

Use the Right Arrow button to select the desired region:

A = Region 1, B = Region 2, C = Region 3, D = Region 4

*E = Region 5, F = Region 6, *** Region Free*

Press Setup

Kiss DVD 1502

Switch it on

Press Setup

Press Slow

Press Skip left

Press Skip right

Use the Right Arrow button to select the desired region:

A = Region 1, B = Region 2, C = Region 3, D = Region 4

*E = Region 5, F = Region 6, *** Region Free*

Press Setup
Kiss DP-330

On Remote Press: Eject, Clear, 276, Enter.

Kiss 715

Switch it on
Press Setup
Press Slow
Press Skip left
Press Skip right
Use the Right Arrow button to select the desired region:
A = Region 1, B = Region 2, C = Region 3, D = Region 4
*E = Region 5, F = Region 6, *** Region Free . Press Setup*

KLH DVD-33

Turn on the DVD Player. Use the FCN key to put it in DVD mode. Open the disc tray and wait for the display to say "\OPEN\". On the remote, press 9817. A menu will appear that will allow you to change the region (1,2,3,4,5,6, or 9) and turn macrovision on or off. Use the arrow buttons to select which option you want to change. Use the enter button to change the desired setting. Press the return button to leave the menu. Play DVD's as usual.

Konka KD-1800U

Turn on player and open tray
On the Remote key in 6, 6, 6, 6, Select
A hidden menu will appear on your TV screen 'D-1800 System Setup'
Use the directional buttons to scroll down to 'Country Code'
Press Select on the Remote and change the setting to the Region Code you need, 1 thru 6. Changing it to 13 to make it code free
After entering the desired number press Select
From this menu you can change other settings, but to exit the menu just press Return

Konka KD-1900

Turn on player and open tray
On the Remote key in 6, 6, 6, 6, Select
A hidden menu will appear on your TV screen 'D-1800 System Setup'
Use the directional buttons to scroll down to 'Country Code'
Press Select on the Remote and change the setting to the Region Code you need, 1 thru 6. Changing it to 13 to make it code free
After entering the desired number press Select
From this menu you can change other settings, but to exit the menu just press Return

Koss KD365

To play DVDs other than region 1 encoded ones:

- 1. Press the "menu" key*
- 2. Press the numbers 1,6,7,1,9*
- 3. A menu should appear on the upper-right corner of the tv screen asking which region you wish to play, 0 for region free, 2 for UK...*
- 4. Press the number of the desired region, wait a second or two and you should be able to load and view the DVD*

<http://www.videohelp.com/dvdhacks.php?dvdplayer=KOSS+KD365&hits=50&Search=Search>

Koss KS3112-2

(No disc in tray) press 16719

You see "hidden menu".

- Press OK

- Change The CONFIG to 0 and set It Back To PAL or NTSC In Display

(Because Config 0 is PAL)

The above technique works, partially. The trick is resetting the Display mode to NTSC. On my test, the TV went very distorted/scrolls once the Configuration was set to 0.

After doing the above to get to Region 0 and if the screen distorts/scrolls.....

To get back to NTSC:

Turn off and unplug the DVD player for 10 sec.

Plug it back in and turn on (if not already on)

Push the 'down arrow' 3 times and push 'OK'

Push the 'down arrow' 1 time and push 'OK'

You should be back to factory default but your region code will stay at Zero.

Koss KS2503

With no disc in trays. Go to DVD menu. Wait for it to read "NO DISC". Press SLOWLY 16719. A new menu will appear. Press OK when on Configuration and select 0. All the others will change. Make sure the TV type is still set to NSTC (or is it NCTS?). Then exit out and you're all set.

L

Labway X-Wave 1000

Turn the player on without a disc in the tray

Press Setup

Press Step

Press Fast Forward

Press Fast Backward

You are now in the 'miscellaneous menu'

Press Pause

Press Stop

Press + or - to go to the required region or go to 00 to make the player region free

Exit the menu

Turn off the player

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Turn it on and it's region free or in the region you selected

Labway X-Wave 900

Turn the player on without a disc in the tray

Press Setup

Press Step

Press Fast Forward

Press Fast Backward

You are now in the 'miscellaneous menu'

Press Pause

Press Stop

Press + or - to go to the required region or go to 00 to make the player region free

Exit the menu

Turn off the player

Turn it on and it's region free or in the region you selected

Landel DV-268

Power on

Open the disc tray

Push "Menu" button

Enter 20110

The words "set Ok" should appear on the screen

Turn off power and on again.

Lasonic DVD-1100

Open tray, setup, vol+, vol-, vol+, vol-. Version number appears in top right corner set 255 using left-right arrows. Close tray.

Lasonic DVD-2000

Press Eject leave tray open.

Press 1, 1, 1 and 1 followed by the region number you want.

Close tray and play the movie.

Lasonic DVD-2100

Open disc tray and leave it open. Press set-up, press Vol.+ then Vol.-, Press Vol.+ then Vol.- again. Top right hand corner will appear reg.1 and use the blue arrow on the remote to choose which region you want or select ver.255=meaning all region. After selecting press set-up and it'll work.

Lasonic DVD-3200

Press Eject leave tray open.

Press 1, 1, 1 and 1 followed by the region number you want.

Close tray and play the movie.

Lasonic DVD-8050

Press Eject leave tray open.

Press 1, 1, 1 and 1 followed by the region number you want.

Close tray and play the movie.

Lecson DVD-900

Press the Open/Close button on the Remote Control

Press the Zoom button, Press the A-B button

Press the Up button, Press the Left button

Press the Down button, Press the Right button

The words Region Free should briefly appear on screen confirming that your player is now region free

Lenco DVD-02

Turn the player on and open the tray

Enter the code 3, 3, 0, 8, 8, 0 on the Remote. After every number you need to wait until the hand disappears. Your player is Region free

Lenoxx DVD2003

DVD on with No disc, Press SETUP NEXT PREV NEXT PREV with remote. You'll see "VER 1" on the upper left corner. With LEFT and RIGHT you can change the value. Change it to 255 (Region Free).

<http://www.videohelp.com/dvdhacks.php?select=Lenoxx+DVD2003>

1. DVD on
2. No disc
3. Press SETUP NEXT PREV NEXT PREV with remote. You'll see "VER 1" on the upperleft corner.
4. With LEFT and RIGHT you can change the value. Change it to 255 (Region Free)
5. With UP and DOWN you can move to the next item. The next ones are 3001, 4001, Change them to 3000, 4000, 3000 and 4000 turn off Macrovision.

Lenoxx DVD-9000

Open the DVD tray

Key in on the Remote Control the code 9, 6, 5, 3

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

*If you see 00 in the top right corner of your screen it means it is region free
If you now select 01, 02, 03, 04, 05 or 06 it will select a region manually*

LG DV-4941P

*Press off/on
Press Pause
Key in 314159 the line "code dod =" will appear
Press 0 (zero)
Press Pause
Turn the player off. Turn the player on*

LG DVD-3000

*Press the Pause button on your Remote Control
Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9
Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control
Power off your player and wait a few seconds
Power on your player*

LG 2300

With "no disk" on tray, press sequentially in the remote control PAUSE,3,1,4,5,9: code -- will appear in the display. Enter the region or 0 for region free.

LG DVD-3200E

*Press the Pause button on your Remote Control
Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9
Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control
Power off your player and wait a few seconds
Power on your player*

**LG 3200E, LG 3520, LG 3350E, LG 4351,
LG 4721P, LG 4730, LG 4821P, LG 4951,
LG 4950S, LG 5083, LG 5822N, LG 593W,
LG H13**

(Same as above - 3200E).

**LG DVD-5063, 5083,
5095, 5183, 5253, 1000, 2000**

Email me for instructions: fun_da_mentalist@hotmail.com

LG DVD-3350E

*Press the Pause button on your Remote Control
Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9
Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control
Power off your player and wait a few seconds
Power on your player*

LG DVP-H13

*Press the Pause button on your Remote Control
Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9
Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control
Power off your player and wait a few seconds
Power on your player*

LG DVD-4710

*Power on the player with no disc in the drive.
Press "PAUSE" on the remote.
Enter "314159" on the remote(the word CODE appears on the display)
Enter "0" on the remote(0=All Regions, 1=Region 1, 2=Region 2, etc)
Press "PAUSE" on the remote.
Power the player off and then back on.
Note if you are having trouble getting the hack to work, try pressing "STOP" on the remote before you press "PAUSE" for the first time.*

LG V8824W

I guarantee that this works for the V8824W model.

*Remove any discs and turn on DVD.
Press PAUSE
Enter 314159
The hidden region code menu will now appear.
Set code you want- 0 for region free, 1 for region 1 etc then...
Press PAUSE!*

Lifetec LT-7989

*Ensure there is no disc in the players draw
Press "Menu" on the Remote Control
Then press "1"*

Then press "6"

Then press "7"

Then press "Mute"

Note: it MAY not be necessary to press "Menu" at step 2.

So if it doesn't work pressing this try the hack skipping step 2.

Limit DVD-8080a & 8072

Turn on the player and press the Open/Close button

Enter '8 4 2 1' on Remote Control. The current Region will be displayed

Press 'OK' repeatedly until Region code shows '9'

Press 'Open/Close' button again to complete the change

Limit JDV-300

Put the player into Standby mode

Press Standby

Press open drive

Key in the following sequence of numbers: 8, 9, 2, 6

Enter the region you require, 1 for Region 1, 2 for Region 2 etc. 9 will make it multi-region

Limit JDV-300A

Put the player into Standby mode

Press Standby

Press Open Drive

Key in the following sequence of numbers: 8, 9, 2, 6

Enter the region you require, 1 for Region 1, 2 for Region 2 etc. 9 will make it multi-region

LiteOnLVW-5001

<http://www.videohelp.com/dvdhacks.php?dvdplayer=LiteOn+LVW-5001+&hits=50&Search=Search>

- 1. Make sure there no disc in player*
- 2. On your remote press RIGHT key (the key to the right of ENTER key)*
- 3. Enter 800*
- 4. Enter Region Code*
- 5. Press ENTER key*

For example for Region 0 press RIGHT + 8000 + ENTER key combination.

You will not see any confirmation. The only indication is a slight change of the serial number. Check the SETUP menu to see the serial number.

You will see a number like this...

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Before Hack:

xxxxxx-xxxx-xxxx (1xx-xxxx)

After Hack (say you selected region code 0)

xxxxxx-xxxx-xxxx (0xx-xxxx)

I don't have any DVDs other than Region 1 or 0 on hand, but I tested the player with Region 1 Charlie's Angels which I know has Region Code Enhancement. After changing the player to Region 2 I put in the DVD and, sure enough, the disc would not play. On the TV screen the DVD only displayed the warning and map regarding Region Coding. This shows that the region code of the player had in fact been changed.

Remember to use your ORIGINAL serial number when checking Lite-On's website for firmware updates to make sure you get the proper one.

LiteOnLVW-5005

Enter set-up screen by pressing setup on the Remote Control.

2. Move cursor to 'Exit'

3. Using remote control: key 2,9,6,0

4. On pop-up menu select 'Region Free'

5. Hit Setup again to go close setup menu.

<http://www.videohelp.com/dvdhacks.php?dvdplayer=lite-on+lvw-5005+&hits=50&Search=Search>

Loewe Xemix

Turn the machine ON and remove any discs

When the display shows 'NO DISC'

Enter 'Play', '159'

The display will change to show 11 dashes ('-----')

For region 1 enter the 12 digit code '005000128156',

for region 2 enter the 12 digit code '002000128156'

Press 'Play' and the screen will turn red and then reset

Logix DVD-3000

Press the Open button on your Remote Control

Press the Setup button

Press the 9 button for Region Free, or 1 for Region 1, 2 for Region 2, and so on

Press the buttons 2, 0, 1 and then 0 on your Remote, or if this doesn't work,

try pressing the buttons 3, 0, 1 and then 0

Press the Step button , Press the Shuffle button , Press the Next button

Logix DVD-3300D

*Door open. Setup Menu
Custom (last option on setup menu)
3333 (4 numbers). Code choice
Enter. Press 0 for all. Setup*

OR

*Power on the Logix-3300D DVD Player. Press the OPEN/CLOSE button on the remote once
Press the SETUP Button. Press the blue right arrow button 4 times to
CUSTOM SETUP menu. Press 3 Button 4 times. Press the blue right arrow button once
Move up and down to select your desired region code. CODE 0 represents Auto-Region. Press
ENTER button when you have selected. Press SETUP button to save settings.*

Lumatron DVD-20K1

*Press Setup
Press Stop
Press Skip Back (|<<)
Press Skip Forward (>>|)
You are now taken to the hidden Region + misc. setup menu*

M

Magnavox MDV458

- Press "System Menu" key to enter Set Up menu.*
- Move to "Preference Page" using arrow keys to the left or to the right.*
 - Press the following sequence in the remote control: 135566*
 - A menu indicating "Region Code" will appear.*
 - Change region using arrow keys to top or down. Region Code = 0 will play all regions.*
 - Press "System Menu" key to exit Set Up menu.*

<http://www.videohelp.com/dvdhacks.php?dvdplayer=Magnavox+MDV458&hits=50&Search=Search>

Magnavox MDV450

Turn on your DVD player, press MENU button on your remote control then go to DEFAULT and select RESET. Or turn on, press open, and push 1111 on remote slowly, then 0 and push close.

Malaga SE-1210

Press the Open button on the Remote

Then press Setup

Press the 9 button on the Remote Region Free, or 1 for Region 1, 2 for Region 2.

Press the buttons 2, 0, 0 and then 0 on the Remote

Then press Step, Shuffle

And the Next button

Manhattan DVD-2000

Press the Open button on your Remote Control

Press the Setup button

Press the 9 button for Region Free, or 1 for Region 1, 2 for Region 2,

Press the buttons 2, 0, 1 and then 0 on your Remote, or if this doesn't work, try pressing the buttons 3, 0, 1 and then 0

Press the Step button

Press the Shuffle button

Press the Next button

Maplin SMC MK1

Converting the player to all region mode:

Press the Open button on your remote control to open the tray.

Press the 7 button on your remote control.

Press the Enter button on your remote control.

Press the 7 button again on your remote control.

Maplin SMC MK2

To convert this player to Multi-Region follow the below steps:

Press the Open/Close button on the players Remote Control to open the drive tray.

Press the buttons 2, 0, 0 and 1 on the Remote Control. Press the Enter button on the Remote Control

Marantz DV-3100

To change Region on this machine: Turn on without a disk in the tray and wait for "No Disk" on front panel display. Key in on the Remote Control, press Pause, then 3, 1, 4, 1, 5, 9. The word CODE is displayed on the front panel. Key in the number of the Region you want to use, or 0 for Multi-Region. Then press Pause again.

Marantz DV-4200, Marantz DV-6200, Marantz DV4100

(Same as above - 3100).

Marantz DV-4000

Turn on the player with no disc in the tray

Press Dimmer (on front panel)

Press Previous (on front panel)

The display should show 4 dashes

Press 1, 9, 9 and 9

Enter 01 for Region 1, 02 for Region 2, 04 for Region 3, 08 for Region 4,

10 for Region 5, 20 for Region 6 or 00 for Region free

Press Enter. Turn power off and on

Marantz DV-4200FN

To change Region on this machine:

Turn on without a disk in the tray and wait for "No Disk" on font panel display

Key in on the Remote Control, press Pause, then 3, 1, 4, 1, 5, 9

The word COdE is displayed on the front panel

Key in the number of the Region you want to use, or 0 for Multi-Region

Then press Pause again

Marantz DV-7000

Turn on the player with no disc in the tray

Press Next (on front panel) and Previous (on front panel) at the same time

The display shows Region 2

Press Stop (on front panel) for 5 seconds

The display now shows Region 0

Press Play (on front panel)

The display should show Region 0 OK

Turn power off and on

Mark TFE-200

To access this players secret menu follow these steps:

Turn the machine on and ensure that there is no disk in the tray

Press Setup. Press Stop. Press Preview. Press Next. You should now be able to access the hidden menu and thereby change Region.

Matsui DVD-110

Press 9 on the Remote

*Press Open/Close on the Remote, the tray should not open though
Press 5 on the Remote
Press Mute on the Remote, this should bring up the Region Selection page
Press OK then Exit
The word ALL should appear and you will be able to play discs from any Region*

Matsui DVD-120

*Perform ALL functions on the players front panel, NOT from the Remote Control
Turn the machine on
Press STOP, SKIP and OPEN at the same time and hold for a few seconds
A Menu will appear. Select the region you want and play your disc*

Matsui DVD-122 - 125

*Power on the DVD player and ensure there is no disc in the drive
Press Menu
Then press 1, 6, 7 and press Mute for ALL Regions. Press Exit*

Mediencom DS-8302

*To change the Region code on this player follow these steps:
Open the players drawer
Key in 8, 4, 2, 1 on the Remote Control then OSD changes
to Region code
Select desired Region code (9=all regions) with 'Enter'
Close the players drawer*

Medion MD-7950A

*Switch the player on at the base unit
Open the drawer and leave open
Using the handset type in 8, 9, 2, 6 then the required region code (1 for R1, 2 for R2 and so on...)
Close the drawer with the required DVD in
Press Play*

Medion MD-7888

*Put the player into Standby with no disc in the tray.
Power On.
Press Menu.
Press 9.
Press Open/Close.
Press 5.
A service menu will now appear enabling you to change the region.*

Memorex MVD-2022

For 2022 use same as code as MVD-2020

- 1. Open/close*
- 2. Clear*
- 3. Type 1 3 6 9*
- 4. Enter 0 for All region, 1 for Region 1, ...*
- 5. Restart the player (Standby and On).*

Works fine

Memorex MVD-2027

"SETUP", Press "1" for region 1 or press "2" for region 2 Press "7" for all regions, "PAUSE/STEP", ">>I", "I<<" , "SETUP". Or Setup-key, 0-key (means zero / null), pause-key, I<< (means left), >>I (means right), set-up.

Mico DVD-A980

Press the buttons 7, 7 and SELECT on the Remote control

You Should now be in the SECRET MENU

Change the Country Code to 13 for Multi-Region, which is auto switching even on Hard Coded DVD discs

To disable Macrovision change the 0 to a 1

Minato G-1

Press the Open/Close button on the Remote Control to open the drive tray

Press the buttons 0, 1, 1 and then 1 on your remote control, in order, one at time

A number of stars should appear in the top left hand corner of the onscreen display

Press the button 1 on your Remote Control to select Region 1, or 2 to select Region 2, and so on...

The word Region and then the number you selected should briefly appear on screen to confirm that the hack has been successful, however this may not be the case on some models

Mintek MDP-1020

step 1: turn on the power

step 2: enter into the set up menu using the remote

step 3: go into preferences menu

step 4: enter in the code 255135

step 5: quickly press the left arrow then the down arrow

step 6: a region code banner will appear, enter in the number zero

step 7: press set up again and your all done.

Mintek MDP-1720

Using the remote control:

1) Press SETUP

2) Select PREFERENCES from the menu

3) Enter 215345

4) Press LEFT then DOWN

5) Specify region 1-6

- 6) Press *PLAY* to save the change
- 7) Press *SETUP* to exit the setup menu

Minowa DVD-101

Open the players draw

Press 1, 4, 5, 6, on the Remote Control, followed by the desired Region code

1 = Code 1

2 = Code 2

0 = Region Free

Mishine DVD-2004K

To access this players hidden factory settings menu follow these steps:

Press Setup

Press Stop

Press Previous

Press Next

You can now set factory settings as you like including region code

Mitsui 650

Open the drive tray

Key in using the Remote 8926# (where # = Region number i.e. 1, 2, 4 etc. 0 = multi region and no macrovision)

Monyika 713

Switch it on

Press Setup, Slow

Press Skip left, Press Skip right

Use the Right Arrow button to select the desired region:

A Region 1, B Region 2, C Region 3, D Region 4

*E Region 5, F Region 6, *** Region Free*

Press Setup

Monyika 715

Switch it on

Press Setup, Slow

Press Skip left, Press Skip right

Use the Right Arrow button to select the desired region:

A Region 1, B Region 2, C Region 3, D Region 4

*E Region 5, F Region 6, *** Region Free*

Press Setup

Moniyka DVD-8200

Switch it on
Press Setup, Slow
Press Skip left, Press Skip right
Use the Right Arrow button to select the desired region:
A Region 1, B Region 2, C Region 3, D Region 4
*E Region 5, F Region 6, *** Region Free. Press Setup*

Mustek DVD-V300

Ensure the players tray is empty and closed
On the Remote control:
Press SETUP
On the players Front Panel:
Press NEXT
Press STOP
Press PAUSE/STEP
Press PREV
Press NEXT
You should now see a new MENU. Go to Select Region and make your choice:

Mustek DVD-V520

Ensure the players tray is empty and closed
On the Remote control:
Press SETUP
On the players Front Panel:
Press NEXT
Press STOP
Press PAUSE/STEP
Press PREV
Press NEXT
You should now see a new MENU. Go to Select Region and make your choice.

Mustek DVD-V560

Ensure the players tray is empty and closed
On the Remote control:
Press SETUP
On the players Front Panel:
Press NEXT
Press STOP
Press PAUSE/STEP
Press PREV
Press NEXT

You should now see a new MENU. Go to Select Region and make your choice:

Mustek DVD-V562 & V56S

Same as above

Mustek DVD-V600 RZ

With the players DVD draw is open push on the remote press the following numbers: '8,4,2,1', This should bring up a special menu. Press ENTER to toggle through the region codes and select '9' to enable region bypass.

N

NAD T-531

Power on the player with no disk in the drive, Press "PAUSE" on the remote, Enter "3 1 4 1 5 9" on the remote (the word COdE appears on the display), Enter "0" on the remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.), Press "PAUSE" on the remote, Power the player off and then back on.

NAD T-550

Ensure the tray is open

Go to the Setup menu.

Go to 'password' and press Enter

Enter the code 5, 9, 7, 8

Press Enter, a block with SVC Code will appear

Key in 9, 2, Audio, Resume

Press Enter, the block will now show Region Change 0000

*Select the Region by entering: 5, 5, 0, * where * = the Region code, Region 1 = 5501, Region 2 = 5502 etc. Press Enter. The player draw will close and the machine will switch itself into standby*

Naiko N2051

With remote:- open draw, press set-up, stop, back skip, fwd skip. Now in hidden menu turn macro off and change region to 0.

Nakamichi DVD-10

Connect the machine to the mains but do not power on, also ensure there is no disc inserted

Press and hold down both the Dimmer and Reverse Skip buttons on the front panel and then press the Power ON

The display should show "NAKAMICHI"

Hold the Dimmer & Reverse Skip buttons for a few seconds and the Display should change to "_____" from "NAKAMICHI". Wait for a minimum of 5 seconds (at this stage you're not pushing

the Dimmer & Reverse Skip buttons any longer), then using the handset's numerical keys press 1, 9, 9, 9

The display should now show: A-00 D-02, D-02 indicates Region 2

To change the region code, punch in the new code (i.e. 01 for Region 1, 03 for Region 3, etc.) and after that press the ENTER button (located next to the numbers keypad on the Handset). The display should now change (slowly) to D-01 (or whichever new region you have assigned to, as in (i.e.) above). Turn the Power, OFF and the machine is set to the new Region.

Nakamichi SoundSpace 10, 11 & 21

Press and hold the Track Down button on the player

Press the Power On button to turn on your player

Wait until the machine shows "----" on the display

Release the Track Down button on the player

Using the main remote keypad, enter the digits 1, 0, 1 and 1, then press Enter

The machine should now display "D-00" and be region free

NEC NDV-21

Make sure there is no Disc in the unit when you turn it on. Press pause on the remote. Press 3,1,4,1,5 and then 9 on the remote. Press the number for the required region(0 = all), Press pause. Turn the unit off then back on.

NEC NDV-25

1. Remove any discs in the player before starting.
2. Turn the player off for a few seconds then back on.
3. Press the following keys on your remote slowly and deliberately in this order: Pause, 3, 1, 4, 1, 5, and 9.
4. This should open up an on-screen menu which invites you to choose a region from 0-6. (If you don't get this screen, go back to step 1 and start again!)
5. Change regions by pressing the number required on your remote eg. 1= region 1 etc. 0 = all).
5. Press 'Pause' on the remote.
6. Turn the player off then on. The player is now ready.

Neufunk DT-2000

Press Stop

Press Stop

Press Setup

Press Slow |<<

Then use the left or right arrow to change the Region code of DVD player, or select * for multi-region mode

Nikai NDVD1056

- 1) Power on, with no disk
- 2) press setup
- 3) enter the following sequence: 1,3,6,9,<-,<-,<-,->
(<- left arrow, -> right arrow)
- 4) You will get a new menu "version"
- 5) Select "version" and then change the value to "0" for multi-region.
- 6) press "setup" to save your choice.

ENJOY!!

Nintaus DVD-N9901

Open the players tray

Press 2, 2, 9, 6 on the players Remote Control

Press 1 button to change the player to Region 1, 2 for Region 2, 0 for Region Free

Norcent DP-313

with no disk in the player press:

Setup, Vol+, Vol-, Vol+, Vol-

in the right upper corner a current region code would appear. You could switch between 1,2,3,4,5,6 or 255 using Right and Left buttons. 255 is multi-region.

Or

with the tray open press "2812" in the remote control. The region screen will appear and then press "enter" until "9" which is the multizone code. worked great on mine

<http://www.videohelp.com/dvdhacks.php?dvdplayer=Norcent+DP-313+&hits=50&Search=Search>

Noriko DVD-390K

Open the disc tray

Insert an RCE title and close the disc tray

A screen will be displayed stating your unit is of the wrong region

Press the Access button on the Remote Control

Press the Goto button

Enter the title of the main feature, usually 01

Press the Play button on the Remote Control

O

Olidata 1999-E

Press set-up and go down until the preferences menu, Press step, back, next. Now you will have a menu where you can change the region code or set it to bypass, activate or deactivate the Macrovision and other functions.

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Omni SL-2000KD

Power ON the DVD player

Press the OPEN/CLOSE button on the Remote OR front panel - the tray will open

With the tray still open, enter "2168" on the Remote, followed by the region code.

1 USA and Canada

2 Japan and West European

3 Asia not including China and Japan

4 South America, New Zealand and Australia

5 Africa, Russia and East Europe

6 China... And 9 for All areas (Region Free)

Omni SL-P2002KD

To turn this player in multi-region mode:

Turn on the Player

Open the tray

Enter the following code from the Remote 2, 1, 6, 8, 9

Play your DVD

Optim DS-8302

Press the Open button on the Remote Control to open the disc tray

Press the Intro button

Using the Remote Control, press the buttons 2, 0, 1, 1 and 0

The onscreen display should now read "Set OK"

Orion DVD-2000

Converting this player to multi-region:

Power on your machine

Press the Stop, Open/Close and Skip buttons on your player simultaneously and hold down for 3 seconds. A hidden menu should appear. Release the Stop, Open/Close and Skip buttons on your player

Select Region Number from the hidden menu and choose the Free option

Exit the menu

Orion DVD-337S

Converting this player to multi-region:

Power on your machine

Press the Stop, Open/Close and Skip buttons on your player simultaneously and hold down for 3 seconds. A hidden menu should appear. Release the Stop,

Open/Close and Skip buttons on your player

Select Region Number from the hidden menu and choose the Free option

Exit the menu

Orion DVD-902S

Converting this player to multi-region:

Power on your machine

Press the Stop, Open/Close and Skip buttons on your player simultaneously and hold down for 3 seconds. A hidden menu should appear. Release the Stop,

Open/Close and Skip buttons on your player

Select Region Number from the hidden menu and choose the Free option

Exit the menu

Orion DV-KT

To change region on this machine follow these steps: Simply turn on the player with no disk loaded Hold Open/Close, Stop and Skip Right and wait about 5 seconds. Choose region number, 1 = Region 1 etc. Set to free, 0 = Region free

Oritron DVD-100 RUBY

Ensure the tray is empty

Press 'Menu'

Press '9'

Press 'Open/Close'

Press '5'

'Region 1 - 6' should be displayed on screen

Enter Region code

Press 'Mute'

Oritron DVD100, 200, 600, 650

With no cd in, press MENU, 1, 6, 7 and MUTE (unlock all regions)

Or With no cd in, menu, 9, open, 5, mute.

To play CDR & CDRW.

Load music CD.

Press 45547

Press menu

*press eject
hidden menu appears
enable playback*

VCD Hack for proved on firmware 2.0

- 1. Power cycle the unit*
- 2. Press Open Tray*
- 3. Insert Audio CD*
- 4. Wait until the "Music CD" disappears*
- 5. Press "Menu"*
- 6. Press "9"*
- 7. Press "1-All"*
- 8. Press Open Tray*
- 9. When prompted for VCD Enable Select "1"*
- 10. Select Exit*

Will only work with CD-RW

Oritron DVD-1030

*Ensure the tray is empty
Press 'Menu'
Press '9'
Press 'Open/Close'
Press '5'
'Region 1 - 6' should be displayed on screen
Enter Region code
Press 'Mute*

Oritron DVD-200 Dia

*Ensure the tray is empty
Press 'Menu'
Press '9'
Press 'Open/Close'
Press '5'
'Region 1 - 6' should be displayed on screen
Enter Region code
Press 'Mute*

Oritron DVD-600 Sap

Ensure the tray is empty

*Press 'Menu'. Press '9'
Press 'Open/Close'. Press '5'
'Region 1 - 6' should be displayed on screen
Enter Region code. Press 'Mute*

Oriton DVD 3119

[http://www.videohelp.com/dvdhacks.php?dvdplayer=ORITRON+DVD+3119&hits=50&Search=Sear
ch](http://www.videohelp.com/dvdhacks.php?dvdplayer=ORITRON+DVD+3119&hits=50&Search=Sear
ch)

*remove dvd from drawer
wait for screen to confirm that player is empty
slowly press buttons
1 6 7 1 9
a hidden menu will come up
press OK button
press the number 0 button
Press exit
If you like repeat process to confirm that 0 (all region) is still set.*

P

Pacific PDVD-1000

Open tray, enter 8421, press enter until you get to no.9, close tray.

Pacific DVD-750

*Press open/close on handset
Key in 8421 or try 9999
Keep pressing Enter until region 9 appears
Press open close.*

Pacific DVD-1002 & 1002W

*Use remote, press open/close, press Clear (leave tray open)
Press 1
Press 3
Press 6
Press 9
Press 0
Press open/close (close tray).*

Palsonic DVD-3000

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Insert any disc, select the PBC button on the remote control, then followed by selecting the play button. The PBC function is for high-level menus and RCE coding.

Panasonic SC-DK2

Turn on player with no disc inserted

While pressing "Shift" on the remote press "Setup"

Press "Enter" twice

Move the cursor to "Other" and enter the appropriate four-digit region setting, beginning with 000.

Press "Enter"

Press "Return" twice

Switch unit off for at least 3 seconds.

Load DVD and play.

Panasonic DMR- E30

Turn On player with no disc inserted

While pressing Shift on the remote press Setup

Press Enter twice

Move the cursor to Other

Enter the appropriate four-digit region setting, beginning with 000

Press Enter

Press Return twice

Switch unit Off for at least 3 seconds

Panasonic A112, Panasonic A120, Panasonic RP56, Panasonic RV31, Panasonic SC-HT80

Open cd drawer, Press 9, 8, 1, 7 on the remote control, Press ENTER till it shows region 9 and Press RETURN. Also There are mod chips available, see the mod chip tutorial.

Panasonic RP56

Open cd drawer, Press 9, 8, 1, 7 on the remote control, Press ENTER till it shows region 9 and Press RETURN. Also There are mod chips available, see the mod chip tutorial.

Or

Ensure there is no disc in the tray and that the tray is closed

Press Stop

Press Stop

Press Setup

Then key in the following 3, 8, 8, 8, 3

Followed by the Region you wish your player to play

Panasonic RV32

Press STOP, STOP, SET-UP, Key in: 8,3,3,3,8, then region # 0 for multizone.

Philco DV-P2000

Ensure there is no disc in the tray and that the tray is closed

Press STOP

Press STOP

Press SETUP

Then key in the following 3, 8, 8, 8, 3

Followed by the Region you wish your player to play

Philco DV-P2100

Open tray, Press 8926 ("" will be seen on the screen). Then select area (1 to 6) or "0" for all. Press PLAY (tray will close).*

Philco DV-P2500

Open the player's tray, Press 8 8 8 8 (four "" will be shown on the screen). Select the region (1 to 6) or "0" for region free. Press play to end the operation and the tray will close.*

Philco PH-5000, Philco PH-5100

Turn on player, Press Eject on remote control. Press 77 + enter (Some Remotes use the "Select" key) region code: 13 + enter. Press Play and Put a DVD in the tray then Press play.

Philco PH-7000

Press "set-up", "Pause/Still", Press "Prev", Press "Next". Then Select -->REGION then -->BYPASS.

Philco PH-7100

Turn on the player. Press Eject on the Remote Control

Press 7, 4 followed by Enter

Key in the Country Code 1, 3 followed by Enter

Press Play. Put a DVD in the tray. Press Play

You may be able to select a specific Region by keying in the Region you desire, i.e. 1 for Region 1, 2 for Region 2 and so on, instead of using code 13.

Philco PH-9100

Turn on the player

Press Eject on the Remote Control

Press 7, 4 followed by Enter

Key in the Country Code 1, 3 followed by Enter

*Press Play
Put a DVD in the tray
Press Play
You may be able to select a specific Region by keying in the Region you desire,
i.e. 1 for Region 1, 2 for Region 2 and so on, instead of using code 13.*

Philco PH-9200

Turn on player, Press Eject on remote control then Press 8421 or 1248 with region CODE: 9 for multiregion. Press select and Put a DVD in the tray, Press play.

Philips DVD-170 Pro

Press the buttons Play, 2, 7 and 4 on the Remote Control. The onscreen display should look like this: ' ____ ' . If this does not work, press the buttons Play, 1, 5 and 9 on the Remote Control. The onscreen display should look like this: ' ____ '.

Use the number keys on the Remote Control to enter the code 005000 128 256.

Press the Play button on the Remote Control.

The onscreen display should turn red, indicating that your region settings have been changed.

Philips DVD-570M

Send the infra-red code RC6 (aka Codeset 4, Key 235) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions:

Configure the Remote using the setup code 0539

Press the Magic button, Enter the code 085, Press the OmniRemote key marked as 955 Multizone, The onscreen display should show 11 spaces like this: '-----'

Using the number keys on your DVD player's Remote Control, enter the code 222 222 005 255. Note that this is 12 digits and the last digit will not show on the on-screen display Press the Play button on the DVD player's Remote, The onscreen display should now show the words No Disc, Power off your DVD player, wait 10 seconds and then power back on

Philips DVD-612

Send the infra-red code RC6 (aka Codeset 4, Key 235) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions:

Configure the Remote using the setup code 0539

Press the Magic button, Enter the code 085, Press the OmniRemote key marked as 955 Multizone, The onscreen display should show 11 spaces like this: '-----'

Using the number keys on your DVD player's Remote Control, enter the code 222 222 005 255. Note that this is 12 digits and the last digit will not show on the on-screen display Press the Play button on the DVD player's Remote, The onscreen display should now show the words No Disc, Power off your DVD player, wait 10 seconds and then power back on.

Philips DVD-625

Turn on the player

Open the tray.

Press 9 9 9 9 on the remote, you can do it slowly.

Press what region you want, 0 (zero) is for region free.

Philips DVD-700

To convert this player to play a Region 1 disc:

Press Play, 2, 7 and 4 on the Remote Control. The onscreen display should then look like this: ' _____ '.

Enter the following code using the Remote Controls number pad 005000 128 256.

Press the Play button on the Remote Control.

The onscreen display should turn red, indicating that your region settings have been changed.

To convert this player to play a Region 2 disc:

Press Play, 2, 7 and 4 on the Remote Control. The onscreen display should then look like this: ' _____ '.

Enter the following code using the Remote Controls number pad 001000 128 156.

Press the Play button on the Remote Control.

The onscreen display should turn red, indicating that your region settings have been changed.

Philips DVD-703

Press Play on the Remote, followed by 1, 5 and 9

When the display reads ' _____ ' enter 005 000 128 156 using the Remote. (Note: the 12 digit code, when there are only 11 spaces. This is normal, just enter the whole code, and press Play), Press Play on the Remote

Your player is now a Region 1 only player

To return the player to Region 2 only:

Press Play on the Remote, followed by 1, 5 and 9

When the display reads ' _____ ' enter 002 000 128 156 using the Remote (Note: the 12 digit code, when there are only 11 spaces.. This is normal, just enter the whole code, and press Play), Press Play on the Remote

Philips DVD 724

To change to player region to 0:

** Open the tray (using the OPEN/CLOSE button or holding down 1 on the remote)*

** Press 1111 (slowly)*

** Press 0*

The display should show "REGIN 0" (as spelt).

** (Optional) Place a test disc in the tray*

** Close the tray*

And that's it.

Philips DVDR 70

Via the "System" button on your Philips remote, on your recorder (no disk in recorder), change the "Remote control used" from "DVD Recorder" to "DVD Player". Store it. (This is IMPORTANT!)

On your Philips remote press Play 159

The display on the recorder should now change to eleven dashes

Still using your PHILIPS remote, tap in 121 212 005 255 (the last few digits will NOT be visible on screen but they WILL be there). Now press "Play" on your PHILIPS remote

Philips DVDR 610

1: Turn on the 610 from the front panel, Do NOT open the disc tray

2: On the 610 Remote, press the blue button, then play then 159, then 121212005255, then play then standby.

3: Enjoy multiregion viewing!

Please note, the buttons must be pressed quickly or the hack will not work.

You should see the numbers 121212005255 on the front panel display briefly if the hack has been input correctly.

You have to type in codes as described but mightily quick! Two hands, numbers quick, numbers quick, and don't spend any time looking at the display. The more times you do it, the quicker you get and eventually you can press them fast enough and if you can quickly look at the display the long line of digits DO display.

Advice is keep going and it will work.

Philips DVDR 615

1.On

On remote:

2.Tuner

3.Play

4.159

5.121212005255

6.Play

7.Standby

Philips DVDR 75

Turn on the recorder, with no disc inserted.

Set your remote to "DVD player" instead of "DVD recorder". Do this in the 'SYSTEM' setup of the recorder.

Press <PLAY> and then the digits 159.

At this point - - - - digits will appear on the DVD player.

Press the number keys: 121 212 005 255 and then press <PLAY>.

NB: You will notice there aren't enough digits on the display panel to show all the numbers you enter. However, just continue even though you can't see them.

Display will return to "NO DISC", and the recorder is now region free.

Power down your recorder, wait a few seconds

Via the "System" button on your Philips remote, on your recorder (no disk in recorder), change the "Remote control used" from "DVD Player" to "DVD Recorder". Store it.

OR

The following procedure requires a Philips RU880 remote control to make your DVD-recorder "Region Code Free"

This "region code free" procedure is applicable for the following DVD-recorders: Philips DVDR70, DVDR75 and DVDR77 !

How to program the <P+> (program UP key) of the Philips RU880 remote control:

=====

- 1) Press and hold key <7> and key <9> together until your remote display shows "SYNTH".*
- 2) Press the following keys after each other: <2> <3> <5>, the remote control will show "press mode" in the display.*
- 3) Press the <DVD> key, the remote control will show "press mode" in the display.*
- 4) Press the <P+> key.*

To make one of the above DVD recorders Region Code Free:

=====

- 1) Press the <System > key on your DVD recorder remote control*
- 2) Go down in the first menu item (User preference) and select for entry (5th) "remote control used" the "DVD player" (instead of "DVD recorder" which is the default!)*
- 3) Leave the system menu by pressing <System> key.*
- 4) On the Philips RU880 remote control press <DVD> than press the <P+> button you just have programmed. => The magic "dashes" should appear on your DVD-recorder display!*
- 5) On your DVD-recorder remote control press the following key sequence:: 121212005255 PLAY
==> Your DVD-recorder is now Region code Free.*
- 6) Press the <System > key on your DVD recorder remote control.*
- 7) Go down in the first menu item (User preference) and select for entry (5th) "remote control used" the "DVD recorder" (Reverse action from step 2)*
- 8) Leave the system menu by pressing <System> key.*

Enjoy your Region Free DVD-recorder

Philips DVDR 80

Switch on the machine with no disc

Set your remote to

"DVD player" instead of "DVD recorder",

Press PLAY 159

at this point - - - - digits will appear on the DVD player, type in:

121 212 005 001 and press play (for RC1)

121 212 005 002 and press play (for RC2)

121 212 005 003 and press play (for RC3)
121 212 005 004 and press play (for RC4)
121 212 005 005 and press play (for RC5)

(Note: You can only change 25 times the code!)

to make it RC free you must send a RC6 command: RC6 4 235
at this point - - - - digits will appear on the DVD player, type in:

121 212 005 255
now it's RC free

Philips DVD-711

Code 1

Send the infra-red code RC6 (aka Codeset 4, Key 235) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions: Configure the Remote using the setup code 0539, Press the Magic button, Enter the code 085

Press the OmniRemote key marked as 955 Multizone

The onscreen display should show 11 spaces like this: '-----'

Using the number keys on your DVD player's Remote Control, enter the code 222 222 005 255. Note that this is 12 digits and the last digit will not show on the on-screen display Press the Play button on the DVD player's Remote

The onscreen display should now show the words No Disc

Power off your DVD player, wait 10 seconds and then power back on

Code 2

To convert this player for Region 1 playback

Please note that this conversion may only work a maximum of 25 times.

Press the buttons Play, 1, 5 and 9 on your remote control. The onscreen display should look like this:
' _____ '

Using the number keys on your remote control, enter the code 008000 000 000

Press the Play button on your remote control

The onscreen display should turn red, indicating that your region settings have been changed

To convert this player for Region 2 playback

Please note that this conversion may only work a maximum of 25 times

Press the buttons Play, 1, 5 and 9 on your remote control. The onscreen display should look like this:
' _____ '

Using the number keys on your remote control, enter the code 0020000 000 000

Press the Play button on your remote control

The onscreen display should turn red, indicating that your region settings have been changed

To convert this player for Region 4 playback

Please note that this conversion may only work a maximum of 25 times

Press the buttons Play, 1, 5 and 9 on your remote control. The onscreen display should look like this:
' _____ '

Using the number keys on your remote control, enter the code 007000 000 000

Press the Play button on your remote control

The onscreen display should turn red, indicating that your region settings have been changed

Philips DVD-718

Send the infra-red code RC6 (aka Codeset 4, Key 235) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions: Configure the Remote using the setup code 0539, Press the Magic button, Enter the code 085. Press the OmniRemote key marked as 955 Multizone. The onscreen display should show 11 spaces like this: '-----'. Using the number keys on your DVD player's Remote Control, enter the code 222 222 005 255. Note that this is 12 digits and the last digit will not show on the on-screen display Press the Play button on the DVD player's Remote. The onscreen display should now show the words No Disc. Power off your DVD player, wait 10 seconds and then power back on.

Philips DVD-752

Send the infra-red code RC6 (aka Codeset 4, Key 235) to your player. You can do this with a OneForAll remote such as the OneForAll 6 (or URC7560) or OneForAll 4 Digital with the following instructions: Configure the Remote using the setup code 0539, Press the Magic button, Enter the code 08, Press the OmniRemote key marked as 955 Multizone The onscreen display should show 11 spaces like this: '-----' Using the number keys on your DVD player's Remote Control, enter the code 222 222 005 255. Note that this is 12 digits and the last digit will not show on the on-screen display Press the Play button on the DVD player's Remote, The onscreen display should now show the words No Disc Power off your DVD player, wait 10 seconds and then power back on.

Philips DVD 762

*Press "open" tray
Plug DVD into monitor or TV
Press "1111"
Press "0"(country code)
Press "open/close" to close tray.*

Philips DVD-950

Players set up for europe have different codes replace the 5000 and 2000 with 4000 and 3000 respectively, see below, the normal instructions. Effectively 2000,3000,4000,5000 all change the codes from region 1 to region 2 but the output of the player changes. eg PAL NTSC RGB outputs all vary

- 1. Turn the machine ON and remove any discs.*
- 2. When the display shows 'NO DISC'*
- 3. Enter 'Play', '159'.*
- 4. The display will change to show 11 dashes ('-----').*
- 5. For region 1 enter the 12 digit code '004000128156',
for region 2 enter the 12 digit code '003000128156'*
- 6. Press 'Play' and the screen will turn red and then reset.*

Philips DVD 953

*I disassembled my unit, and I figured out that DVD953 is the LG's OEM.
You can turn it as multiregion player without hardware modification!!*

- 1. Power on the unit with no disc.*
- 2. Press "PAUSE" on the remote.*
- 3. Enter "3 1 4 1 5 9" on the remote ("CODE 1" will be shown. "1" is the current region code).*
- 4. Press "0" on the remote (0=AUTO, 1,2,...=set region)*
- 5. Press "PAUSE" on the remote.*
- 6. Power the player off, and then back on.*

Or

<http://www.videohelp.com/dvdhacks.php?dvdplayer=philip+dvd953+&hits=50&Search=Search>

Philips DVD-963sa

First you have to issue a special IR command RC6, codeset 4, key 235 (decimal). Then the rest of the code should be entered normally. So the code is

RC6 code 222 222 005 255 PLAY

You can send the RC6 command using a certain type of programmable remote control. If you want to know if it can be done using your programmable remote, you'll have to find out yourself. I don't have the means and time to find out if a certain type can be used or not. The ones I know the RC6 command works with, are listed here.

- [*OneForAll*](#) (URC7560)
- [*OneForAll*](#) (URC4300)
- [*Palm*](#) (V)
- [*Philips Pronto*](#)
- [*Philips SBC RU880*](#)

OneForAll (URC7560) (many thanks to Allan Verth)

*The RC6,4,235 code is can be sent using a [*OneForAll*](#) universal remote. To do so:*

- *The remote should be set up to control the DVD (setup code 0539).*
- *Then press the DVD button*
- *Press the Magic button*
- *Press 085. After the 085 the familiar dashes on the front panel display should appear.*
- *And now enter the code (if you want, you can do that with the standard remote):*

222 222 005 255 followed by PLAY

OneForAll 6 (URC4300) (many thanks to Kevin Morris)

*The RC6,4,235 code is can be sent using a [*OneForAll*](#) universal remote. To do so:*

This Remote does not do DVD commands natively. I (that means Kevin) was about to buy a One4All with the DVD button when I remembered the One4All website does remote downloading. So....I found there is a way to change the AUX2 button to DVD button.

- 1. Goto www.oneforall.com. Select the European English site*
- 2. Click on "Product Support" at top of page*
- 3. Click on "Universal Remote Controls"*

Www.fantasticproducts4u.co.uk

4. Click on "One for All 6 "....at bottom of page
5. Click on "Internet Download"
6. You need to Register to gain access, takes 30 secs, password arrives in mail
7. Click "Next" at bottom of page
8. Select from "Laser Disk Players" --> "Phillips -1" (This is what contains the Phillips DVD codes)
9. Click "Submit" at bottom of page
10. Follow instruction on screen on how to program your remote
11. Click "Next"
12. This page tells you how to "test" which code will work
13. My Phillips 710 was the "7" key
14. Bingo, now the remote can be used to program the RC6

Philips DVP 642

1. Turn on the player.
2. Open the tray.
3. Press the following sequence on the remote:
7 8 9 OK 0
4. The number 0 will appear on the lower left side of your screen.
5. Your player is now region free! Put in a DVD and enjoy! :)

NOTE: The 0 in the sequence above represents the region code. 0 = region free. If you want to change your player to just a specific region code, replace the 0 with the region number you want.

Palm (V) (many thank to RsstX)

You don't have a One4All remote? Are you a [Palm](#) owner? Well, in that case this is your lucky day. Using the famous OmniRemote software from [Pacific Neo-Tek](#) it is possible to use the code. OmniRemote is the application changing the Palm into a programmable remote control.

Using the correct pdb file, which can be [downloaded here](#), it is possible to use the RC6 code. When you use the pdb file, you will see a Omniremote screen with the "secret" key. Press the "secret" key to change the DVD player's display into the famous dashes. You can now enter the code with the standard remote:

222 222 005 255 followed by PLAY

Phonotrend Prestige 2200

Power on the unit and open the DVD door by press, "open" button on the front panel. Use remote input ID number 33088. You will see on the top left of the screen appear "*****". Then add one more digit after 33088 according to regional code.

Phonotrend Prestige S2100

Power on the unit and open the DVD door by pressing the "Open" button on the front panel

Use Remote Control to enter the following numbers 3, 3, 0, 8, 8

You will see in the top left of the screen "*****" appear

Key in a number corresponding to the Region you desire your player to be set to, i.e. 1 for Region 1, 2 for Region 2 and so on, use 0 for Region free

If 3, 3, 0, 8, 8 fails try 8, 9, 2, 6

If 0 for Region free fails, try 9

Phonotrend Prestige S2200

Power on the unit and open the DVD door by pressing the "Open" button on the front panel

Use Remote Control to enter the following numbers 3, 3, 0, 8, 8

*You will see in the top left of the screen "*****" appear*

Key in a number corresponding to the Region you desire your player to be set to, i.e. 1 for Region 1, 2 for Region 2 and so on, use 0 for Region free

If 3, 3, 0, 8, 8 fails try 8, 9, 2, 6

If 0 for Region free fails, try 9

Pioneer DV-333

Turn on with no disc in. On the remote control, press "SETUP". Select "GENERAL" (certify that the "SETUP" is on "BASIC". Press "DISPLAY". Press "CONDITION". Choose region code and quit "SETUP".

Pioneer DV-340

You can select the region code by remote. This region will be tried first when playing a disk. Due to this design, the modification will work on the RCE (Regional Code Enhancement) protected DVD's. In some cases it will be necessary to insert a conventional (non RCE protected) disc before playing a RCE protected disc. Follow the instructions as detailed below:

- 1. Turn the player on without a disc in it*
- 2. On the remote control, press 'SETUP'*
- 3. Use right arrow to select 'General'*
- 4. Use down arrow to select 'Basic'*
- 5. Press 'ENTER' on the remote control*
- 6. Press 'Display' on the remote control*
- You should see the region code and OSD version that the player is set to*
- 7. Press 'Condition/Memory'*
- 8. Press '1', '2', '3', '4', '5' or '6' to change the region code of the player*
- The text will disappear*
- 9. Press 'Display' on the remote to control the region*
- 10. Press 'SETUP' on the remote to exit. Play the disc*

Pioneer DV-343

Turn on your dvd with no disc in it

Press the "setup" button on your remote

Highlight "general" in green (press the "right" button to move over)

Press "down" once (it will bring up the setup section expert or basic make sure basic is highlighted)

Press the "display" button once. It will now show the setting for the region of your dvd player use the 1 - 6 buttons on the remote to set . Press the "condition memory" button once to save settings (you won't see anything fancy happen when you save your setting). Repeat the steps again to change back.

<http://www.videohelp.com/dvdhacks.php?dvdplayer=Pioneer+DV343&hits=50&Search=Search>

Pioneer DV-444, Pioneer DV-530,
Pioneer DV-535, Pioneer DV-606,
Pioneer DV-626, Pioneer DV-717,
Pioneer DV-C302D, Pioneer DV-K101,
Pioneer DVL-909, Pioneer XV-HTD510

(Same as above – 343)

Pioneer DV-37

*Turn on your DVD player without a disc
Press "setup". Press "right Arrow" until "general" is selected
Press "down arrow" once. Press "display"
Press "condition Memory"
Press "1", "2", "3", "4", "5" or "6" for the Region
Press "setup". After this the unit is ready to play the selected region*

Pioneer DV-505

*With no DVD in the tray,
Press MENU,
select INITIAL,
press DISPLAY,
press CONDITION.
Then input the number of the zone you want.*

Pioneer DV-525

- * power up the player without a disc init.*
- * press setup on the remote control, an OSD will appear on the TV.*
- * select GENERAL using right cursor and use down cursor to select BASIC, press ENTER.*
- * press DISPLAY, the current region will be displayed.*
- * press CONDITION/MEMORY followed by 1, 2, 3, 4, 5, 6 dependent upon the required region.*
- * press SETUP.*
- * your player is now ready for use.*

PLU2 DVX 345pro

*Press Open
Press Intro
type 20110
appear SET OK*

PLU2 HiScan 128V

Remove the disk from the tray and close the tray

Enter 77 on the remote control followed by 0 for code free operation, 1 for US DVDs, 2 for european DVDs or any other valid region code you like

The player now plays back DVDs with the selected region code.

Polaroid PDV-0700

When playing a DVD, press stop on the DVD Player to ensure that the disc is not spinning. (You may even want to remove the disc from the playing unit.)

Using the remote control, press the "Set-Up" button and advance to the far right-hand tab "Preferences".

Enter Code # 1379 then use the "up & down arrows" to change the Region Code (0 for region free)

Once code is chosen, press enter.

Prima EP-DVD 650

Power on the unit and open the DVD door by pressing the "Open" button on the front panel

Use Remote Control to enter the following numbers 3, 3, 0, 8, 8

*You will see in the top left of the screen "*****" appear*

Key in a number corresponding to the Region you desire your player to be set to, i.e. 1 for Region 1, 2 for Region 2 and so on, use 0 for Region free

If 3, 3, 0, 8, 8 fails try 8, 9, 2, 6

If 0 for Region free fails, try 9

Primare V10

Open the players tray

Press 9, 8 and SELECT (this should take you into the Service Menu)

In the box "region code" insert 14

In the "Macrovision" (this is page 2 of the menu) insert 0

Press SELECT

Press RETURN

Primare V20

Open the players tray

Press 9, 8 and SELECT (this should take you into the Service Menu)

In the box "region code" insert 14

*In the "Macrovision" (this is page 2 of the menu) insert 0
Press SELECT
Press RETURN*

Proline DVD-1040

*If you have a disc in the tray, take it out first and THEN turn the power off on the unit;
Turn the power on with the remote control;
Open the tray with the remote control and leave open for the duration of this procedure;
Push the SETUP button on your remote control;
Arrow down on the remote control to the "Exit Setup" option - BUT DON'T CHOOSE IT!;
Now press, 1, 3, 6, 9 on your remote control (TIP - Get pretty close to the unit as the open tray may block the infra-red);
Using your remote control, press < three times and then > once;
A new option appears on the Set Up Menu called "Version", choose it and press the ENTER/> button;
Exit all the menus until you arrive back at the blue screen with the DVD logo on;
Now press the P/N button on your remote control. The word "MULTI" will appear at the top of your screen. Close the tray by pressing the button on the unit.
This is permanent and won't render your remote control useless.*

Proline DVD-1000

*Open the DVD players tray.
Place a Region 1 disc in the tray, but don't close it.
Press the buttons 0, 1, 2 and then 3 on your remote control in order, one at a time.
Press the play button on either your remote or the player.
To change the player back to Region 2 only functionality:
Open the DVD players tray.
Place a Region 2 disc in the tray, but don't close it.
Press the buttons Return and then Play on your remote control in order, one at a time.*

Proline DVD-2000

*Converting this player to all region:
Press Menu on the Remote Control
Press 1, 6, 7
Exit the menu*

Proson DVD-2000

*To make this player multi-Region or select a specific Region:
Press the Setup button on the Remote Control
Press Next*

Press Pause\Setup

Press Prev

Press Next

You should now be in a secret menu where you can change Region 1-6, or All for Region free

Proson DVD 2002

Power ON the DVD player and eject the tray. Press the numbers 33088 one by one. Right after the code has been entered press "0" for all regions, 1,2,3,4... will choose different regions

Q

Quadro 700

Same as the Skyworth DVD-650S - Open cd drawer, Key in (using remote) 8926# (# = region code number i.e. 1,4 etc. 0 = multi region and no macrovision)

R

Radionette RN3150E

Power on the player with no disk in drive

Press, "PAUSE" on the Remote

Enter "3 1 4 1 5 9" on the Remote

The words Code appears on the DVD display for a few seconds

Enter region code on Remote (before Code disappears)

- 0: All regions, 1: Region 1, 2: Region 2, etc

Press, "PAUSE" on the Remote

Power the player off and then back on

Raite 711

Press Setup, Press Slow, Press Skip left, Press Skip right

Use the Right Arrow button to select the desired region:

Letter Region

A Region 1, B Region 2, C Region 3, D Region 4

*E Region 5, F Region 6, *** Region Free*

Press Setup

Raite 713

*Press Setup, Press Slow, Press Skip left, Press Skip right
Use the Right Arrow button to select the desired region:*

Letter Region

A Region 1, B Region 2, C Region 3, D Region 4

*E Region 5, F Region 6, *** Region Free*

Press Setup

Raite 715

*Press Setup, Press Slow, Press Skip left, Press Skip right
Use the Right Arrow button to select the desired region:*

Letter Region

A Region 1, B Region 2, C Region 3, D Region 4

*E Region 5, F Region 6, *** Region Free*

Press Setup

Rankarena DVD-2400

To enter Loophole-Menu:

Ensure there is no disc in the players drawer

On the Remote Control press Setup

Then Mute

Then Last

Then Next

RCA DRC220N

Press menu, 1,6,7 then mute to play all regions

RCA DRC232N

Power on player (With empty tray)

Enter 16719 (with remote within 5 seconds)

On screen display shows current region

Enter 0 for region free

display shows ALL

Power off

Enjoy.

If you enter code 16719 and nothing happens try it again and again, my worked after third time

RCA DRS7000N

With the tray open

Highlight the options menu with your remote

Then simply press 8-2-1-3-X. X=

The region you wish to use

Use 9 for all regions.

Format HDD

Turn on the player and wait for MENU Screen

Then hold buttons INPUT and STOP

After 3-4 seconds you will see FORMAT on the front display

Your standard IDE HDD is formatted, clean and ready for recording

RCA RC5215P

To change it to region 1

Turn on the dvd without disc.

with the remote control press the following number sequence.

7385652500010001 and then press the info key from the remote control.

7385658500020002 & info = region 2

7385658500030003 & info = region 3...and so on...

REC 850

Switch on the player and Open the tray. Push 'stop' and enter numerals 1 9 9 9. Select region 'ALL', exit from screen by pressing 'set-up' button.

Redstar DVD 229A

Open the tray

Type stop and 1999 and change region code in menu (with enter/arrows) then close tray.

Redstar DVD 229C

Open tray and type 3308 and then the region code, (0=codefree).

Or With tray open, press 2168, See region code on the TV. Press enter 1- 9 for next region code with 9 = region free.

Reoc A5

Turn on the player. Press OPEN/CLOSE button to open the disc drawer. Enter the passwords 8421 or 9999, and then you will see the current region code on the screen. Select the different region codes by pressing ENTER continuously. The region free code is "9". Press "OPEN/ CLOSE" button again to close the disc drawer.

Roadstar DVD-2020H

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

*Open the players draw and ensure there is no disc in it
Key in "7" on the Remote Control
Then again key in "7"
The press "Enter"
This should bring up the players hidden menu
13 is Region free, otherwise set the player to a specific Region, 1-6 respectively*

Roadstar DVD-2025H

Open the DVD door by press "Open/Close" and Type in the code 330880. You will see on the screen "R0" then Close the DVD door by press "Open/Close."

Roadstar DVD-2027H

Open the drive tray. Make sure there's no DVD in it then Type 9 8 1 7 or 8 4 2 1 on the remote keypad. You will then be into a hidden menu and Choose regions 1-6 or 9 for region free clicking SELECT (Enter) button. close the tray. Turn the player off for few seconds. Turn it on again.

Ronin DVD P215

1 open cd draw

2 press setup button on the remote control

3 enter 13698888 on the remote control (You need to enter 4 x 8's to get the version option to appear)

4 scroll down to the version option in the menu and press enter

5 highlight region code on the menu and change it to region 0

6 press enter on the remote to save the new region

Tried playing region 1, 2 and 4 DVD's and they all worked without me having to do anything else after I'd done the above hack.

<http://www.videohelp.com/dvdhacks.php?select=Ronin+DVD+P215>

Rowa DVD-280

Press, open/close, zoom, a-b, up, left, down, right.

Or Turn the player on without a disc in it or disc tray open. On the remote control press set-up, Use right arrow to select general, use right arrow to select Basic. Press enter on the remote control, Press display on the remote control, you should see the region code and the OSD version that the player is set to. Press condition/memory on the remote. Press 1,2,3,4,5 or 6 to change the region code of the player, the text will disappear. Press display on the remote to control the region. Press set-up on the remote to exit. Play the disc.

Rowa DVD-3610

Same as above

Rowa DVD-800

Open tray press 8421 or 2168 then press enter to set region, region 9 is all regions. To disable Macrovision region of disc must be set prior to entering 4561 enter, but you cannot use region 9 setting to use this crack. Apparently 9999 also kills the macro. To exit the region set menu just press open/close.

S

Saivod DVCI-15G

Open disk tray and Dial in your remote the code 8421. Enter 9 for multizone (any region)

Salora S-1200

Turn on DVD player and Press Setup, Stop, Previous track and Next Track (separately :). Factory set-up screen is now active. Modify settings (Region=BYPASS, Macrovision=OFF) and press Setup to exit menu.

Sampo DVD-520

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free.

Sampo DVD-560

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free.

Sampo DVD-620

Press the Setup button on your remote control.

Using the onscreen menu, select the Preferences option.

Press the Still/Step button on your remote control.

Press the Prev button on your remote control.

Press the Next button on your remote control.

You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free.

Sampo DVE 660

Press SETUP then enter 3, 8, 8, 8, 3 on the Remote Control

REGION ID>>

REGION 1 (USA & Canada)

REGION 2 (Europe, Japan, South Africa, Middle East)

REGION 3 (South-East Asia)

REGION 4 (Central & South America, Australia, New Zealand)

REGION 5 (Former Soviet Union, India, Pakistan, Africa)

REGION 6 (China)

BYPASS (Will Play ALL Regions except some Region Code Enhanced Discs)

Samsung DVD S221

The version is V 6.04 it must be the same models S222 or S320.

Try this:

- 1. Press REPEAT in the RC (Remote Control);*
- 2. Press the sequence 5,7,5,3,8;*
- 3. On the upper left corner will appear the region code.*
- 4. Choose from 1-6 for respective region or 9 for region free;*
- 5. Press OPEN on DVD's panel to open the tray;*
- 6. Wait for 15 seconds;*
- 7. Press POWER on the RC (The tray closes) and the DVD player turns off;*
- 8. Press POWER to turn on the DVD player.*

Samsung DVD S224

Empty disc tray

Press Repeat on remote

Press 5,7,5,3 and 8 (in that order, one at a time)

02 will appear in the top left of the screen

Quickly press the number 9 for multi-region

Then press the Open button

After 15 seconds turn the power off, then on again.

Samsung SV-DVD1E

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Samsung SV-DVD 440

All operations are achieved from the remote control.

1. Power on the system with an empty tray, it will display "No Disc".
2. Press the SUBTITLE key and then press 57538. It will display the current region setting.
3. Select the desired region setting (9=region free, 1=region 1, 2=region 2, ...).
4. Confirm the choice by pressing the SUBTITLE key.
5. Power down the system. (this step may not be necessary: not tested)

At your next power on, the system will be set to the desired region setting.

Samsung DVD-511

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6.

Samsung DVD-611

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Samsung DVD-707

Press the DVD button on your remote control, Press the Open/Close button on your remote control.

Place a Region 1 disc in the tray. Press the Open/Close button on your remote control.

Wait until the player ejects the disc, displaying an error message and leaving the tray open. Remove the Region 1 disc from the tray.

Press the Open/Close button on your remote control.

Wait until the display shows the words 'no disc'. Press the buttons Time Search, 1, 1, and 9 on your remote control in order, one at a time. Press the Open/Close button on your remote control. Place a Region 1 disc in the tray.

Samsung DVD-709

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Samsung DVD-711

*Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player
You will now need to select a language option between 1 and 6*

Samsung DVD-807

*Press the DVD button on your remote control, Press the Open/Close button on your remote control.
Place a Region 1 disc in the tray. Press the Open/Close button on your remote control. Wait until the player ejects the disc, displaying an error message and leaving the tray open. Remove the Region 1 disc from the tray. Press the Open/Close button on your remote control. Wait until the display shows the words 'no disc'. Press the buttons Time Search, 1, 1, and 9 on your remote control in order, one at a time. Press the Open/Close button on your remote control. Place a Region 1 disc in the tray.*

Samsung DVD-809

*Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player
You will now need to select a language option between 1 and 6*

Samsung DVD-811

*Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player
You will now need to select a language option between 1 and 6*

Samsung DVD-907

*Press the DVD button on your remote control, Press the Open/Close button on your remote control.
Place a Region 1 disc in the tray. Press the Open/Close button on your remote control.
Wait until the player ejects the disc, displaying an error message and leaving the tray open. Remove the Region 1 disc from the tray.
Press the Open/Close button on your remote control.
Wait until the display shows the words 'no disc'. Press the buttons Time Search, 1, 1, and 9 on your remote control in order, one at a time. Press the Open/Close button on your remote control. Place a Region 1 disc in the tray.*

Samsung DVD-909

*Always perform a Cold Start before applying the hack below:
Power on your player whilst pressing hold both the Play and Stop buttons on the front player*

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Samsung DVD-HD841

- 1. Turn on player with no disc in the tray. "No disk" appears on screen.*
- 2. Press the "Repeat" key on the remote.*
- 3. Press "57538" on the remote. A number should appear on screen, indicating your player's current region (e.g. "2").*
- 4. Press the number for your required region (e.g. "1") or "9" for region-free/all-regions. The number will appear on screen, replacing the previous number (from step 3).*
- 5. Press "Open/Close Tray" and leave the tray open for a few seconds.*
- 6. Press "Power On/Off". The tray closes automatically and the player turns off. Next time you turn it on, it is region free (or whatever Region you selected in step 4).*

You can now fully enjoy your player :)

Samsung DVD-M105

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Samsung DVD-M108

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Samsung DVD-M204

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Samsung DVD-M205

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Samsung DVD-P140

Samsung DVD-P142

Samsung DVD-P144

1. Ensure disc tray is empty.
2. Press "Repeat" (this is on the bottom right of the remote control and shouldn't be confused with Repeat A/B which is on the left) on the R/C then enter 5,7,5,3,8
3. The number "2" (current region code) should appear in the top left of the screen.
4. Quickly press the number "9" button on the R/C, for "multi region".
6. Wait 20 seconds, then power off, then on again.

Samsung V2000 & V5000

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Or

1. Power on your player as normal.
2. Press and hold both the Play and Forward buttons on the player.
3. After a short while the words "No Disc" should appear from the onscreen display Release the Play and Forward buttons as soon as you see the words no disk.
4. First press the "Subtitle", then press the "Repeat" button on your remote control.
5. Using your remote control enter the code below, note that you must know what Region your player is currently set to in order to know which code is appropriate:

- Region 1 use [2, 9, 3, 3, 4]
- Region 2 use [3, 8, 7, 6, 7]
- Region 3 use [5, 6, 7, 3, 2]
- Region 4 use [7, 6, 8, 8, 4]
- Region 5 use [5, 3, 8, 1, 4]
- Region 6 use [2, 4, 4, 6, 2]

6. A code should be displayed at the upper left of the screen showing the current Region setting of your unit.

7. Press the "9" button on your remote control for Region free, or "1" for Region 1. Press "2" for Region 2, and so on.

8. Press the Open button on your player, put a DVD movie. Don't press CLOSE!!!

9. Press the Standby button on your remote control.

10. Press Standby again, and wait untill u see the Samsung Digitall logo, press the PLAY button, and here you go, your movie should start now.

(SAMSUNG DVD-V5000 <http://www.videohelp.com/dvdhacks.php?dvdplayer=DVD-V5000&hits=50&Search=Search>)

Samsung DVD-P241

1. Make sure that there is no disc in the tray and switch on the player.
2. Cold start the player, by holding down the PLAY and STOP buttons on the player.
3. You should see a set of language options. Release the PLAY and STOP buttons.

4. Select your language.

5. Press REPEAT then the following codes for the required region the player is already set to (region you bought the player in) do not confuse this with the A-B button:

Region 1 - 2, 9, 3, 3, 4

Region 2 - 3, 8, 7, 6, 7

("E series M105", M205 and M305 users try: 57538)

Region 3 - 5, 6, 7, 3, 2

Region 4 - 7, 6, 8, 8, 4

Region 5 - 5, 3, 8, 1, 4

Region 6 - 2, 4, 4, 6, 2

6. A code will appear, indicating the region setting of your player.

7. Press 9 for region-free, or 1 for region 1, 2 for region 2, etc.

8. Press OPEN/CLOSE on the Player to open the disc tray. You may need to push the tray shut rather than use the player button, in order for the region not to be changed to 4 (M203).

9. Press STANDBY (POWER) on the remote control to close the tray. Next time the player is turned on it will set to the region specified. If the player halts on the FBI Warnings, press Forward Search x2 or faster.

On some models, you will have the ability to disable Macrovision, but you will have to turn off the Quasi-PAL option and set the SCART output type to Video rather than RGB.

Samsung DVD-P244

Seems that all Samsung are basically the same - the codes do change from model to model so try the codes from other posts.

1. Power on your player
2. Press and hold both the Play and Stop buttons on the player (this is called a Cold Start)
3. After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player
4. You will now need to select a language option between 1 and 6

After this change the region with the following instructions:

1. Press the Repeat button (not A-B button, just Repeat) on your remote control
2. Using your remote control enter the code below, note that you must know what Region your player is CURRENTLY set to in order to know which code is appropriate:
for Region 2 - 5, 7, 5, 3, 8 TESTED AND IT WORKS

Haven't tested the following but for the other regions try the codes for the E series M105, M205 and M305

for Region 1 use 2, 9, 3, 3 and 4 (?)

for Region 3 use 5, 6, 7, 3 and 2 (?)

for Region 4 use 7, 6, 8, 8 and 4 (?)

for Region 5 use 5, 3, 8, 1 and 4 (?)

for Region 6 use 2, 4, 4, 6 and 2 (?)

3. A code should be displayed on the screen indicating the current Region setting of your unit.
4. Press the 9 button on your remote control for Region free, or 1 for Region 1, 2 for Region 2 and so on.
5. Press the Open button on your player
6. Press the Standby on remote

Samsung DVD VR 300

1. Power ON
2. Press MENU
3. Enter code 57538
4. The current region code
5. For codefree press 9
6. Open DVD door
7. Power OFF and power ON

Sanyo DVD-5100

Press the Program button on the Remote Control
Press the Right Cursor button
Press the Right Cursor button
Press the Enter button
Press the Play button

Sanyo DVD-1500a

Press the Program button on the Remote Control
Press the Right Cursor button
Press the Right Cursor button
Press the Enter button
Press the Play button

Sansui DVX 2100

Turn on, eject DVD (leave open), press 2,9,1,8, or 2,8,1,2 then enter, and you are in maintenance menu. Choose the region free option

Sanyo DVD-6070, Sanyo DVD-7201 and Other Sanyo Models

Press the Program button on your remote control, Right Cursor, Right Cursor, Enter and then Play.

SAST AEP-803

Turn on the player
Press the Open/Close button to open the disc draw
With the disc draw open enter the number "213" followed by the Select key, move the highlight to the third line and enter 13 for multi-region
To select a specific region key in 1-6 on the Remote Control

SAST AEP-810

Turn player on
Open the players tray
Enter the code 8, 4, 2, 1 on the Remote Control

Press "Enter" on the Remote UNTIL "9" is displayed
Press "Play"
The player is now region free

Scan SC-2000

Press the Setup button on your remote control
Press the Title button
Press the Step button
Press the Next button
Using the Up and Down buttons on the remote, select the region of your choice or Bypass for region free. Save and then Exit the menu

Scan SC-2500

Open Tray. Enter:0106 on the Remote Control then Enter:Region Number on the Remote Control. (1=Region 1,2=Region 2,0=Multi-region none RCE etc). OK will now appear on screen.

Schaub Lorenz SL-D4000

Power on. Push open/close on the remote control. Type 3308; the player displays 'XXXX' on the upper left corner. Wait until the Xs disappear. Enter the desired region, 0 means code-free. Wait until the number disappears. Push open/close. Power off.

Schneider HCS-500

Open the players drawer
Press Volume Up on your Remote
Press Fast Forward on your Remote
The on screen display will show 321 followed by the current Region code
Press Volume Up on your Remote
Press Fast Forward on your Remote
Repeat steps 5 and 6 until the desired Region code is shown on the display
Press and hold the Angle button on the Remote for approximately five seconds to select the Region

Schneider DVD-511

Converting this player to all region:
Press the Menu button on the Remote
Press the 1 button
Press the 6 button
Press the 7 button

Press the Mute button

Schneider DVD-810

Press the Menu button on the Remote Control

Press the 9 button on your Remote

Press the Open/Close button on the Remote Control, note the draw will not open

Press the 5 button

You will now enter the region selection page, and can change the player to any Region

Schneider DVD-855

Open CD drawer

Press Setup on the Remote

Choose the right item in the menu. This is the one that has settings "VFD, Password etc.)

Press button 3, 3, 3, 3

In the secret menu now displayed choose the Region code 0 - 6 and confirm with the Enter button

Schneider DVD-857

Press the Open/Close button on your remote control

Press the Clear button on your remote control

Press the 1 button on your remote control

Press the 3 button on your remote control

Press the 6 button on your remote control

Press the 9 button on your remote control

Press the 1 button on your remote control for region 1, 2 for region 2, and so on, or 0 for multi-region playback. Press the Open/Close button on your remote control

Schneider HCS-500

Open the players drawer

Press Volume Up on your Remote

Press Fast Forward on your Remote

The on screen display will show 321 followed by the current Region code

Press Volume Up on your Remote

Press Fast Forward on your Remote

Repeat steps 5 and 6 until the desired Region code is shown on the display

Press and hold the Angle button on the Remote for approximately five seconds to select the Region

Scott DVD-838

Ensure the player has no disc in the tray

Press Setup

Press Mute

Press Last

Press Next

SEG DVD-2000

Setup / Slow / Skip Left / Skip Right

This allows you to change the Region Code of the machine, "" is Region Free.*

SEG Beverly Hills,

SEG DVD 2211,

SEG Las Vegas,

SEG Los Angeles

Press "Menu" "7" "4" "2" "0" after this you'll see the player hardware and software set-up in this Menu you have to press "9" "0" after this your player is region free.

Sharp DV-550

To access the hidden menu on this player follow these steps:

Press STOP

Press SETUP

Press STILL/STEP

Press 1, 2, 3 you'll find a "LOOPHOLES" menu (the software politely reminds you that "YOU SHOULDN'T BE HERE"). There is a Region menu and Macrovision menu plus others (CSS, AUTOMUTE, AUDIODITHER)

Use this menu with care as you could screw up your machine! My advice would be to make sure you know the hard reset functions for the unit.

Sharp DV-654Z

When the player shows the map screen and says "cannot play on modified region 1 players".

When this screen appears, you must press the "menu" button several times, and the movie starts.

Sherwood DVD-V756

Turn on the player

Ensure that the display shows "No Disc"

Press STOP on the players front panel

Press FORWARD SKIP on the players front panel

Press BACKWARD SKIP on the players front panel

Press PLAY on the players front panel

Now on the Remote Control Press "0"

Open the players tray, Insert the DVD you wish to play

*Close the draw, You should get a message appear on the TV screen
To complete the process, press OPEN/CLOSE*

Shinco DVD-180

*Press the Open button on your remote control to open the tray.
Press the 7 button on your remote control.
Press the Enter button on your remote control.
Press the 7 button again on your remote control.
You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free by entering 13 as the country code.*

Shinco DVD 360

*Press Eject, Remove CD, Close then Press Pause, 1, 2, 3
Or Load the disc. A map will show on the screen. Press the stop button twice. Wait until the "press play to continue" sign disappeared. Press the play mode once. Wait for 5 seconds and a "program" sign will appear. Then press play mod twice. A "continue" sign will appear. Finally press the Play key once and it will works.*

Shinco DVD-380

*With a DVD in the drive but not playing
Press Stop
Press Setup
Press Pause
Press 1
Press 2
Press 3
A menu will popup allowing you to manually select many settings.*

Shinco DVD-8320

*Press the Open button on your remote control to open the tray.
Press the 7 button on your remote control.
Press the Enter button on your remote control.
Press the 7 button again on your remote control.
You will now enter the hidden setup page, and can change the player to any Region or set it to Region Free by entering 13 as the country code.*

Shinco DVD 960, Shinco DVD 868

Press Stop on the remote. Press Setup. Press Still/Step. Enter 123 on the remote. A service menu will now appear enabling you to change the region using the country code 13.

Singer SGD-001

Ensure the players tray is closed and has no disc in it
From the Remote Control
Press 7
Press 7
Press Select or Enter

Singer SGD-006P

Open Drawer
Press 8, 4, 2, 1 to bring up the hidden Region menu
Press the Select button until Region 9 is selected (Region 9 being Region free)
Close Drawer

Skyworth DVD-650

To change region code, or make the machine multi-region follow these steps:
Open the drive tray
Key in using the Remote 8926# (where # = Region number i.e. 1, 2, 4 etc. 0 = multi region and no Macrovision)

Smart DVD-2000

Press the buttons 7, 7 and SELECT on the Remote control
You Should now be in the SECRET MENU
Change the Country Code to 13 for Multi-Region, which is auto switching even on Hard Coded DVD discs To disable Macrovision change the 0 to a 1

SMC 330S & 530

To change this players Region or make it multi-region follow the below steps:
Open the tray.
Press 7,7, Select on the Remote Control.
A service menu will now appear. Scroll down to "Country Code" and press Select on the Remote Control.
Change the setting to the desired Region or 13 for multi-region use.
Press Select.
Press Return to exit the menu.

SM Supervision 1000

To access the players hidden menu that allows Region code modification follow these steps:
Press "Setup" on the Remote Control
Press "Step"
Press "Prev"

Press "Next"

SM Supervision 1100

Ensure the players tray is empty and closed

On the Remote control:

Press SETUP

On the players Front Panel:

Press NEXT

Press STOP

Press PAUSE/STEP

Press PREV

Press NEXT

You should now see a new MENU. Go to Select Region and make your choice:

SM Supervision 2000

Open the players draw and ensure there is no disc in it

Key in "7" on the Remote Control

Then again key in "7"

The press "Enter"

This should bring up the players hidden menu

SM Supervision 2100

Ensure the players tray is empty and closed

On the Remote control:

Press SETUP

On the players Front Panel:

Press NEXT

Press STOP

Press PAUSE/STEP

Press PREV

Press NEXT

You should now see a new MENU. Go to Select Region and make your choice:

Sony DAV-S300

Put your player into „Standby“ Mode and enter one of the following commands if necessary, : Remote control command Function : [0] [RETURN] Default Default region code on the player : [1] [RETURN] Region 1 : [2] [RETURN] Region 2 : [3] [RETURN] Region 3 : [4] [RETURN] Region 4 : [5] [RETURN] Region 5 : [6] [RETURN] Region 6 : [P. MODE] [RETURN] Only play DVD's with the selected region; auto switching OFF : [AUDIO] [RETURN] Default Auto switching ON : [ANGLE] [RETURN] Enable video interference impulses (Macrovision ON) : [SUBTITLE] [RETURN] Default Disable video interference impulses (Macrovision OFF) : [PREV] [RETURN]

Enable user operation prohibitions and access restrictions : [NEXT] [RETURN] Default Disable user operation prohibitions* and access restrictions.*

Sony DVP-S330

Multi-Region:

Turn On the unit with the remote controller

Wait until "no disc" appears in the unit's display

Press Pause, 3, 1, 4, 1, 5, 9

The word "CODE" should appear in the display

Within five seconds, press the key that corresponds to the zone you want i.e. 0 for region free, 1 for region 1, 2 for region 2 and so on

Again, within 5 seconds, press Pause and Power

If the above fails to work then you may wish to try the following:

Put the player into Standby mode

Press 1 and Return on remote for region 1, 2 and Return for region 2, and so on. Use 0 and Return to return player to default region settings

Press P-Mode and Return to play DVD's with the selected region, auto-switching is Off

Press Audio and Return for auto-switching On

Press Angle and Return for MacroVision On

Press Subtitle and Return for MacroVision Off

Sony DVP-S336

Put Machine on Standby then type in

1,2,3, Menu, Title & Enter

You can now watch dvd's from any region

Sony DVP-CX860

Put the unit in STANDBY mode and press the following buttons on the remote control

Press the TITLE button

Press the CLEAR button

Press the POWER button

Sony DVP-S535D

Put the unit in STANDBY mode and then press the following buttons on the remote control

Press the Title button

Press the Clear button

Press the Power button

Sony DVP-S336

*Put Machine on Standby then type in
1,2,3, Menu, Title & Enter
You can now watch dvd's from any region*

Sony DVD-CX850D

The Ultimate DVD Upgrade CX850D

Sony DVP-CX850D DVD MOD Kit Manual

Macrovision disable

All DVD players have a system called Macrovision built in to the player, which is designed to stop the copying of DVD discs to video. However, this system can have adverse affects on some projectors. For this reason the DVD MOD Upgrade disables Macrovision to solve any problems.

User manual

Put your player into „Standby“ Mode and enter one of the following commands if necessary:

Remote control command Function

[0] [ENTER] default Default region code on the player

[1] [ENTER] Region 1

[2] [ENTER] Region 2

[3] [ENTER] Region 3

[4] [ENTER] Region 4

[5] [ENTER] Region 5

[6] [ENTER] Region 6

[SHUFFLE] [ENTER] Only play DVDs with the selected region; autoswitching OFF

[PROGRAM] [ENTER] default Autoswitching ON

[AUDIO CHANGE] [ENTER] Enable video interference impulses (Macrovision ON)

[ANGLE CHANGE] [ENTER] default Disable video interference impulses (Macrovision OFF)

[PREV] [ENTER] Enable user operation prohibitions* and access restrictions

[NEXT] [ENTER] default Disable user operation prohibitions* and access restrictions

The selected region code is visible in the Service Menu. Put your player into the standby mode and enter, in serie:
[TITLE] [CLEAR] [POWERON] and [5]. Do not enter the other pages of the service menu.

* The DVD can no longer prohibit you from using the fast-forward, chapter change or Audio-/Subtitle-/Angleswitch.

Sony DVP-C660,
Sony DVP-C670D,
Sony DVP-CX860

Switch off, press 5,5,5, then menu, and then hold down 3 for 3 seconds.

Or While your system is turned OFF press: the TITLE button then, the CLEAR button then, the POWER button. Select the region

Sony DVP-CX860

Code 1

Open the drive tray. Enter 9,8,1,7 from your remote to access the system menu. Select region from 1 to 6 or set it to 9 for Multiregion. You can also disable Macrovision from this screen.

Code 2

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Put the unit in STANDBY mode and press the following buttons on the remote control
Press the TITLE button
Press the CLEAR button
Press the POWER button

Sony DVP-M35

Insert your disc then press DVD menu button, should take you to menu screen for the film, Then select program button on your remote then selected a few chapters from 2 - 20 say then press play, stop, play, stop until it plays the movie (sometimes works straight off others minutes, it may start playing at chapter 15 but once you have it playing just skip back to the beginning.

Sony DVP-NS300, Sony DVP-NS305,
Sony DVP-NS400D, Sony DVP-NS700,
Sony DVP-S330, Sony DVP-S335,
Sony DVP-S360, Sony DVP-S336,
Sony DVP-S525D, Sony DVP-S530D,
Sony DVP-S535D, Sony DVP-S536D,
Sony DVP-S725D, Sony DVP-S735D

Code 1

Turn on the unit with the remote controller, Wait until "no disc" appears in the unit's display. Press the keys: PAUSE, 3, 1, 4, 1, 5, 9. And "CODE" will appear in the display. Press the number key that corresponds to the disc zone you want to play within the next 5 seconds: 0: All regions / 1: Region#1 / 2: R#2/... and so on. Then, within 5 seconds, press: PAUSE, POWER... and voilà. If you don't have good results, disconnect the equipment and repeat.

Code 2

Put your player in standby mode and then enter: [[0] [ENTER] Default Default region code [1] [ENTER] or [UP] [ENTER] Region 1 [2] [ENTER] or [RIGHT] [ENTER] Region 2 [3] [ENTER] or [DOWN] [ENTER] Region 3 [4] [ENTER] or [LEFT] [ENTER] Region 4 [5] [ENTER] or [TITLE] [ENTER] Region 5 [6] [ENTER] or [DVMENU] [ENTER] Region 6 [7] [ENTER] or [RETURN] [ENTER] Region 7 [8] [ENTER] or [DISPLAY] [ENTER] Region 8

Code 3

Put player into standby modes by pressing power button on remote control. Then press Title button. Press Clear button. Press Power button.

Sony DVP-S725D

Hold clear, menu and number 4 then a menu will pop up asking you to type the region codes.

Sunny DVD-650

To make this player Region free follow these steps:

Open the tray

Enter 8, 9, 2, 6 then press the Region number that you want (9 for multi region)

Insert your DVD in drive and close the tray

Your player is multi region.

Sony Playstation 2

The Japanese Playstation 2 is only meant to play Region 2 NTSC movies on DVD. However, there are several tricks you can use to enable playback of Region 1 NTSC movies.

The Playstation 2 can NOT play any PAL movies, regardless of the region coding. Well, at least we have never heard of anyone who have had any success.

There are two versions of the DVD driver, and you must use a different trick depending on which one you have got.

If your Utilities disc have "Version 1.01" printed on it, you have the new driver. If you Utilities disc dont have a version number, you have the old driver. The actual driver is located on the 8M memory card that came with the playstation. If you want/need to, you can download the driver from the utility disc to the memory card.

Region hack for the old driver:

Method 1:

Hold down L1, Circle, and Select while booting until movie starts

Method 2:

Press in L3 (the left analog stick) straight and hard until movie starts

Region hack for the new driver:

1: Start the PS2, enter the Browser

2: Insert DVD, wait for the CD icon

3: Select the CD Icon

4: Press Square and keep it down

5: Press Circle and keep it down (Do not release Square, you should now be pressing two buttons)

6: *Wait for the DVD menu*

7: *Release the keys*

8: *Start the movie with the play icon or the movie start icon*

Sungale DVD2002

Power on.

Open disc tray.

Enter "2812" with remote.

Push "Select" on remote until the region code number changes to "9".

Close tray.

Power off.

Or

- 1) With remote control, power the DVD player on.*
- 2) With remote control, open the DVD tray.*
- 3) With remote control, select SETUP.*
- 4) With remote control, press the VOLUME UP button, then the VOLUME DOWN button, then the VOLUME UP button again and finally the VOLUME DOWN button again.*
- 5) You should now see a number 2 on your screen. If you do not, this hack will not work on your system or you have done something wrong. If you do see the number 2 on the screen, proceed to 6).*
- 6) Use the LEFT and/or RIGHT arrow to select the number 255.*
- 7) When you see the number 255, press the SELECT button.*
- 8) Press the SETUP button again to end procedure.*

T

Talent DVD-650

Power on the unit and open the DVD door by pressing the "Open" button on the front panel

Use Remote Control to enter the following numbers 3, 3, 0, 8, 8

*You will see in the top left of the screen "*****" appear*

Key in a number corresponding to the Region you desire your player to be set to, i.e. 1 for Region 1, 2 for Region 2 and so on, use 0 for Region free

If 3, 3, 0, 8, 8 fails try 8, 9, 2, 6

If 0 for Region free fails, try 9

Tatung TDV-2000

To convert the player to all region mode:

Power the player on. Open disc drawer.

Type in 0391 on handset then press Enter.

Scroll to select country. Enter 9210 and press Enter. Press Setup.

Tatung TDV5100

Open the tray then, Press set-up, stop, rew skip, FF skip.

Teac DV-1000

Turn on player

Press open

Key in 2,1,6,8 with the remote

Current region should be displayed

Press Enter Key to change region

Teac DV-2150

Open the tray

Press "2168" on the remote

Press the ENTER button until it reads "Region 9" form multi-zone.

Power OFF.

<http://www.videohelp.com/dvdhacks.php?dvdplayer=Teac+dv-2150&hits=50&Search=Search>

Teac DV-2170

Turn on DVD player

Remove any discs

Push setup on the remote

Type 1369 on the remote keypad

A box with "REGION X" will appear where X is the region number

Change the region number to 0 and voila!!

Be sure to exit the menu and turn off the dvd player

Teac DV-2180

Empty the Disc Drawer

Press "Setup" on the remote

Press 1, 3, 6, 9, Left, Left, Left, Right (keypad)

"Version" will appear on the Menu, scroll down to this.

Once in "Version" go to "Region" and go across to the number and change to "0" to Multi Region.

Use the keypad to change the zones.

Then exit Version

Then exit Setup

Teac DV-2200

*Turn player on without a disc in the tray
Open the tray. Enter 2168 using remote control
Enter region code 9 (region free).*

Teac DV-3500

*Open tray
Press Setup
Type in numbers 93010
Press Step
Press Shuffle
Press Next
Close tray
Power off
Power on.*

Teac DV-C200

*Open the dvd tray
Press the +volume button quickly followed by the language button on the remote
Immediately type 2379222, "maintenance mode" and region code number appears
Immediately use the up and down arrows to select region code and press ENT(er) to select region code
Choose "0" for multi region.*

Teac PL-D1000

*Open the disc tray
Press 3838 on the remote control
A menu will appear
Choose region and macrovision on or off
Close the tray.*

Teac PL-D1200

*Open disk drawer
Enter "81328"
Press enter to select region (specific region or 9 for multizone)
Close disk drawer.*

Teac PL-D2000

*Press open on your remote, Press and hold return
Press display and release both buttons
A message will be displayed, Press enter
Put your dvd in and close. Note: You will need to do this each time you want to use your player for another region code.*

Technica DVD-222 & 251

*Start without a DVD in
Push "SETUP" on the remote
Push "STOP"
Push "STEP BACK"
Push "STEP FWD"
You now enter a new menu, "REGION ID"
Select "BYPASS"
Push "PLAY" to save.*

Technica DVD-351

*Press Setup on the front panel
Press Stop on the front panel
Press Prev on the front panel
Press Next on the front panel
A new option "Version" under setup should appear
Choose Region 1-6 or 0 to bypass.*

Technica DVD-451

*Using the remote control, key in the following: Open, Setup
Highlight the Custom menu with the remote control
Using the remote control, key in the following: 3, 3, 3, 3
A hidden menu should appear
Change the region to the number required or use 0 for region free
Press Enter on the remote control to open the drive tray
Press Setup on the remote control.*

Technika DVD-203

*Power on with no disc inserted
On the remote press: Setup
Left x2 (You should now be on the preferences page)
Up (Version should be highlighted)
Now type in 49540
Use the up and down key to change regions. Region 0 is multi-region.
Press setup to confirm and return to main screen.*

Technika DP-300

*Using the remote control
Power On DVD
Press Open/Close
Press setup
Move menu across to Custom Setup
Enter 3333 on the key pad*

A secret Menu1 appears

Select your region of "Free" for multi region playback.

Technika DP-301

Press power on dvd

Press setup

Press "right" button three times until you get to the set tv standard page

Press "up" button once, (version should be highlighted)

Press 49540 (this will bring up the region code)

Press up or down to select the desired region (0 is region free)

Press setup

Press power off, then back on again.

Technika DVD-108

Press the Open button on the front of the player to open the drive tray

Press the Setup button on your remote control

Using the Left button on your remote control, change the display to the Preference Page

Press the Down button on your remote control to highlight the Set TV Standard option

Using your remote control, press the buttons 4, 9, 5, 4 and 0, in order, one at a time

NB: You may need to perform this step quicker if this doesn't work as expected

The onscreen display will display the currently selected region

Using the Up and Down buttons on your remote control, change the region to 1 for region 1, 2 for region 2, and so on, or 0 for multi-region playback

Press the Setup button on your remote control

Power off your player

Power on your player

Technika DVD-1020

On remote press open

Press setup

Press 49540

You now have a version menu

Go to this and you can turn on / off everything

Region code 0 for multi region.

Technika DVD-512

Press the Setup button on your remote control

Press the Stop button on the front panel of your unit

Press the Previous button on the front panel of your unit

Press the Next button on the front panel of your unit

You should now be in a secret menu where you can change the region from 1 to 6, or Bypass for region free. You can also disable Macrovision from this menu.

Technika SVD-1165

Press Setup on the remote control

Press Stop on the front panel of the player

Press Previous on the front panel of the player

Press Next on the front panel of the player

You should now be in a secret menu where you can change the Region from 1 to 6

Or Bypass for region free.

Terapin TT-2600

1. Be sure NO DISC is in UNIT
2. Press set up
3. Use right arrow to move to "Preferences" icon on top.
4. PRESS 1 6 0 7 on keypad
5. A new screen is displayed with different set of numbers.
6. Press LEFT ARROW 3 times
7. Press RIGHT ARROW 1 time.
8. Press down arrow 2 times - you will not see the cursor move or the number "1" change to zero.
9. Press setup to exit.
10. Repeat steps 1 through 4 and you will notice the number in the green box at the bottom has changed from '1' to '0'.
11. Your player is now region free.

Terratec DVD Homearena 5.1

Press the Open/Close button on the remote control to open the player's tray

Using the remote control, key in the following: Setup, Fast Back, Fast Fwd, Fast Back, Fast Fwd, Fast Back. The word "VER:" followed by the region number should appear on screen

Using the arrow keys on the remote control, change the code to the desired region, or to VER:255 for region free. Press Open/Close on the remote control to close the tray.

Tevion DVD-2002

Press 1

Press 6

Press 7

Choose 1 for region 1, 2 for region 2 or 0 for region free.

Tevion DVD-3000 & 2003

Turn on the player

Press "MENU"

Press "CURSOR DOWN"

Press "0"

Press "MUTE"

Press "PREVIOUS CHAPTER"
Press "NEXT CHAPTER"
Press "MENU"
Turn the player off and on again.

Tevion DVD-200 & 2001

Converting this player to all region:
Press the Menu button on the Remote
Press the 1 button
Press the 6 button
Press the 7 button
Press the Mute button

Thomson 21CT17E

Tray out
Press "TV/DVD" button to select to the DVD mode
Press Vol+ & TV/DVD in the same time
Hold the keys 6 seconds up until power LED is blinking once
Try to play another DVD region
If it can't play repeat step all steps until All Zone enabled.

Thomson 24WT25UG & 28WT25ES

Open the disc tray
Insert any dvd but do not close
On the front panel, press and hold the eject, forward search & ok button's all at the same time exactly, and don't let go (this can take a bit of practice and several attempts may be needed to get it correct). The on screen display will refresh 2 times and the disc draw should close, if it doesn't, close manually. Release the eject, forward search and ok buttons.

Thomson DPL-909VD

No disc in the tray
Press and hold select button
On screen display you see region select
Select from 0 to 6.

Thomson DTH-195E & 231

Turn on the player without a disc inside
Wait for the menu

Using the remote enter the following code: 1, 6, 7, 1, 9
Choose region (0 for all regions)
Turn the player off.

Thomson DTH-210

Turn on DVD player with no disc in tray
With the remote control press the "angle" button
With the remote control press "167" and wait 3 seconds
With the remote control press the "0" button
Turn off the DVD player and wait 5 seconds. Turn on DVD player after the 5 seconds.

Thomson DTH-220

Power on your player (without disc). Wait for the menu. Using your remote control enter the code 1,6,7 and choose 1-6 (or just simply 0 for multi-region).

Thomson DTH-3300

Always perform a Cold Start before applying the hack below:
Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Thomson DTH-3600

Always perform a Cold Start before applying the hack below:
Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Thomson DTH-3700

Always perform a Cold Start before applying the hack below:
Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Thomson DTH-4000

Always perform a Cold Start before applying the hack below:
Power on your player whilst pressing hold both the Play and Stop buttons on the front player
After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Thomson DTH-4200

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Thomson DTH-4500

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player. You will now need to select a language option between 1 and 6

Thomson DTH-5000

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6

Thomson 28WT25US TV\DVD Combination

Open the disc tray

Insert any DVD but do not close the disc tray

On the front panel, press and hold the Eject, Forward Search and OK buttons. Note that this may take several attempts to achieve correctly

The onscreen display will refresh twice and the disc tray will close

Release the Eject, Forward Search and OK buttons on the front panel

To revert this player back to its original region, repeat the above

Thomson DTH-3300, Thomson DTH-3600,
Thomson DTH-4000, Thomson DTH-4200,
Thomson DTH-4500, Thomson DTH-5000,
Thomson DTH-5200

Code 1

Press the Repeat button on your remote control. Using your remote control enter the code below, note that you must know what Region your player is currently set to in order to know which code is

Www.fantasticproducts4u.co.uk

appropriate for Region 1 use 2, 9, 3, 3 and 4 for Region 2 use 3, 8, 7, 6 and 7 for Region 3 use 5, 6, 7, 3 and 2 for Region 4 use 7, 6, 8, 8 and 4 for Region 5 use 5, 3, 8, 1 and 4 for Region 6 use 2, 4, 4, 6 and 2 A code should be displayed on the screen indicating the current Region setting of your unit.

Press the 9 button on your remote control for Region free, or 1 – 6. Press the Open button on your player. Press the Standby button on your remote control if the player sticks on FBI Warning screens. Press Forward Search x2 or faster, the disc should skip straight to the main feature Or Without disc in the player. On your rc Press: "Repeat", 3 8 7 6 7 : 9, "Open" on your player. Press: "St by"

Code 2

Always perform a Cold Start before applying the hack below:

Power on your player whilst pressing hold both the Play and Stop buttons on the front player

After a short while you should be presented with a set of language options. Release the Play and Stop buttons on the player

You will now need to select a language option between 1 and 6.

Thomson DTH-460

Press menu button

Enter 1,6,7

Wait 2 seconds

A screen appears: 1-6 for region

Press 0 (region free)

Now the dvd player shows ALL. Then press ok.

Thomson DTH-500

No disc in the tray, close the tray

Logo Thomson appears

Press REPEAT on the remote control

Enter: 38767

02 appears on screen

Press 9 – then 9 appears

Press Open on the DVD player

Press Standby on the remote.

Thomson DTH-5208AU

Make sure that there is no disc in DVD player and the tray is closed

Press MENU,1,6,7 on remote. Player will ask you to enter region number

Press 1-6 for specific region selection or MUTE for multi-region. Turn the player off.

Thomson DTH-5400

Open the tray, close the tray with no disc inside

Press the button next to PROG/RANDOM (same as REPEAT button)

You see nothing on the Screen

Press "38767" on the remote

"02" will appear on the screen

*Press "9" on the remote
"9" will appear on the screen (9 is region free)
Press "open/close" on the DVD player
Press "Standby" on the remote.*

Thomson DTH-7000E

*Open tray
Highlight Options in the Set-up menu
Then key in 8, 2, 1, 3, 9
Then 'OK'.*

Thomson DVD-430T

*No disc, close tray
Press MENU, 1, 6, 7 on remote
Player will ask you to enter region number
Press 1-6 for specific region selection or MUTE for multi-region
Turn the player off.*

Tokai DVD-713

*Changing region on this machine:
Switch it on
Press Setup
Press Slow
Press Skip left
Press Skip right
Use the Right Arrow button to select the desired region:
A = Region 1, B = Region 2, C = Region 3, D = Region 4, E = Region 5, F = Region 6*

Tokai 205N, Tokai 823

You open the drawer of the DVD reader using the button on the front panel (do not use the remote control !). Then input the following code with the remote control : 33080 or 89260. You should see XXXX or 0 on the screen meaning you succeeded.

Tokai 3500AT

*Tray open
Press "3838" on the remote control
A menu will appear. Select your region code.*

Tokai 823

Press setup

Press 3 8 8 8 3

Select Bypass for all regions.

Tokai DVD-715

Changing region on this machine:

Switch it on

Press Setup

Press Slow

Press Skip left

Press Skip right

Use the Right Arrow button to select the desired region:

A = Region 1, B = Region 2, C = Region 3, D = Region 4

E = Region 5, F = Region 6

Toshiba SD-43HT

- 1- TURN ON THE DVD PLAYER WITHOUT ANY DISC.
- 2- PRESS ENTER.
- 3- PRESS 8-4-2-6-9
- 4- PRESS ENTER
- 5- TURN OFF THE PLAYER
- 6- TURN ON AGAIN THE PLAYER AND THAT'S IT. YOU NOW CAN PLAY ZONE 4 DVD'S-

Change the 4 for 0 to play all region DVD.

Toshiba SD-100E & SD-2109

Load disc and close, wait for "region map" warning message to appear

Press "memory" on the remote

Highlight title "T_" and enter "01" by pressing "1"

Highlight chapter "C_" and enter "01" by pressing "1"

Press "play" and "clear".

Toshiba SD1200, Toshiba SD2109,

Toshiba SD1600, Toshiba SD1700,

Toshiba SD 1800, Toshiba SD210E,

Toshiba SD2150, Toshiba SD220E,

Toshiba SD2800, Toshiba SD3750,

Put DVD into player - wait for regional code violation screen to appear. Once this happens press the M (Memory) button on your remote control. Then press 1 for Title 1 and press play on the remote. This will over-ride the regional code violation detection menu and you can watch the movie etc by entering the fwd on the remote control and change chapters etc by using the T (Title/Chapter) button on the remote control.

For Toshiba SD1800

The same hack that works with many other Toshibas applies to this as well. Cut-and-pasted:

To see firmware information, turn the player on with the remote. Press Zoom, 6, 0, 6, Zoom. Information, albeit somewhat cryptic information, is displayed.

Zoom, 1, 0, 2, Zoom attempts to upgrade the firmware.

Toshiba SD2900-SD220E-SD2950

Let me describe what I've done:

1. Download the RAR file (linked provided by Faisal.

http://www.geocities.com/its_yahell/sd220e.rar

2. Unpack RAR file using for example Win-Rar.

<http://www.win-rar.com/index.php?lang=eng>

3. - Start Nero Burning ROM - You can use a Demo version

(<http://www.nero.com/en/index.html#root>)

- Click File (Recorder - version 6)

- Click Burn Image...

- Select the .CUE file

- Click open, disable 'Determine maximum speed' and 'Simulation', at write method select Disc-at-once (this is very important), click write. (by Jez Bown)

4.- Push setup on the SD-2950 remote control, select under picture: PAL/Auto (or NTSC/Auto): Auto. Push setup again.

- Open your SD-2950 disc tray and insert the CD.

- Close the disc tray.

- The disc will be read and recognised as a VCD, you'll see the image on your television flash and after a short while you will not see any image at all. Wait 10 seconds and take out the CD.

5. Your player is now region free. Tested it with a region 1 DVD and it works!

It is always important to say that you're doing it at your own risk and I'm in no way responsible for the consequences.

Tredex TX-8303

To make this machine Region free or change Region follow these steps:Open the tray

On the Remote Control, key in 2, 1, 8, 0

Then push the number of the region you want. For example 2, 1, 8, 0, 2 gives you Region 2. For Region free, key in 2, 1, 8, 0, 9

The first four digits will appear as asterisks on the screen. Each digit has its own asterisk. Once you reach the fifth digit, whatever that digit is will replace all the asterisks

Truvox DVD-600

Press the Open/Close button on your remote

Key in 8, 4, 2 and 1

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

*Press the Enter button on your remote to change the onscreen display until it indicates 1 for Region 1, 2 for Region 2, and so on, or All for multi-region playback
Press the Open/Close button.*

U

Umax DVD-2100

Make sure player is on with no disc in tray

Press Open/Close

Zoom

A-B

Up

Left

Down

Right.

Umax DVD-6400

Press Eject to open Disc tray

Enter code '7777'

Press select repeatedly until '9' appears on screen

Validate by pressing 'Play'

Your player should now be region free

United DVD 1151

Power "on". Press and hold "stop" and then "open/close"+"skip fwd" on the player (not the remote) for 3 sec. Hidden menu appears on TV: Mark "REGIONAL NUMBER" and press "select" on remote. Menu: "REGIONAL NO 1,2,3,4,5,6,FREE". Mark "FREE" and press "SELECT" on the remote.

United DVD 1155

*Open tray, enter 8926 (you'll see **** on the top left of the screen). Enter region code of your choice (1-9. 9 is all regions) (you'll see the number of the region selected on the top left of the screen). push play*

Or Hold Stop, Turn on, Press open/close and Skip(=>>) at the same time. Select region on the menu that appears.

United DVD 1951

Open the tray

Press 3308 on your remote,

Press 1,2,3,4 (the region you want).

United DVD 2151

Make sure you don't have any DVD inserted and Door Closed. With the remote control: press SETUP, NEXT, STOP, PAUSE/STEP, press PREV, press NEXT.

United DVD 3052

Open the player's tray

Enter 3308 on the remote control (you should see XXXX on the top left of the screen)

Enter the region code as follows (you should see the region number instead of XXXX)

1 for U.S. and Canada

2 for Europe, Japan, the Middle East, Egypt, South Africa, and Greenland

3 for Taiwan, Korea, the Philippines, Indonesia, and Hong Kong

4 for Australia, New Zealand, Pacific Islands, Mexico, South America, Central America, Caribbean

5 for Russia, Eastern Europe, India, most of Africa, North Korea, and Mongolia

6 for China

Finally press play on the DVD front pannel (not on the remote control).

United DVD 2255, United DVD 3151

*Open tray, enter 3308 (you'll see **** on the top left of the screen). Enter region code of your choice (0-6. 0 is all regions) (you'll see the number of the region selected on the top left of the screen). Push play*

United DVD 3054

Press EJECT

Type on remote: 7739 + region

For example 77390 for region free

You should see your selected region in the top left of the screen.

United DVD 3155

Player on

Open tray

Press 3308

Enter region code ('1' for region 1, '2' for region 2 or '0' for region free)

Press play.

United DVH 3161

Open tray

Key in 81328

Press enter until you get region 9 (Multiregion).

*The above will also work on:
Goodmans DVD3600PKT
Grundig GCV720HT
Universum DR1020
Palladium STS-25
Schneider SHC-201*

(Same as above – 3161)

United DVH 3160

Turn the machine on and open up the DVD tray. Using the remote control press 9817 or 3838, and the magic menu appears. Change the region to whatever you want or set it to 9, which is Multiregion - press the "ent" button until it matches your choice. You can also alter macrovision from this menu.

United DVX 4066M

*Turn on power
Press arrow up twice
Press arrow down twice
Press arrow right once
Press arrow left once
Press 0 (for region free)
Press Enter.*

V

Venturer STS32S

Turn machine on by power on button not from stand by. Open drawer, while drawer is open. Type in 9,8,1,7. Press ENT. Until you reach region 9, then press RETURN. Close drawer, Switch machine OFF then ON again.

Venturer PSI66W & PVS1760

*Open Tray
Press 81328
Press ENTER to scroll through regions select 9, as the remote has no enter key press MENU
Close the tray.*

Vieta DVD-Uno

Press, OPEN, SETUP, SHUFFLE, STEP, NEXT. Then select the right region

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Voxson DVD330

Turn the player on. Using the remote control, key in the following: Setup, Next, Stop, Pause, Prev, Next. You should now be in a hidden menu. Using the remote control, press Arrow button to the REGION ID. Press Arrow Up and Arrow Down to change region from VER1 to VER6 or select BYPASS for region free. Press Select, then Setup on the remote control. Insert the DVD into the player tray and then press Play.

Voxson T172

When "Set-up Menu" appears while pressing following buttons, the screen remains the same. Please do not place the disc inside the unit while doing the sequence for the region code. Press, "Setup", Press "1" for region 1, "2" for region 2 etc. or "7" for bypass all region codes. Press "PAUSE/STEP". Press |<< "Previous, Press |>> "Next", Press "Setup".

Vtrek DVD-9901B

Open the players tray
On the Remote Control enter the Code "2168 + Region Code(1-6)"
Close the DVD-Drive
Watch your Movie

W

Waitec Vision

Wait for LCD to show no disc
Press 7 to enter firmware menu
Press 0 to set region code protection to 0
Press clear to exit.

Waitec DVD X4

Power Off, Power "ON"
Press 2 x Arrow key "UP"
Press 2x Arrow key "DOWN"
Press 1x Arrow key "RIGHT"
Press 1x Arrow key "LEFT"
Press Number 0 to select Country Code to 0

Press “Enter” Button.

Waitec DVD X51s

Press Setup

Next

Prev

Next

Prev

Screen shows Ver 2

Press left arrow key till screen changes to Ver 255

Press Setup.

Wharfedale DVD-750

Open the DVD players tray.

Place a Region 1 disc in the tray, but don't close it.

Press the buttons 0, 1, 2 and then 3 on your remote control in order, one at a time.

Press the play button on either your remote or the player.

To change the player back to Region 2 only functionality:

Open the DVD players tray.

Place a Region 2 disc in the tray, but don't close it.

Press the buttons Return and then Play on your remote control in order, one at a time.

Wharfedale DVD-750S

Press the Open/Close button on your Remote Control

Press the Zoom button, Press the A-B button, Press the Up button

Press the Left button, Press the Down button, Press the Right button

The words Region Free should briefly appear on screen confirming that your player is now region free

Wharfedale M5

Press Setup to go into the setup menu

Type 62836

Press Enter

Select All

Press Enter

Now press Setup to exit from the menu

Wintel WIN-9663

Open the players tray and ensure that there is no disc in it

Press Setup

Then Step

Then Prev

*Then Next from the Remote Control
You should get a new menu titled, FACTORY SETUP
From there you can pre-select region (for RCE disks) and disable Macrovision*

X

XMS 750, 250, 950

*To change the player Region code follow the below steps:
Open the players draw
Key in using the Remote 8926 followed by the Region code your require, i.e. 1 for Region 1 etc.
Keying in 0 sets the player to Region free mode and reportedly disable Macrovision*

Xwave LB 900

*Power on the DVD without any CD inside. Press on your remote: set-up, step, ffwd, fbwd Now press:
pause, stop, key + or key -, With the key + or key- you can change it to Region 0. Now leave the
Region to 0 for a code free DVD.*

Xwave 9100

*Press the keys on your Remot in following order
Twice arrow up
Twice arrow down
Once arrow right
Once arrow left
Select 0 (zero) for multiregion
MV select "NO"
Enter*

Xwave LB 1000

*Power on the DVD without any CD inside. Press on your remote: set-up, step, ffwd, fbwd Now press:
pause, stop, key + or key -, With the key + or key- you can change it to Region 0. Now leave the
Region to 0 for a code free DVD.*

Xwave LB 1010

*Make sure no disk is in the player. Turn it on
When the main screen comes up, press SETUP to go into the main menu.
Select PREFERENCES. In rapid succession, press STEP, F.FWD, AND F.BWD. This should take you
right to the hidden menu. Highlight REG. CODE, it should read "0". Highlight it and press
ENTER/PLAY. The player should now be region-free.*

Y

Yamaha DVD S1500

1/ Power ON
2/ Press PLAY
3/ 2 7 4
4/ 222222005255
5/ Play
(Watch for display on screen)

Yamada DVD-2500

Switch on the DVD player and press the eject button
Using the remote control, press the "setup" button to display the setup menu
Press the right arrow key four times to highlight the preference page
Enter on the remote control "1379"--this will display the current region code setting (default is region 2). Press the up and down arrows to choose your region setting. When set to region 0 your machine will play most titles. Press setup again to save and exit the menu.

Yamada DVX-5500

Power on
Open the disc shuttle
Press "up" on the remote control 2 times
Press "down" on the remote control 2 times
Press "right" on the remote control 1 time
Press "left" on the remote control 1 time
Press "0" on the remote control 1 time (0 = region free)
Press "enter" on the remote control.

Yamaha DV S5650

Open Disc Drawer
Press 99990. Close Disc Drawer.

Yamaha DVD S510, Yamaha DVD S520

You'll need a One-for-All 6 remote with the code 0539. Power on the unit and then key in 085. The player's display should then show a series of dashes. Press 222 222 005 255 and then 'play'

Yamakawa 285VGA

Power on

Press "SETUP"
Goto "PREFERENCE SETUP"
Press "1379"
Current region code will be displayed
Press "UP" or "DOWN" keys to select region code
Press "PLAY" to confirm
Press "SETUP" again.

Yamakawa 215, Yamakawa 255

In SETUP enter: "13698888"
Then the field called "VERSION" will appear
Move Cursor on VERSION and open with PLAY button
Use Cursor/Play button to go to Region Code and enter desired region
Then go back to SETUP to save.

Yamakawa 218, Yamakawa 713, Yamakawa 715, Yamakawa 780, Yamakawa 820, Yamakawa 860

Code 1
Turn on player and wait for "no disk".
Use remote and push the following buttons, set up, mute, stop, zoom.

Code 2
Switch it on
Press Setup
Press Slow
Press Skip left
Press Skip right
Use the Right Arrow button to select the desired region:

Yamakawa DVD-780, 820, 860

Set Region:
SETUP, LOW, SKIP-RIGHT
Region Free:
Setup, Slow, Skip-links, Pause

Yamakawa 713

Switch it on
Press Setup
Press Slow
Press Skip left
Press Skip right
Use the Right Arrow button to select the desired region.

Yamakawa 715

*Switch it on
Press Setup
Press Slow
Press Skip left
Press Skip right
Use the Right Arrow button to select the desired region:*

Yamakawa DVD-780

*Set Region:
SETUP, LOW, SKIP-RIGHT
Region Free: Setup, Slow, Skip-links, Pause*

Yamakawa DVD-820

*Set Region:
SETUP, LOW, SKIP-RIGHT
Region Free:
Setup, Slow, Skip-links, Pause*

Yamakawa DVD-860

*Set Region:
SETUP, LOW, SKIP-RIGHT
Region Free:
Setup, Slow, Skip-links, Pause*

Yello DVD-800

*Turn the player on
Press Eject. Then Setup
Then Mute. Then Last
Then Next*

Yukai V520

*Ensure the players tray is empty and closed
On the Remote control:
Press SETUP
On the players Front Panel:
Press NEXT
Press STOP
Press PAUSE/STEP
Press PREV
Press NEXT
You should now see a new MENU. Go to Select*

Yukai V300

Ensure the players tray is empty and closed

On the Remote control:

Press SETUP

On the players Front Panel:

Press NEXT

Press STOP

Press PAUSE/STEP

Press PREV

Press NEXT. You should now see a new MENU. Go to Select Region

Yukai DVD-520

Power up DVD without a disk

Press setup on the remote

On the player press next,prev,next,prev. Region code should be displayed on top right corner of screen. Use the keys on the remote to:

Use left/right arrow keys to change region code to 255.

Press down arrow. 3001 should be displayed. Use left/right arrow to change to 3000.

Press down arrow. 4001 should be displayed. Use left/right arrow to change to 4000.

Yukai DVD-V560

Power up DVD without a disk. Press set-up on the remote. On the player press next,prev,next,prev. Region code should be displayed on top right corner of screen. Use the keys on the remote to: Use left/right arrow keys to change region code to 255. Press down arrow. 3001 should be displayed. Use left/right arrow to change to 3000. Press down arrow. 4001 should be displayed. Use left/right arrow to change to 4000.

Z

Zenith DVB-312

OK, finally i made it !!!

While reading some other hacks for Zenith DVD players here (just search for Zenith) I come alonge the following link:

<http://www.area450.co.uk/images/LG5000.zip>

unzip the file and burn the new directory on a CD (even a CD-RW is ok) and put it into your DVB312...

This is originally for an LG5000 player but works on other Zenith players as well - so on mine!

It's so easy and works permanent :-)

...and the VCD hack published in this thread works well also:

My original code : 55 53 00 45 14 55 64 00

I changed to : 55 53 00 47 14 55 64 00

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Good luck guys!

<http://www.videohelp.com/dvdhacks.php?select=Zenith+DVB312>

Zenith DVB 412

VCD and SVCD playback enable for the DVB-412

Basically the same hack used for the DVB-312 works, with a few notes.

1. Power up unit with no disk in the tray
2. After "no disc" shows on the front display, press PAUSE on the remote
3. Press in order: 1, 4, 7, 2 on the remote (short keypresses). A new screen will show up, EEPROM settings with a green background
4. Write down the EEPROM string for backup/restore purposes in case you screw up. My string was 55 53 00 45 02 55 64 FF (compare with the default string of the 312, which is 55 53 00 45 14 55 64 FF).
5. To enable VCD playback, move the cursor to the "45" (4th group of characters from the left; use the remote up/down arrows to move right/left) and enter "46" or "47" instead, then press ENTER to commit
6. To enable SVCD playback, move the cursor to the "64" field (second from the right) and enter "FE" instead. To enter "F" press "6" on the remote and keep pressed. To enter "E" press "5" on the remote and keep pressed. After you're finished entering "FE" press ENTER on the remote to commit
7. Press PAUSE on the remote to exit the EEPROM screen
8. Power off, then power on again the player
9. It now plays SVCDs and/or VCDs depending on the codes you entered.

The final EEPROM strings with both VCD and SVCD enabled are:

55 53 00 46 02 55 FE FF and

55 53 00 47 02 55 FE FF

(either works)

NB the replacement of 64 by FE was in the past wrongly labeled as Macrovision hack. That's not true. What it really does is enable SVCD playback. If you only do the #5 above, you'll only get VCD playback. If you only do the #6 above, you'll only get SVCD playback. If you do both, you'll get VCD and SVCD playback.

(SVCD playback was especially important to me because I have several hundreds of them - mostly TV shows recorded on my TiVo, then exported to the PC and converted to SVCD)

The other hack for the DVB-312 also works on the 412 (see the configuration screen):

1. press SETUP on the remote
2. Go to "TV Aspect" and move the cursor to "16:9"
3. Press in order: 1, 3, 9, 7, 1, 3, 9 on the remote, then press ENTER

The info showing on that screen for the DVB-412 is:

Model: Zenith ZV8020001

Region: 1

Chip ID: M3355A-B

Servo ver: S101_43180

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

Microcom ver: V1.50A MP
PROM: 55 53 00 45 02 55 64 FF
Factory reset... done...
(the PROM I listed above is before the VCD/SVCD hack)

Zenith DVC-2200

*Multi Region Hack. Power on the player with no disk in the drive
Press PAUSE on the Remote. Enter 3, 1, 4, 1, 5, 9 on the Remote (the word COdE appears on the display). Enter 0 on the Remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.). Press PAUSE on the Remote. Power the player off and then back on.*

Zenith DVC-2201

Multi Region Hack. Power on the player with no disk in the drive. Press PAUSE on the Remote. Enter 3, 1, 4, 1, 5, 9 on the Remote (the word COdE appears on the display). Enter 0 on the Remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.). Press PAUSE on the Remote. Power the player off and then back on

Zenith DVD-2381

*Press the Pause button on your Remote Control. Using your Remote Control enter the code 3, 1, 4, 1, 5 and 9. Press the 0 button on your Remote for Region free, 1 for Region 1 or 2 for Region 2
Press the Pause button on your remote control. Power off your player and wait a few seconds
Power on your player.*

Zenith DVC2200, Zenith DVC2550,
Zenith DVD2201, Zenith DVD2381,
Zenith DVD5201, Zenith IQDVC2350

Code 1

*Power on the player with no disk in the drive. Press "PAUSE" on the remote. Enter "3 1 4 1 5 9" on the remote (the word COdE appears on the display). Enter "0" on the remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.) . Press "PAUSE" on the remote. Power the player off and then back on
To play any region disc in these players shown below simply follow these instructions. Open the tray, place an R1 disc on it but don't close it. On the remote press 0, 1, 2, 3, PLAY The tray should then close, if not close it, and the player is now completely region free*

Code 2

Multi Region Hack. Power on the player with no disk in the drive. Press PAUSE on the Remote. Enter 3, 1, 4, 1, 5, 9 on the Remote (the word COdE appears on the display). Enter 0 on the Remote (0 = All Regions, 1 = Region 1, 2 = Region 2, etc.). Press PAUSE on the Remote. Power the player off and then back on.

Zenith XBV342

1. power the player
2. press "PAUSE"
3. enter "314159"
4. press "0" (0=all regions, 1=region 1, 2=region 2, etc)
5. press "pause"
6. turn reciever off and then on again.

Zenith XBV343

- Insert non-native-Region DVD
- Wait until the "Check Region Code" box appears
- Press "display" on the remote
- Yellow box appears on screen with "1/#" designation for track
- Press any two # keys in succession - timing is not very important (ex: 2-2)
- Press "Play" on remote

Zenith XBV443

down load from this link and burn cd
it will work on zenith xbv443 i did it on 6-13-04.

<http://www.area450.co.uk/images/LG5000.zip>

CD burning

(extract zip file and burn

- 1) File System must be "ISO9660" which is standard
- 2) Folder Structure : RMTM0000SCARLETKpjc19_1.dvd
=> already in this structure

How to run in DVD player

- 1) Insert CD and blue screen should come up
Code "#"
- 2) "0" for code free
Enter "0" and wait 1 minute, press pause, wait one minute
- 3) Take out CD and Power off/on

<http://www.area450.co.uk/images/LG5000.zip>

or

I tried scotty's hack using the LG 5000 series CD image on my Zenith XBV443 and it did not work. However, he is correct that the Zenith DVD players are really rebranded LG models.

I found a website (<http://lgregionfree.tripod.com/>) that has a different CD image for LG 6000 series players. I tried that and it works, my player is now set to region 0 and has played region 1, 2 and 4 discs.

Here is the process:

- 1) Download <http://lgregionfree.tripod.com/6000.zip>
- 2) Extract the ZIP file, which contains a Readme file and a directory named RMTM0000

[Www.fantasticproducts4u.co.uk](http://www.fantasticproducts4u.co.uk)

3) Using a CD burning program, burn the RMTM0000 directory to a CDR, making sure to use the ISO9660 file system instead of the default Joliet. Finalize the disc.

3) Turn on the player and insert the disc. The Region Test Menu screen should appear.

4) On the remote, press your desired region (or 0 for regionfree), then press Pause.

5) Eject the CDR and turn the player off.

6) Turn the player back on and enjoy.

NOTES:

a) I did not need to wait a minute between region selection and pause.

b) On some players this hack causes the buttons on the player itself (not the remote) to stop working. I can confirm that on the XBV443 the player buttons continue to work.